


Shore Ride

UPGRADE

Follow the instructions below for connecting clips on the bottom and front section. **See the second sheet below** for connecting the front and bottom section together.

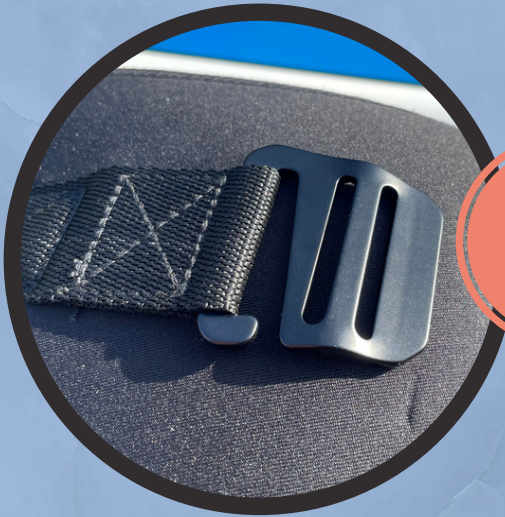

1

The G-Clip - instructions for the front and bottom sections.

Make sure the webbing is straight and slide through the bottom hole.


2



3

Then slide back on itself and through the top hole. Pull both sides of the webbing to make sure it's strong and doesn't slip.



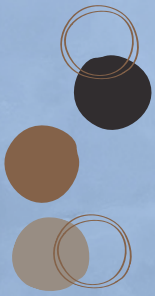

Shore Ride

UPGRADE

Connect front & bottom section together.



1

The G-Clip - The Shore Ride's padding should be facing upwards before threading the webbing.

Make sure the long webbing from the front section is straight and slide through the bottom hole.

2



3

Then slide the webbing back on itself and through the top hole.

Then pull the webbing through .

4

