
Wine Rack Assembly Instructions



STEP 1 - ASSEMBLING THE BOTTOM FRAME


- · Find a flat surface to begin the assembly process.
- · Start by assembling the bottom section.
- Align the first timber slat with the cross metal grid, starting from the center of the frame.
- Using a rubber mallet, firmly hammer the timber slat into place until it is fully secured.
- Ensure that the steel grid is aligned with the first flat surface of the rack to provide maximum stability.

(Instruction Video)



Insert one section of the metal frame **only halfway** down into the wood pieces. (Instruction Video)


F

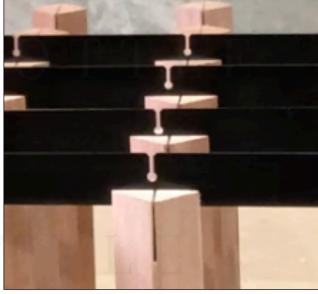

Insert the 2nd section of the metal frame into the 1st section, ensuring a secure fit into the wood pieces.

Use the rubber mallet to complete the installation of the metal frame into the wood pieces, ensuring it is tightly in place.

F

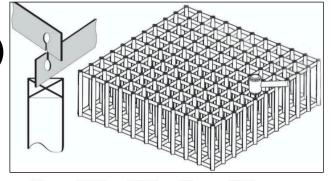



STEP 3 - NECK PROTECTOR

Snap the bottle neck protectors onto the front side of the metal frame.

This will provide added protection for the necks of your wine bottles and prevent them from accidentally slipping out.

G

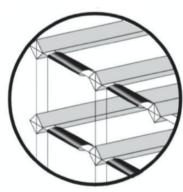

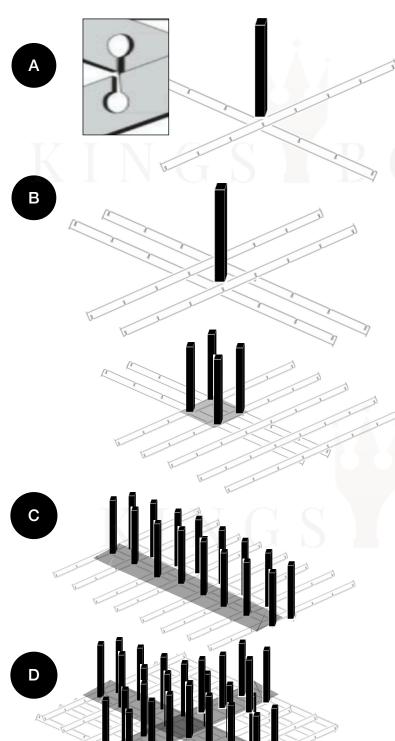

1x3 8 1x4 10 1x5 12 1x6 14 1x7 16 1x8 18 1x9 20 1x10 22 1x11 24 2x1 6 2x2 9 2x3 12 2x4 15 2x6 21 2x7 24 2x8 27 2x9 30 2x11 36 3x2 12 3x3 16 3x4 20 3x5 24 3x6 26 3x7 32 3x8 36 3x9 40 3x10 44 3x11 48 4x1 10 4x2 15 4x3 20 4x4 25 4x5 30 4x6 35 4x7 40 4x8 45 4x9 50 4x10 55	6 8 8 110 12 14 16 18 20 22 24 6 6 9 112 115 18 21 24 22 7 330 33 36 8 112 16 20 24 28 32 36 36	2 3 4 5 6 7 8 9 10 11 12 4 6 8 10 12 14 16 18 20 22 24 6 9 9 12	8 6 8 10 12 14 16 18 20 22 24 6	4 4 12 8 10 12 14 16 18 20 22	6	6	6	6	4	4	4	4	4	7x1 7x2 7x3 7x4 7x5 7x6 7x7 7x8 7x9 7x10 7x11	16 24 32 40 48 56 64 72 80 88	14 21 28 35 42 49 56 63 70	16	16	16	16	16	16	4 6 8 10 12 14 32 18 20	16	16	16	16
1x3 8 1x4 10 1x5 12 1x6 14 1x7 16 1x8 18 1x9 20 1x10 22 1x11 24 2x1 6 2x2 9 2x3 12 2x4 15 2x6 21 2x7 24 2x8 27 2x9 30 2x11 36 3x2 12 3x3 16 3x4 20 3x5 24 3x6 26 3x7 32 3x8 36 3x9 40 3x10 44 3x11 48 4x1 10 4x2 15 4x3 20 4x4 25 4x5 30 4x6 35 4x7 40 4x8 45 4x9 50 4x10 55	8 110 112 114 16 18 20 22 24 6 6 9 112 115 118 21 24 27 330 333 36 8 112 16 20 24 28 32 36 36	4 5 6 7 8 9 10 11 12 4 6 8 10 12 14 16 18 20 22 24 6 9 12 15 18	8 10 12 14 16 18 20 22 24 6	4 12 8 10 12 14 16 18 20 22					4	4	4	4	4	7x3 7x4 7x5 7x6 7x7 7x8 7x9	32 40 48 56 64 72 80	28 35 42 49 56 63 70		16	16	16	16	16	8 10 12 14 32 18 20	16	16	16	16
1x4 10 1x5 12 1x6 14 1x7 16 1x8 18 1x9 20 1x10 22 1x11 24 2x1 6 2x2 9 2x3 12 2x4 15 2x6 21 2x7 24 2x8 27 2x9 30 2x11 36 3x2 12 3x3 16 3x6 28 3x7 32 3x8 36 3x9 40 3x11 48 4x1 10 4x2 15 4x3 20 4x4 25 4x7 40 4x8 45 4x9 50	10 12 14 16 18 20 22 24 6 6 9 12 15 18 21 24 27 30 33 36 8 112 16 20 24 28 32 36 36	5 6 7 8 9 10 11 12 4 6 8 10 12 14 16 18 20 22 24 6 9 12 15 18	10 12 14 16 18 20 22 24 6	12 8 10 12 14 16 18 20 22					4	4	4	4	4	7x4 7x5 7x6 7x7 7x8 7x9 7x10	40 48 56 64 72 80	35 42 49 56 63 70			16	16	16	16	10 12 14 32 18 20	16	16	16	16
1x5 12 1x6 14 1x7 16 1x8 18 1x9 20 1x10 22 1x11 24 2x1 6 2x2 9 2x3 12 2x4 15 2x6 21 2x7 24 2x8 27 2x9 30 2x11 36 3x2 12 3x3 16 3x7 32 3x6 28 3x7 32 3x8 36 3x9 40 3x11 48 4x1 10 4x2 15 4x3 20 4x4 25 4x7 40 4x8 45 4x9 50 4x10 55	12 114 116 118 220 22 24 6 6 9 112 115 118 221 24 27 30 33 36 8 112 116 220 24 28 32 36 36	6 7 8 9 10 11 12 4 6 8 10 12 14 16 18 20 22 24 6 9 12 15 18	12 14 16 18 20 22 24 6	12 8 10 12 14 16 18 20 22	6				4	4	4	4	4	7x5 7x6 7x7 7x8 7x9 7x10	48 56 64 72 80	42 49 56 63 70				16	16	16	12 14 32 18 20	16	16	16	16
1x6 144 1x7 16 1x8 18 1x9 20 1x10 22 1x11 24 2x1 6 2x2 9 2x3 12 2x5 18 2x6 21 2x7 24 2x8 27 2x9 30 2x11 36 3x2 12 3x3 16 3x7 32 3x8 36 3x7 32 3x8 36 3x9 40 3x10 44 4x1 10 4x2 15 4x3 20 4x4 25 4x5 30 4x7 40 4x8 45 4x9 50 4x10 55	14 16 18 20 22 24 6 6 9 12 15 18 21 24 27 30 33 36 8 11 2 16 20 24 28 32 36 36	7 8 9 10 11 12 4 6 8 10 12 14 16 18 20 22 24 6 9 12	14 16 18 20 22 24 6	12 8 10 12 14 16 18 20 22	6	6			4	4	4	4	4	7x6 7x7 7x8 7x9 7x10	56 64 72 80	49 56 63 70						16	14 32 18 20	16	16	16	16
1x8 18 1x9 20 1x10 22 1x11 24 2x1 6 2x2 9 2x3 12 2x4 15 2x6 21 2x7 24 2x8 27 2x9 30 2x11 36 3x1 8 3x2 12 3x3 16 3x7 32 3x8 36 3x9 40 3x11 48 4x1 10 4x2 15 4x3 20 4x4 25 4x4 25 4x5 30 4x7 40 4x8 45 4x9 50 4x10 55	18 20 22 24 6 9 9 12 15 18 21 24 27 30 33 36 8 11 2 11 6 20 24 28 32 36 36	9 10 11 12 4 6 8 10 12 14 16 18 20 22 24 6 9 12	18 20 22 24 6	12 8 10 12 14 16 18 20 22	6	6	6	6	4	4	4	4	4	7x8 7x9 7x10	72 80	63 70							18 20	16	16	16	16
1x9 20 1x10 22 1x11 24 2x1 6 2x2 9 2x3 12 2x4 15 2x6 21 2x7 24 2x9 30 2x10 33 3x1 8 3x2 12 3x3 16 3x7 32 3x8 36 3x9 40 3x11 48 4x1 10 4x2 15 4x3 20 4x4 25 4x4 25 4x6 35 4x7 40 4x8 45 4x10 55	20 22 24 6 9 9 112 115 118 21 24 27 30 33 36 8 112 116 220 24 28 32 36 36	10 11 12 4 6 8 10 12 14 16 18 20 22 24 6 9 12 15 18	20 22 24 6	12 8 10 12 14 16 18 20 22	6	6	6	6		4	4	4	4	7x9 7x10	80	70							20	16	16	16	16
1x10 22 1x11 24 2x1 6 2x2 9 2x3 12 2x4 15 2x5 18 2x6 21 2x7 24 2x8 27 2x9 30 2x11 36 3x1 8 3x2 12 3x3 16 3x6 28 3x7 32 3x8 36 3x9 40 3x11 48 4x1 10 4x2 15 4x3 20 4x4 25 4x4 25 4x7 40 4x8 45 4x9 50 4x10 55	22 24 6 9 9 12 15 18 21 24 27 30 33 36 8 112 116 220 24 28 32 36 36	11 12 4 6 8 10 12 14 16 18 20 22 24 6 9 12 15 18	22 24 6	12 8 10 12 14 16 18 20 22	6	6	6	6			4	4	4	7x10											16	16	16
1x111 24 2x1 6 2x2 9 2x3 12 2x4 15 2x6 21 2x7 24 2x9 30 2x10 33 2x11 36 3x1 8 3x2 12 3x3 16 3x7 32 3x7 32 3x8 36 3x9 40 3x11 48 4x1 10 4x2 15 4x3 20 4x4 25 4x4 25 4x6 35 4x7 40 4x8 45 4x9 50 4x10 55	24 6 6 9 12 15 18 21 24 27 30 33 36 8 12 16 20 24 28 32 36 36 36	12 4 6 8 10 12 14 16 18 20 22 24 6 9 12 15	6	12 8 10 12 14 16 18 20 22	6	6	6	6				4	4		88	77							22			16	16
2x1 6 2x2 9 2x3 12 2x4 15 2x6 21 2x7 24 2x8 27 2x9 30 2x11 36 3x1 8 3x2 12 3x3 16 3x7 32 3x8 36 3x9 40 3x11 48 4x1 10 4x2 15 4x3 20 4x4 25 4x5 30 4x6 35 4x7 40 4x8 45 4x9 50 4x10 55	6 9 9 112 115 118 21 124 227 330 33 36 8 112 116 220 224 228 332 336	4 6 8 10 12 14 16 18 20 22 24 6 9 12 15	6	12 8 10 12 14 16 18 20 22	6	6	6	6					4	7x11		77											16
2x2 9 2x3 12 2x4 15 2x6 21 2x7 24 2x8 27 2x9 30 2x10 33 2x11 36 3x1 8 3x2 12 3x3 16 3x4 20 3x7 32 3x8 36 3x9 40 3x10 44 4x1 10 4x2 15 4x3 20 4x4 25 4x5 30 4x7 40 4x8 45 4x9 50 4x10 55	9 112 115 118 21 224 227 330 333 36 8 8 112 116 220 224 28 32 336 36	6 8 10 12 14 16 18 20 22 24 6 9 12 15 18		12 8 10 12 14 16 18 20 22	6	6	6	6						0.4	96	84	40						24				10
2x3 12 2x4 15 2x5 18 2x7 24 2x8 27 2x9 30 2x11 36 3x1 8 3x2 12 3x3 16 3x4 20 3x5 24 3x6 28 3x7 32 3x8 36 3x9 40 3x11 48 4x1 10 4x2 18 4x3 20 4x4 25 4x5 30 4x6 35 4x7 40 4x8 45 4x9 50 4x10 55	12 15 18 21 24 27 30 33 36 8 112 16 20 24 28 32 36	8 10 12 14 16 18 20 22 24 6 9 12 15 18	8	8 10 12 14 16 18 20 22	6	6	6	6						8x1 8x2	18 27	16 24	18	18						6			
2x4 15 2x5 18 2x6 21 2x7 24 2x8 27 2x9 30 2x10 33 2x11 36 3x1 8 3x2 12 3x3 16 3x4 20 3x6 28 3x7 32 3x8 36 3x9 40 3x10 44 4x1 10 4x2 15 4x3 20 4x4 25 4x5 30 4x7 40 4x8 45 4x9 50 4x10 55	18 21 24 27 30 33 33 36 8 112 116 20 24 28 32 36	10 12 14 16 18 20 22 24 6 9 12 15 18	8	12 14 16 18 20 22		6	6	6						8x3	36	32		.0	18					8			
2x6 21 2x7 24 2x8 27 2x9 30 2x10 33 2x11 36 3x1 8 3x2 12 3x3 16 3x4 20 3x6 28 3x7 32 3x8 36 3x9 40 3x10 44 4x1 10 4x2 15 4x3 20 4x4 25 4x7 40 4x8 45 4x9 50 4x10 55	21 24 27 30 33 36 8 12 16 20 24 28 32 36	14 16 18 20 22 24 6 9 12 15	8	14 16 18 20 22			6	6						8x4	45	40				18				10			
2x7 24x8 27x9 300 2x10 333 2x11 36x3 16x3 3x2 12x3 3x3 16x3 3x4 20x3 3x5 24x3 3x8 36x3 3x9 40x3 3x10 44x1 10x4 4x1 10x4 4x2 15x4 4x3 20x4 4x4 25x4 4x5 30x4 4x6 35x4 4x7 40x8 4x9 50x4 4x10 55x4 4x9 50x4 4x10 55x4 4x10 55x4	24 27 30 33 36 8 12 16 20 24 28 32 36	16 18 20 22 24 6 9 12 15	8	16 18 20 22				6						8x5	54	48					18			12			
2x8 27 2x9 30 2x11 36 3x1 8 3x2 12 3x3 16 3x4 20 3x5 24 3x6 26 3x7 32 3x8 36 3x9 40 3x10 44 4x1 10 4x2 15 4x3 20 4x4 25 4x7 40 4x8 45 4x9 50 4x10 55	27 30 33 36 8 12 16 20 24 28 32 36	18 20 22 24 6 9 12 15	8	18 20 22										8x6	63	56						18		14			
2x9 3C 2x110 33 2x111 36 3x1 8 3x2 12 3x3 16 3x4 2C 3x5 24 3x6 28 3x7 32 3x8 36 3x9 4C 3x10 44 4x1 1C 4x2 15 4x3 2C 4x4 25 4x4 25 4x7 4C 4x8 45 4x9 5C 4x10 55	30 33 36 8 12 16 20 24 28 32 36	20 22 24 6 9 12 15	8	20					6					8x7	72	64							18	16			
2x10 33 2x11 36 3x1 8 3x2 12 3x3 16 3x4 20 3x5 24 3x6 28 3x7 32 3x8 36 3x9 40 3x10 44 4x1 10 4x2 15 4x3 20 4x4 25 4x5 30 4x6 35 4x7 40 4x8 45 4x10 55	33 36 8 12 16 20 24 28 32 36	22 24 6 9 12 15	8	22						6				8x8	81	72								36	40		
2x11 36 3x1 8 3x2 12 3x3 16 3x4 20 3x5 24 3x6 28 3x7 32 3x8 36 3x9 40 3x10 44 4x1 10 4x2 15 4x3 20 4x4 25 4x5 30 4x6 35 4x7 40 4x8 45 4x10 55	36 8 12 16 20 24 28 32 36	24 6 9 12 15	8								6	6		8x9 8x10	90	88								20	18	18	
3x1 8 3x2 12 3x3 16 3x4 20 3x5 24 3x6 28 3x7 32 3x8 36 3x9 40 3x10 44 4x1 10 4x2 15 4x3 20 4x4 25 4x6 35 4x7 40 4x8 45 4x9 50 4x10 55	8 12 16 20 24 28 32 36	6 9 12 15 18	8	24								U	6	8x11	108	96								24		10	18
3x3 16 3x4 20 3x5 24 3x6 28 3x7 32 3x8 36 3x9 40 3x10 44 3x11 48 4x1 10 4x2 18 4x3 20 4x4 25 4x6 35 4x7 40 4x8 45 4x9 50 4x10 55	16 20 24 28 32 36	12 15 18			4									9x1	20	18	20								4		
3x4 20 3x5 24 3x6 28 3x7 32 3x8 36 3x9 40 3x10 44 3x11 48 4x1 10 4x2 18 4x3 20 4x4 25 4x5 30 4x6 35 4x7 40 4x8 45 4x9 50 4x10 55	20 24 28 32 36	15 18		8	6									9x2	30	27		20							6		
3x5 24 3x6 28 3x7 32 3x8 36 3x9 40 3x10 44 3x11 46 4x1 10 4x2 15 4x3 20 4x4 25 4x5 30 4x7 40 4x8 45 4x9 50 4x10 55	24 28 32 36	18			16									9x3	40	36			20						8		
3x6 28 3x7 32 3x8 36 3x9 40 3x10 44 3x11 48 4x1 10 4x2 15 4x3 20 4x4 25 4x5 30 4x6 35 4x7 40 4x8 45 4x9 50 4x10 55	28 32 36				10	8								9x4	50	45				20					10		
3x7 32 3x8 36 3x9 40 3x10 44 3x11 48 4x1 10 4x2 15 4x3 20 4x4 25 4x5 30 4x6 35 4x7 40 4x8 45 4x9 50 4x10 55	32 36				12		8							9x5	60	54					20				12		
3x8 36 3x9 40 3x10 44 3x11 48 4x1 10 4x2 15 4x3 20 4x4 25 4x5 30 4x6 35 4x7 40 4x8 45 4x9 50 4x10 55	36	21			14			8						9x6	70	63						20			14		
3x9 4C 3x10 444 3x11 48 4x1 1C 4x2 15 4x3 2C 4x4 25 4x5 3C 4x6 35 4x7 4C 4x8 45 4x9 5C 4x10 55		24			16 18				8	8				9x7 9x8	90	72 81							20	20	16		
3x10 444 3x11 488 4x1 10 4x2 15 4x3 20 4x4 25 4x5 30 4x6 35 4x7 40 4x8 45 4x9 50 4x10 55	40	30			20					0	8			9x9	100	90								20	40		
4x1 10 4x2 15 4x3 20 4x4 25 4x5 30 4x6 35 4x7 40 4x8 45 4x9 50 4x10 55	44	33			22							8		9x10	110	99									22	20	
4x2 15 4x3 20 4x4 25 4x5 30 4x6 35 4x7 40 4x8 45 4x9 50 4x10 55	48	36			24								8	9x11	120	108									24		20
4x3 20 4x4 25 4x5 30 4x6 35 4x7 40 4x8 45 4x9 50 4x10 55	10	8	10			4								10x1	22	20	22									4	
4x4 25 4x5 30 4x6 35 4x7 40 4x8 45 4x9 50 4x10 55	15	12		10		6				\sim				10x2	33	30		22								6	
4x5 3C 4x6 35 4x7 4C 4x8 45 4x9 5C 4x10 55	20	16			10	8		1						10x3	44	40			22	1						8	
4x6 35 4x7 40 4x8 45 4x9 50 4x10 55		20				20	10							10x4	55	50				22	22					10	
4x7 40 4x8 45 4x9 50 4x10 55		24				12	10	10						10x5 10x6	66 77	60 70					22	22				14	
4x9 50 4x10 55	40	32				16			10					10x7	88	80							22			16	
4x10 55	45	36				18				10				10x8	99	90								22		18	
	50	40				20					10			10x9	110	100									22	20	
4x11 en	55	44				22						10		10x10	121	110										44	
	60	48				24							10	10x11	132	120										24	22
	12	10	12	10			4							11x1	24	22	24	0.4									4
	18 24	15 20		12	12		8							11x2 11x3	36 48	33 44		24	24								6 8
	30	25				12	10							11x4	60	55				24							10
	36	30					24							11x5	72	66					24						12
5x6 42	42	35					14	12						11x6	84	77						24					14
5x7 48	48	40					16		12					11x7	96	88							24				16
	54	45					18			12				11x8	108	99								24			18
	60	50				Y	20				12	10		11x9	120	110					1				24	0.4	20
	66 72	55 60					22					12	12	11x10 11x11	132 144	121 132										24	22 48
	14	12	14					4						. (211		.52		PON	A of Ol-	ned M	ine Ra	nke.					+
	21	18		14				6							Timele	Neel		OUN	1 01 510	peu W	пе на	JNS					
6x3 28	28	24			14			8						SKU	Timber Slat	Neck Protector	MP01	MP02	MP03	MP04	MP05	MP06	MP07	MP08	MP09	MP10	MP11
	35	30				14		10						WRTS04	19	14	4	4	4	8							
	42	36					14	12						WRTS05	26	20	4	4	4	4	8						
	49	42						28						WRTS06	34	27	4	4	4	4	4	8					
	56	48 54						16 18	14	14				WRTS07 WRTS08	43 53	35 44	4	4	4	4	4	4	8	8			
	63	60						20		14	14			WRTS09	64	54	4	4	4	4	4	4	4	4	8		
	63 70	66						22			.,	14		WRTS10	76	65	4	4	4	4	4	4	4	4	4	8	
6x11 84	63 70 77	72						24					14	WRTS11	89	77	4	4	4	4	4	4	4	4	4	4	8

Sloped Wine Rack Assembly Instructions


1 STEP

Assemble the bottom metal frame on a flat surface.


STEP 2
Line up and i

Line up and insert the wood rack pieces into the metal frame. Use a rubber mallet to install into the metal cross frame.

Start from the corner (the longest metal piece)

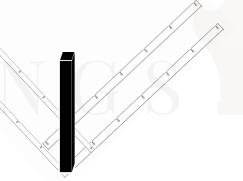


STEP 3
Insert one section of the metal frame only half way down into the wood pieces.

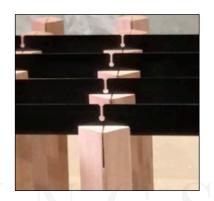

STEP 4

Insert the 2nd section of the metal frame into the 1st and using a rubber mallet complete the installation into the wood slats.

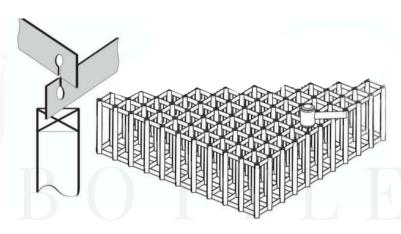

STEP


The bottle neck protector snap onto the front side of the metal frame.



BOM of Sloped Wine Racks

SKU	Timber Slat	Neck Protector	MP01	MP02	MP03	MP04	MP05	MP06	MP07	MP08	MP09	MP10	MP11
WRTS04	19	14	4	4	4	8							
WRTS05	26	20	4	4	4	4	8						
WRTS06	34	27	4	4	4	4	4	8					
WRTS07	43	35	4	4	4	4	4	4	8				
WRTS08	53	44	4	4	4	4	4	4	4	8			
WRTS09	64	54	4	4	4	4	4	4	4	4	8		
WRTS10	76	65	4	4	4	4	4	4	4	4	4	8	
WRTS11	89	77	4	4	4	4	4	4	4	4	4	4	8

ASSEMBLY INSTRUCTIONS _ TYPE-V

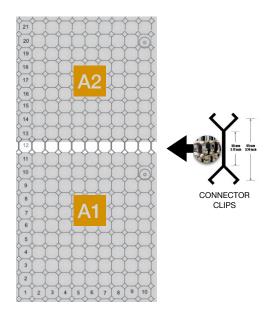


Build the wine racks A1, A2

2 CONNECT (STACK) 2 UNITS VERTICALLY

a. Attach the plastic PLASTIC CONNECTOR CLIPS to the wooden slats on the **BOTTOM ROW** of A2.



b. Connect A2 to A1, B2 to B1;

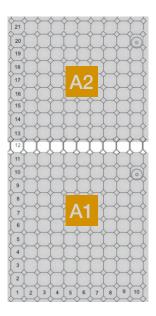

PRODUCT LINKS ON KINGSBOTTLE ONLINE STORES


USA STORE: AUSTRALIA STORE:


<u>Connector Clips</u> <u>Connector Clips</u>

<u>Connector Metal Pieces</u> <u>Connector Metal Pieces</u>

Wall Bracket Wall Bracket


ASSEMBLY INSTRUCTIONS _ TYPE-H



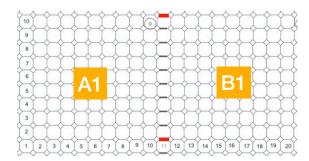




METAL CONNECTOR PIECE




2 CONNECT 2 UNITS HORIZONTALLY

a. Using the PLASTIC CONNECTOR CLIPS (red line below), connect A1 to B1, to fix their positions.

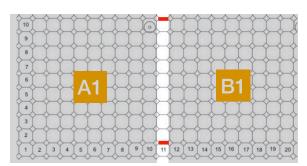

b. Connect A1 to B1, A2 to B2 by inserting the METAL CONNECTOR PIECES along the middle column where the PLASTIC CONNECTOR CLIPS were inserted in step

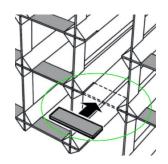

PRODUCT LINKS ON KINGSBOTTLE ONLINE STORES

USA STORE: AUSTRALIA STORE:

Connector Clips Connector Clips

<u>Connector Metal Pieces</u> <u>Connector Metal Pieces</u>

Wall Bracket Wall Bracket

ASSEMBLY INSTRUCTIONS

Build the wine racks A1, A2, B1, B2

CONNECT (STACK) 2 UNITS VERTICALLY

Attach the PLASTIC CONNECTOR CLIPS to the wooden slats on the **BOTTOM ROW** of A2 and B2. Connect A2 to A1, B2 to B1;









CONNECTOR CLIPS


CONNECT 2 UNITS HORIZONTALLY

a. Using the PLASTIC CONNECTOR CLIPS (red line below), connect A1 to B1, A2 to B2, to fix their positions.

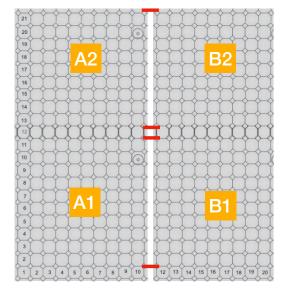

b. Connect A1 to B1, A2 to B2 by inserting the METAL CONNECTOR PIECES along the middle column where the PLASTIC CONNECTOR CLIPS were inserted in step 3a

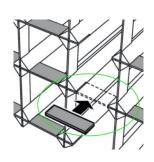

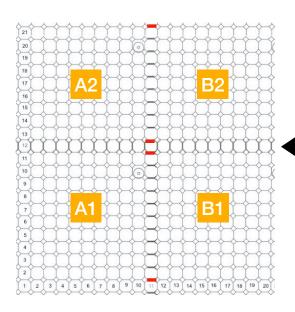



METAL CONNECTOR PIECE

PRODUCT LINKS ON KINGSBOTTLE ONLINE STORES

USA STORE: AUSTRALIA STORE:

Connector Clips **Connector Clips**

Connector Metal Pieces **Connector Metal Pieces**

Wall Bracket Wall Bracket

INSTALLATION INSTRUCTIONS



Wall Bracket


With Fixings

Length: 9.26" (235mm)

The wall brackets are used to firmly connect the wine rack to the adjacent wall. It is recommended to have 4 brackets per square meter (10 sqft), which is around 100 holes/bottles, or 4 brackets per unit (one at each corner).



Move the wine racks to the desired location. Mark the position where the wall brackets will be installed.

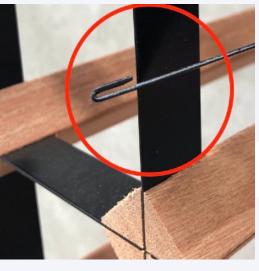

Hook the wall bracket to the front frame of the wine racks



Screw in.

Drill the holes in the wall, then insert only the plastic portion.