




Hand Tool Organizer ASSEMBLY INSTRUCTIONS

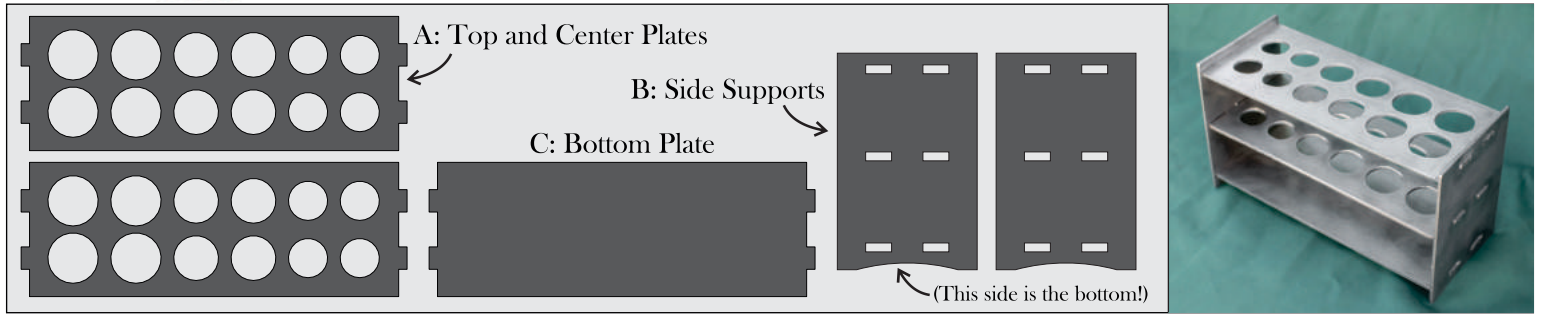

1. Insert the Bottom Plate into the bottom holes of one Side Support. Insert both Top and Center Plates into the top & middle holes of the same Side Support. Be sure to push it tightly together to avoid any gaps like those in the first picture.



2. Use a light ball peen hammer to lightly peen over each of the tabs of the Top, Center, and Bottom Plates. (Use gentle blows - you don't want to "upset" the tabs on the other side.)



3. Flip everything over and insert each of the tabs into the remaining Side Support. Be sure that the bottom is on the correct side and check that there is no gap. Lightly peen the tabs over. Once everything is in place, use harder blows to finish peening out the tabs on both sides.

(OR skip the hammering and use a welder to weld the tabs in place.)

Troubleshooting:

If your Hand Tool Organizer doesn't sit level, is twisted slightly, or isn't straight, try any of the following:

Use a ball peen hammer to draw out and lengthen any short legs.



Use your hands to twist / straighten.



Stand the organizer on end or a corner and use light blows to straighten.



If you have any questions regarding your Hand Tool Organizer, please contact us:
mail@kensiron.com | 320-746-8161 | www.kensiron.com