


## Assembly Instructions


1. Turn the base upside down and fix the centre panel feet with the screws provided



2. Fix the end panel base clips as shown

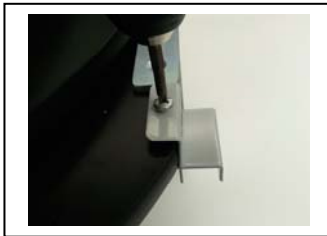

3. Place the base upright and lower the centre panel onto the feet.....using an allen key tighten the 2 locking screws in each foot

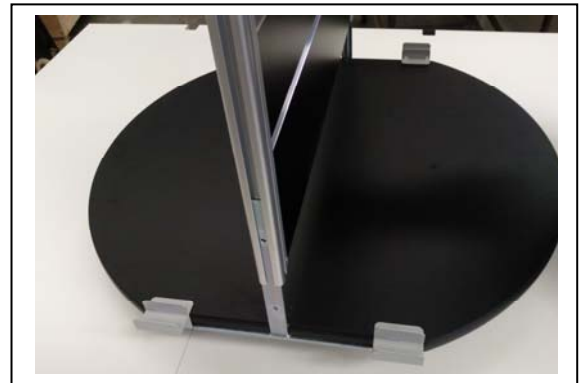

4. Fix the end panel clips as shown and clip the end panels into place

