

Supply Duct Kit


Part No. 4028607

Parts Included:

- (8) Self-Drilling Hex Screw
- (2) 10" Round Duct Collar
- (2) 35" Strip of Foam Tape

Tools Required:

5/16" Hex driver and
drill or nut driver

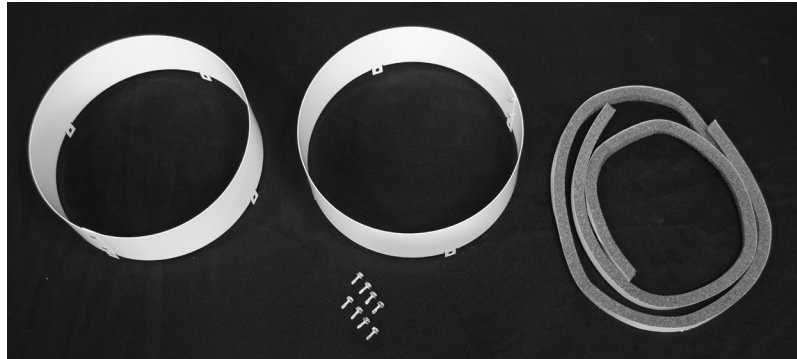

⚠ CAUTION! Before installing the duct kit, disconnect dehumidifier from electrical power.


Step 1: Bend the four tabs on each 10" round collar out as seen in the picture below.



Step 2: Remove the adhesive from the foam tape. Adhere the foam around the inside of each 10" collar – cut off any excess foam tape.



Step 3: Using the self-drilling screws and the hex or nut driver, attach each 10" collar to the dehumidifier by lining up the tabs on the collars to the pre-drilled holes in the cabinet around the supply / discharge on each side of the dehumidifier. Once in place, firmly tighten all four screws for each collar.

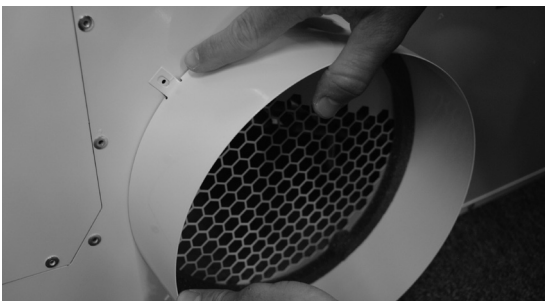

Step 4: Attach duct work as needed.