




# HOW TO: FULL SIZE CORE TRAX INSTALL - AT1/AT2

**TOOLS NEEDED:**

- DRILL
- 5/32" DRILL BIT
- 1/2" DRILL STOP
- #3 PHILLIPS SCREWDRIVER


## STEP 1: ALIGN TRACKS ON PANELS

- With the DECKED drawer system installed in your truck or van, place one Core Trax in the wide slot on the panel just inbound of the ammo cans.
- The tracks must be placed in this slot only; it's wider than the others.
- The tracks can be oriented to either the tailgate end or the cab-side end of the deck, **but make sure each track hole is over a deck dimple** (those dimples correspond to the steel tubes underneath the deck - **DETAIL A**).
- The area of the tracks with no load lock stops must be oriented on the cabside for cabside installs and the tailgate side for tailgate installs. Read that again and see **DETAIL B**.

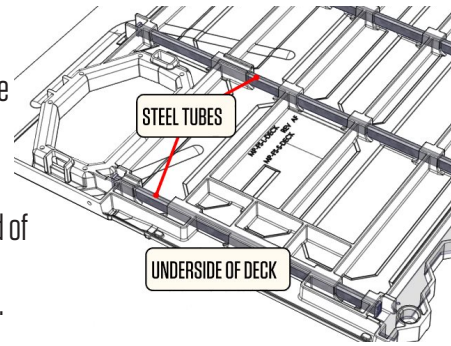

**DETAIL A**

**DETAIL B**

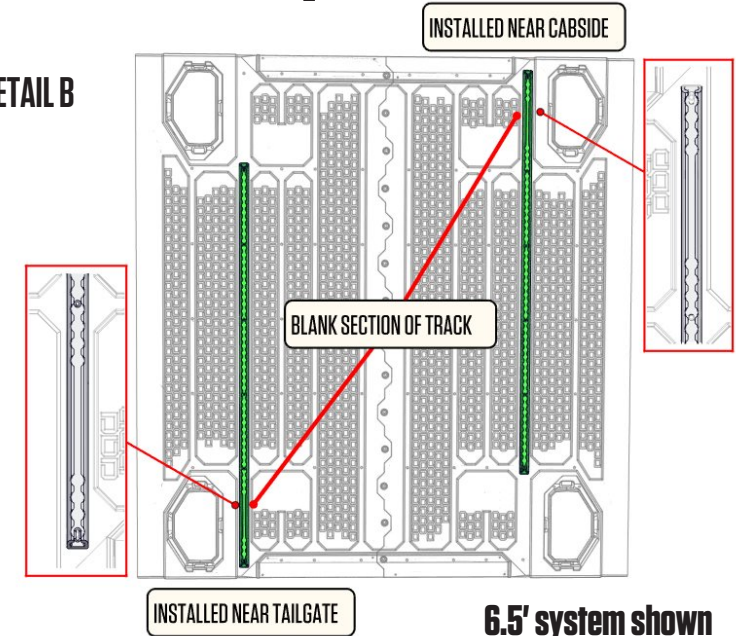

**6.5' system shown**


## STEP 2: DRILL PILOT HOLES AND INSTALL TRAX

**NOTE: WE ARE SHOWING A CABSIDE-ORIENTED INSTALLATION IN DETAIL C**

- Verify that each mounting hole is over a dimple.
- Using a 1/2" drill stop, drill a 5/32" pilot hole into the two end dimples only.
- Only drill through the top of the steel tube! Drilling all the way through will let **WATER INTO YOUR DRAWERS = BAD!**
- With the track in place, install the end screws with a #3 Phillips screwdriver. Leave loose for now.
- Center the Core Trax over the interior holes and drill a pilot hole into each using a 1/2" drill stop.
- Install a screw into each interior hole and tighten just until snug.
- Tighten the end screws.
- Repeat with the other Core Trax in the other widest groove.
- See **CABSIDE INSTALL** example in **DETAIL C**.

NOTE: A 6.5' system is shown with 6 mounting points per track.  
5.5' systems have 5 mounting points per track.

**DETAIL C**

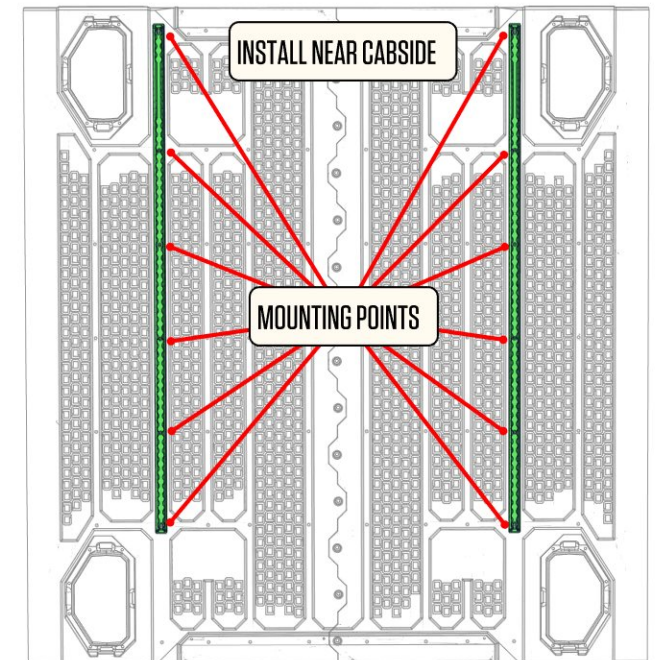

**THESE MIGHT BE USEFUL:** Watch installation videos at [www.DECKED.com/video](http://www.DECKED.com/video) or scan here:




# HOW TO: MIDSIZE CORE TRAX INSTALL - AT5/AT6

**TOOLS NEEDED:**

- DRILL
- 5/32" DRILL BIT
- 1/2" DRILL STOP
- #3 PHILLIPS SCREWDRIVER

## STEP 1: ALIGN TRACKS ON PANELS


- With the DECKED drawer system installed in your truck or van, place one Core Trax in the wide slot on the panel just inbound of the ammo cans.
- The tracks must be placed in this slot only; it's wider than the others.
- The tracks must be installed oriented towards the cabside as shown.
- Make sure each track hole is over a deck dimple (those dimples correspond to the steel tubes underneath the deck - **DETAIL A**).

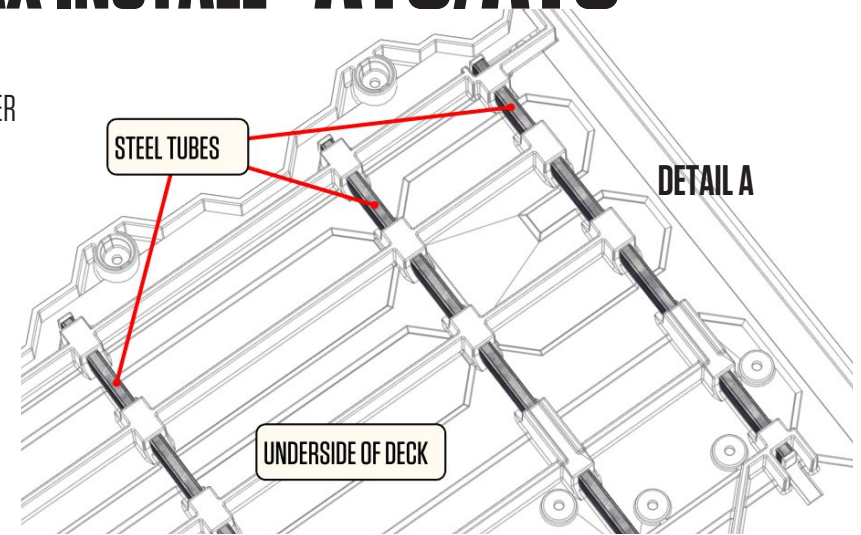

## STEP 2: DRILL PILOT HOLES AND INSTALL TRAX

- Verify that each mounting hole is over a dimple.
- Using a 1/2" drill stop, drill a 5/32" pilot hole into the two end dimples only.
- Only drill through the top of the steel tube! Drilling all the way through will let **WATER INTO YOUR DRAWERS = BAD!**
- With the track in place, install the end screws with a #3 Phillips screwdriver. Leave loose for now.
- Center the Core Trax over the interior holes and drill a pilot hole into each using a 1/2" drill stop.
- Install a screw into each interior hole and tighten just until snug.
- Tighten the end screws.
- Repeat with the other Core Trax in the other widest groove.

NOTE: A 5' system is shown with 5 mounting points per track.  
6' systems have 6 mounting points per track.

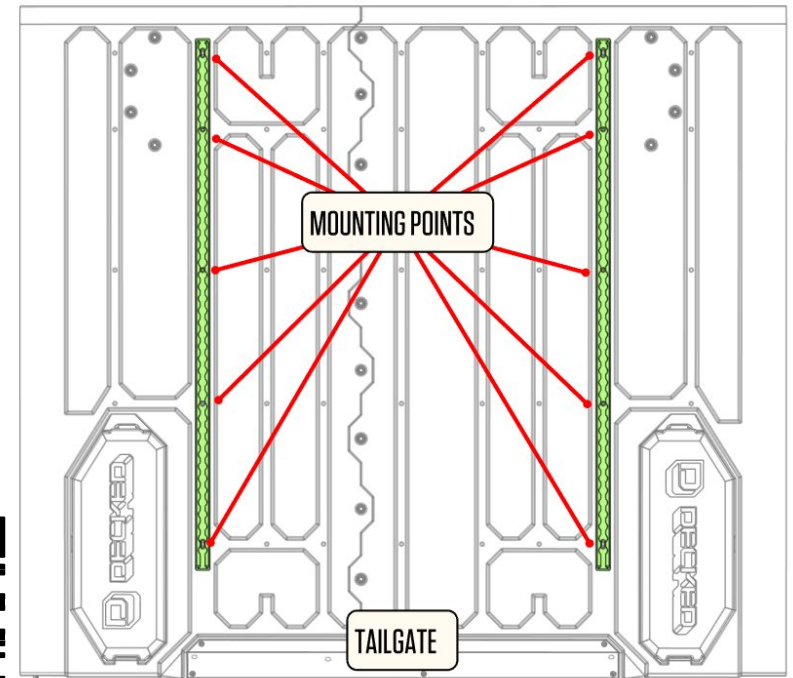

THESE MIGHT BE USEFUL: Watch installation videos at [www.DECKED.com/video](http://www.DECKED.com/video) or scan here: