INSTALLATION INSTRUCTIONS

D-RINGS

TOOLS REQUIRED 3/16" hex key

STEP 1

D-Rings may be installed in any of the eight locations for Full-size and six for Midsize.

STEP 2

Select the shorter silver spacer marked with an "X" for Full-size installs or the longer spacer marked with a "Y" for midsize.

STEP 3


Install D-Ring flat side down on top of silver spacer. Then place small black washer on top of D-ring and fasten with bolt. Tighten fully with a 3/16" hex wrench.

STEP 4

In the unused tie down locations, install the large black washers and bolts in the two center depressions.

STEP 5

Repeat all steps for the other panel.

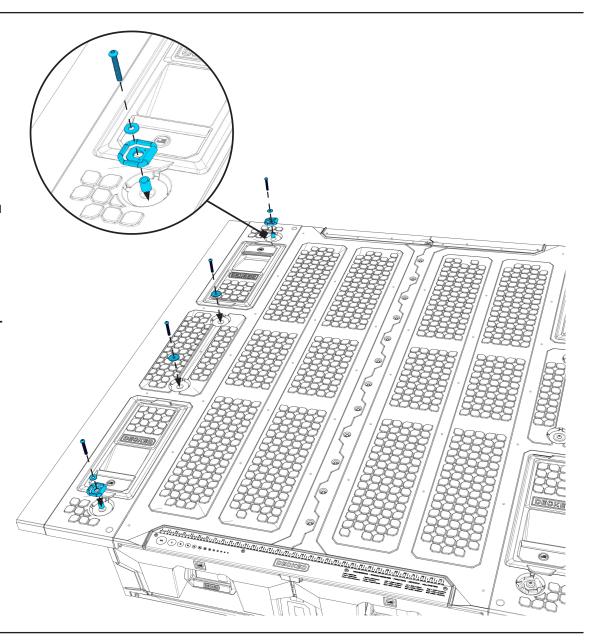

DECKED.COM RC1050|A0087|v.1