



HOW TO: TOOL BOX TIE DOWN INSTALL

TOOLS NEEDED: Torx 30 driver

STEP 1:

The tie downs can be installed with the Tool Box installed in the truck, so no need to remove the Tool Box if it's already installed.

STEP 2:

Note the correct install locations in the picture on the right.

STEP 3:

Align the Tool Box tie down mounting holes to the holes in the bottom of the tub.

STEP 4:


Install plusnuts through the tie down brackets and into the mounting holes on the outside bottom of the tub - push the plusnuts in as far as possible. **DETAIL A.**

STEP 5:


From inside the Tool Box, align the mounting plate holes over the tub holes. Install the bolt through the mounting plate and into the plusnut inside the tub mounting hole. Tighten until snug with a Torx 30 driver, confirming that the plusnut has been fully seated in the mounting hole from below. **DETAIL B.**

IMPORTANT: The Tool Box must be securely fastened to your truck bed at all times. Check the fasteners periodically to verify they are snug.

DETAIL A

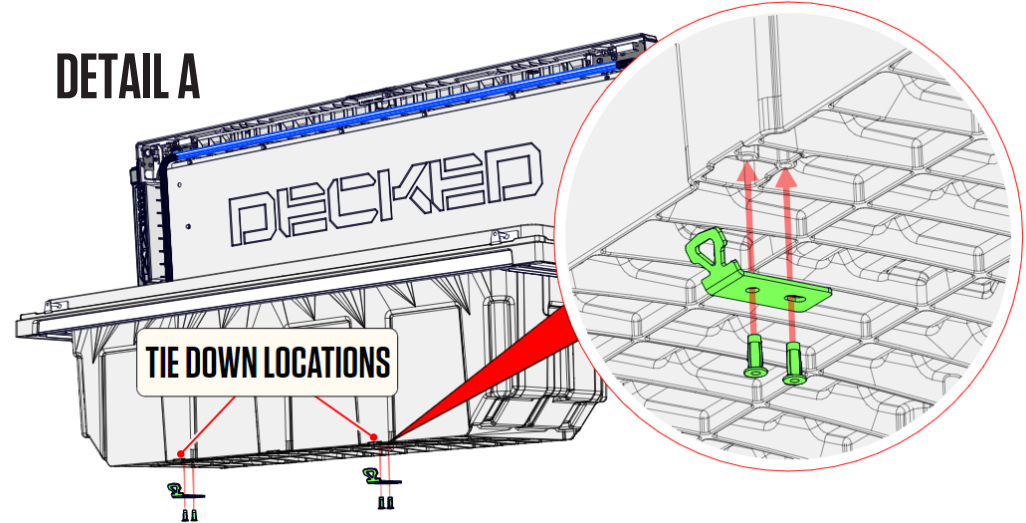

DETAIL B

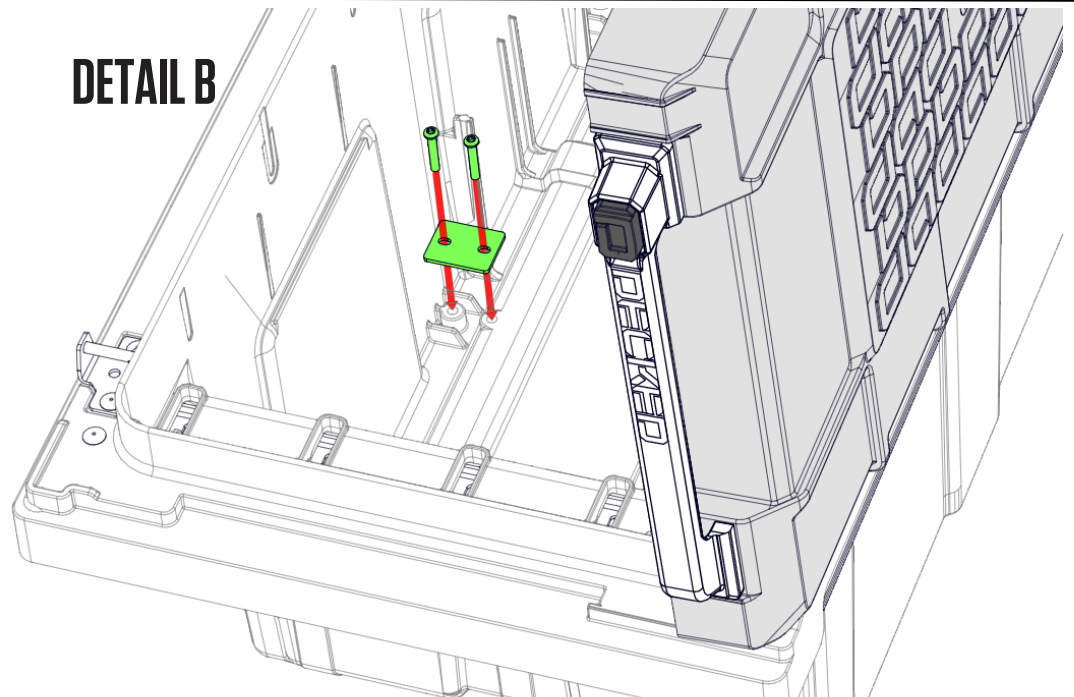

THESE MIGHT BE USEFUL: Watch installation videos at www.DECKED.com/video