




WWW.TWOBROS.COM
167 Via Trevizio Corona, CA 92879 - (800) 211-2767

POWER TIP

Part # 005-P1-X / 005-P1-XK / 005-P1-XSS

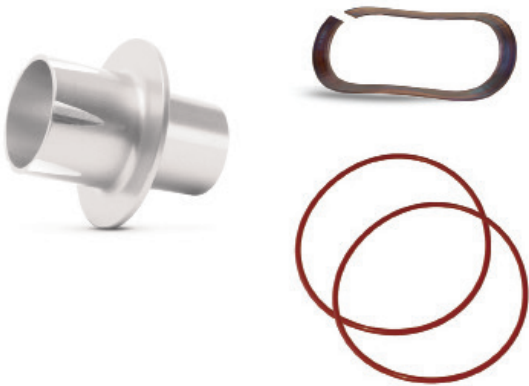


BILL OF MATERIALS

1	P1-X Power Tip	Varies
1	M2/M5/M7 O Ring (STD)	005-106SOR
1	M2/M5/M7 O Ring (Thick)	005-106SOR-2
1	S1R Wave Spring	005-SSR-S1R

INSTALLATION INSTRUCTIONS

1. Make sure the motorcycle is completely cool before installation, and make sure it is secure on a stand or service lift.
2. Remove T20 Torx head end cap screws and remove end cap. (Image 1)

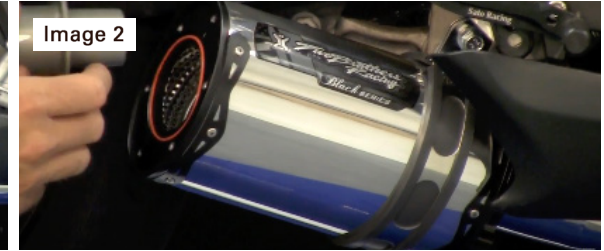


3. Install O-Ring or wave spring onto recess on the outlet of the muffler. See example below (Image 2)
4. Insert Power Tip into the recess on your muffler outlet with beveled side facing outwards. (Image 3)
5. Reinstall end cap and torx head end cap screws. (Image 4)



M2/M5/M7 MODELS WILL USE ORANGE O-RING



INSTALLATION ORDER

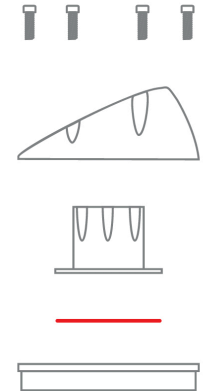

S1R MODELS WILL USE WAVE SPRING



IMPORTANT - PLEASE READ CAREFULLY: We recommend that this performance part be installed by a qualified motorcycle technician. If you have any doubts as to your ability to install this performance part, please consult with your local motorcycle dealer. Read all instructions first before starting installation. Make sure the motorcycle and exhaust system are completely cool before starting the installation. Also, make sure the bike is secure on a center stand or ideally a service lift during installation. Be sure to save all stock components for possible use later.

WARRANTY: Two Brothers Racing products are intended for closed course competition purposes only, and therefore are sold "as is" without warranty. Two Brothers Racing specifically disclaims any warranties of merchantability or fitness for a particular purpose and disclaims all responsibility for consequential and incidental damages or any other losses arising from the use of these products or parts.