



401 South Grand Ave., Santa Ana, CA 92705
 Tel: 714.550.6070 Fax: 714.550.9661 www.twobros.com



2008 Polaris RANGER RZR 800

V.A.L.E.™ Slip-on Exhaust System with M-7 Aluminum Canister
 Part # 005-1850406V



Parts List

Qty.	Description	Part Number
1	Muffler Canister M-7 Aluminum	005-185-206M
1	Stainless Steel S-Bend Slip-On Tube	005-18501S
1	HARDWARE KIT	005-185-3
2	X-Ring (half)	005-7-2-3
1	Muffler Hanger Bracket	005-18504B
1	5mm Long Handle Ball end hex key	005-9-18610
8	6x14mm Socket Head Cap Screw	005-SH614
8	M6 Split Lock Washer	005-WL6
1	TBR Sticker Kit	015-10212
1	USFS Approved Spark Arrestor (installed)	005-106S

IMPORTANT - PLEASE READ CAREFULLY

We recommend that this performance part be installed by a qualified motorcycle technician. If you have any doubts as to your ability to install this performance part, please consult with your local motorcycle dealer. Read all instructions first before starting installation. Make sure the motorcycle and exhaust system are completely cool before starting the installation. Also, make sure the bike is secure on a centerstand or ideally a service lift during installation. Be sure to save all stock components for possible use later.

Warranty

Two Brothers Racing products are intended for closed course competition purposes only, and therefore are sold "as is" without warranty. Two Brothers Racing specifically disclaims any warranties of merchantability or fitness for a particular purpose and disclaims all responsibility for consequential and incidental damages or any other losses arising from the use of these products or parts.

Installation Instructions

1. Make sure the quad is completely cool before starting the installation. Make sure the quad is secure on a level surface and the wheels are chocked to prevent the quad from rolling.

2. **Remove the rear bed assembly:**
 - remove the seats.



- remove the screws (4) behind the seats.



- remove the screws (4) around the tail pipe.



- remove the bolts (4) in the bed.



- remove 6 push pins (3 on each side of bed).



- unplug lights from wire harness (1).



- carefully lift bed assembly out.



3. **Remove OEM muffler and mid-pipe:**
 - loosen OEM clamp.



- remove header joint springs.



- remove mid-pipe tension springs.



- remove mid-pipe.



- remove muffler assembly.



4. **Install Two Brothers Racing exhaust:**

- attach the hanger bracket to the TBR muffler using the 4 (four) 6x14mm socket head cap screws and split lock washers provided. The muffler angle points to outlet.



Continued on pg. 2



401 South Grand Ave., Santa Ana, CA 92705
Tel: 714.550.6070 Fax: 714.550.9661 www.twobros.com



2008 Polaris RANGER RZR 800

V.A.L.E.™ Slip-on Exhaust System with M-7 Aluminum Canister
Part # 005-1850406V




Warranty

Two Brothers Racing products are intended for closed course competition purposes only, and therefore are sold "as is" without warranty. Two Brothers Racing specifically disclaims any warranties of merchantability or fitness for a particular purpose and disclaims all responsibility for consequential and incidental damages or any other losses arising from the use of these products or parts.

Installation Instructions

- remove frame nuts from rear bolts and install muffler assembly to frame with these bolts.

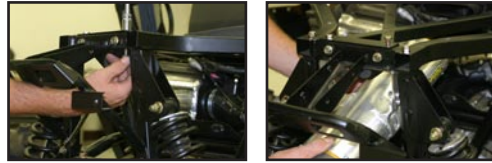

- install TBR mid-pipe making sure that the OEM sealing gasket is between the mid-pipe and header assembly. Use the remaining 4 (four) 6x14mm socket head cap screws and split lock washers to attach the V.A.L.E.™ X-lite ring to the muffler assembly. Tighten in a cross pattern when alignment is correct. Make sure the mid-pipe is clear of all plastic and wires.



- Re-attach mid-pipe tension springs.



- Securely tighten muffler bracket.



- 5. Re-insert the rear bed assembly.



- 6. Re-insert the seats.
- 7. Double check to make sure that all hardware is securely tightened and re-check hardware after every 10 hours.



- 8. Before you run the quad, clean off all fingerprints and dirt, as any oily residue will etch the metal and become somewhat permanent when the system gets hot. Run the quad and enjoy. It is normal for some white smoke to appear the first time you start the quad. This is packing/manufacturing oil from inside the pipe burning off. Check for gaps or leaks. If you find a leak, a little high temperature silicon sealant should fix it. After 50 to 100 miles, recheck all fasteners for tightness.

Care & Cleaning

Care & Cleaning

Keep system free of dirt and moisture. Store in a cool, dry place. Make sure vehicle is completely cool before maintenance.

Stainless Header System: Polished stainless steel pipes will turn a light golden hue after a few heat cycles, this is a normal characteristic of high quality stainless steel. Clean using a mild water based spray cleaner. Always apply cleaner or polish with a soft, clean cloth.

Titanium Header System: Polished titanium pipes will experience color shift ranging from deep blue/purple through amber after a few heat cycles. This is a normal characteristic of high quality titanium. Clean using a mild water based spray cleaner. Always apply cleaner or polish with a soft, clean cloth.

Polished Aluminum Canisters: Use an aluminum or mag wheel polish to restore the bright finish to factory spec.

Brushed Aluminum Canisters: Clean using a mild water based spray cleaner. Always apply cleaner or polish with a soft, clean cloth.

Carbon Fiber Canisters: Clean using a mild water based spray cleaner. Always apply cleaner or polish with a soft, clean cloth. Always make sure the fiberglass packing inside is in good condition and not burned out, as exhaust heat inside an empty canister will deteriorate the carbon fiber sleeve. TBR sells repack kits (Road - #005-10038, Offroad - #005-10038MX) that include everything you need to easily do it yourself.

Titanium Mufflers: For cleaning use a mild water based spray cleaner. Always apply cleaner or polish with a soft, clean cloth. Always make sure the fiberglass packing inside is in good condition and not burned out, as exhaust heat inside an empty canister will deteriorate the carbon fiber sleeve. TBR sells repack kits (Road - #005-10038, Offroad - #005-10038MX) that include everything you need to easily do it yourself.

Repack all road canisters at the first signs of packing material deterioration. Part #005-10038 Repack all offroad canisters after every 10 hours of use. Part #005-10038MX

NEVER dyno test your bike with carbon fiber or titanium canisters installed - the intense heat and lack of cooling air can quickly burn through the canister material. Two Brothers Racing does not provide a warranty for burned canisters.



401 South Grand Ave., Santa Ana, CA 92705
Tel: 714.550.6070 Fax: 714.550.9661 www.twobros.com



**2008 Polaris
RANGER RZR 800**

V.A.L.E.™ Slip-on Exhaust System with M-7 Aluminum Canister
Part # 005-1850406V



005-1850406V



Qty.	Description	Part Number
1	Muffler Canister M-7 Aluminum	005-185-206M
1	Stainless Steel S-Bend Slip-On Tube	005-18501S
1	HARDWARE KIT	005-185-3
2	X-Ring (half)	005-7-2-3
1	Muffler Hanger Bracket	005-18504B
1	5mm Long Handle Ball end hex key	005-9-18610
8	6x14mm Socket Head Cap Screw	005-SH614
8	M6 Split Lock Washer	005-WL6
1	TBR Sticker Kit	015-10212
1	USFS Approved Spark Arrestor (installed)	005-106S

