



401 South Grand Ave., Santa Ana, CA 92705 USA
 Tel: 714-550-6070 Fax: 714-550-9661 www.twobros.com

Two Brothers Racing 2-in-1 Stainless Steel Rear Service Stand



Parts List

QTY.	DESCRIPTION
1	STAND HOOP
2	STAND LEGS WITH WHEELS
1	REAR STAND HOLDER ASSEMBLY - SPOOL / STANDARD (SET: RIGHT AND LEFT, INCLUDES: ADJUSTABLE SWINGARM STOPS, AND RUBBER PADS)
1	ALUMINUM SWINGARM SPOOLS (PAIR)
2	8MM X 45MM BOLTS (FOR USE WITH SWINGARM SPOOLS)
1	5/32" ALLEN WRENCH (FOR ADJUSTABLE SWINGARM STOPS)
1	3/16" ALLEN WRENCH (FOR HOLDER ASSEMBLY ADJUSTMENT)
1	6MM ALLEN WRENCH (FOR 8MM X 65MM BOLTS)
2	8MM X 65MM BOLTS (FASTEN LEGS TO HOOP)
2	8MM NYLOCK NUTS
4	8MM WASHERS
2	SPARE SETS OF RUBBER PADS

Care & Cleaning / Warranty

Care & Cleaning

This service stand features a "brushed" finish. To restore the finish use a scotch brite pad to remove any scratches. Keep service stand free of dirt and moisture. Store in a cool, dry place. For cleaning use a mild spray cleaner. Always apply cleaner or polish with a soft, clean cloth.

Warranty

Two Brothers Racing products are intended for closed course competition purposes only, and therefore are sold "as is" without warranty. Two Brothers Racing specifically disclaims any warranties of merchantability or fitness for a particular purpose and disclaims all responsibility for consequential and incidental damages or any other losses arising from the use of these products or parts.

IMPORTANT - PLEASE READ CAREFULLY

We recommend that this service stand be assembled by a qualified motorcycle technician. If you have any doubts as to your ability to assemble this service stand, please consult with your local motorcycle dealer. Read all instructions first before starting assembly. When using this service stand be sure the motorcycle and exhaust system are completely cool.

Installation Instructions

1. Insert the stand legs into the stand hoop. Use the 8mm x 65mm bolts, 8mm washers and 8mm nylock nuts to secure. **Be careful not to over tighten these bolts, you will damage the stand if you over tighten these bolts.**
2. Insert the rear stand holder assemblies into the stand legs. If your motorcycle used spools you will insert the rear stand holder assemblies with the "V" pointing inward. If your motorcycle does not use spools insert the rear stand holder assemblies with the rubber pads facing inward.
3. Adjust the width of the rear stand holder assemblies for your motorcycle and tighten set screws. If your motorcycle uses spools, the spools should sit in the cradle the "V". If your motorcycle does not use spools the swingarm should rest on top of the rubber pads.


Spool Detail



Non-Spool Detail



Service Stand in the box/Arm Detail

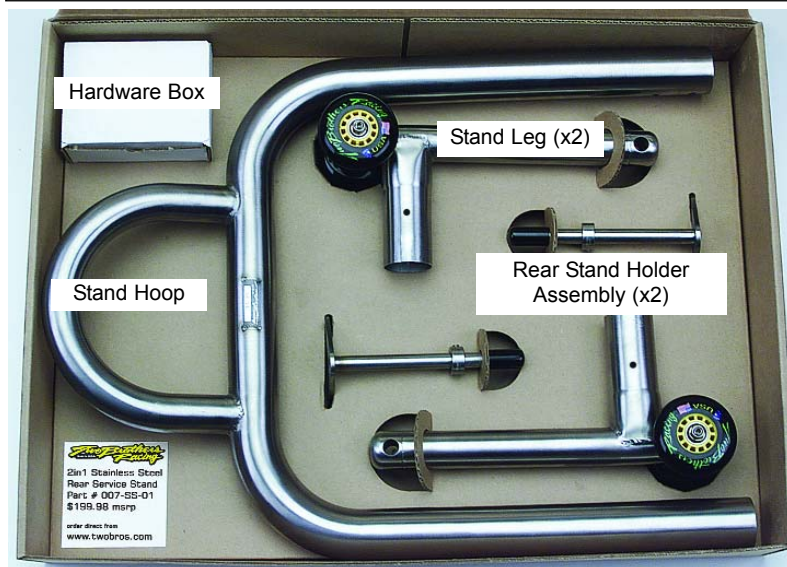

Flat portion on arm is for set screw to hold arm. Be sure this is properly engaged before using stand.

