



Absolute Top Level®

401 South Grand Ave., Santa Ana, CA 92705
Tel: 714.550.6070 Fax: 714.550.9661 www.twobros.com




COMP-V

Yamaha Bolt
Part # 034-369-01-V




Installation Instructions

1. Remove OEM air filter assembly.

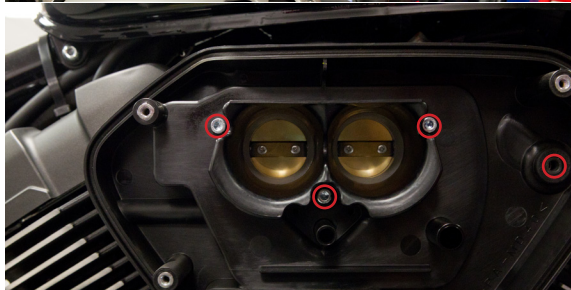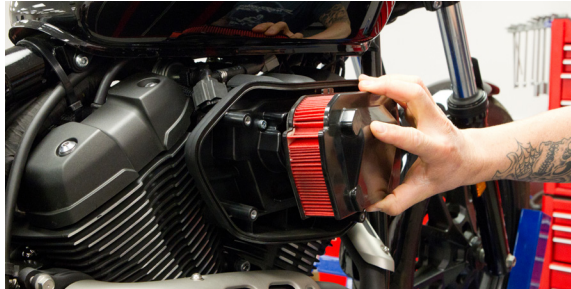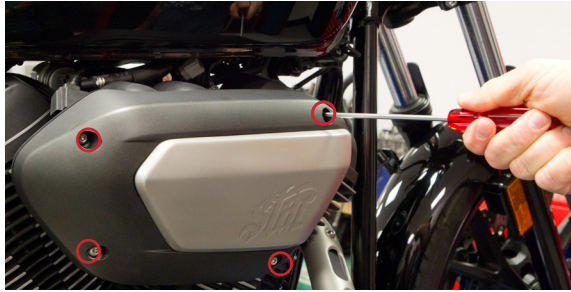

2. Remove OEM gaskets from back of air box to be used with TBR Comp-V.

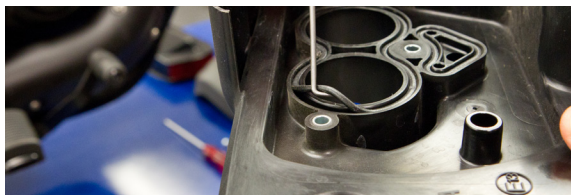

3. Remove rubber grommet and spacer and install on Comp-V backing plate.



4. Disassemble Comp-V to backing plate to ease installation.

5. Connect breather hose to barb on back of Comp-V plate.





Absolute Top Level®

401 South Grand Ave., Santa Ana, CA 92705
Tel: 714.550.6070 Fax: 714.550.9661 www.twobros.com

COMP V

Yamaha Bolt

Part # 034-369-01-V



Installation Instructions


- When installing backing plate to throttle body be sure to tighten socket head screws evenly 1/4 turn at a time to ensure no binding. (Socket head screws are self locking and some slight resistance is normal when tightening.)



- Install TBR air filter and face plate. Tighten the four socket head cap screws.



- Install plug cap on V-Stack and tighten two mounting bolts to snug.

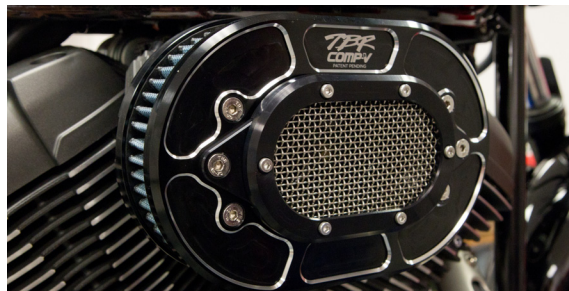

Care & Cleaning

Care & Cleaning

Keep system free of dirt and moisture. Store in a cool, dry place. Make sure vehicle is completely cool before maintenance.

Warranty Information

Two Brothers Racing products are intended for closed course competition purposes only, and therefore are sold "as is" without warranty. Two Brothers Racing specifically disclaims any warranties of merchantability or fitness for a particular purpose and disclaims all responsibility for consequential and incidental damages or any other losses arising from the use of these products or parts. Not tested for use with OEM or aftermarket accessories.

IMPORTANT - PLEASE READ CAREFULLY

Two Brothers Racing products are intended for closed course competition purposes only.

We recommend that this performance part be installed by a qualified motorcycle technician. If you have any doubts as to your ability to install this performance part, please consult with your local motorcycle dealer. Read all instructions first before starting installation. Make sure the motorcycle and exhaust system are completely cool before starting the installation. Also, make sure the bike is secure on a center stand or ideally a service lift during installation. Be sure to save all stock components for possible use later.