

VANGUARD®

BRASS TRIM KIT

GA6094

**FITS VMH26 AND VMH10 SERIES COMPACT CLASSIC
VENT-FREE GAS FIREPLACES**

Includes Hardware Kit 102866-01

Assembling Brass Trim

1. Remove packaging from three remaining pieces of brass trim.
2. Locate two adjusting plates with set screws, and two shims in the hardware packet.
3. Align shim under adjusting plate as shown in Figure 5.
4. Slide one end of adjusting plate/shim in slot on mitered edge of top brass trim (see Figure 1).
5. Slide other end of adjusting plate/shim in slot on mitered edge of side brass trim (see Figure 1).
6. While firmly holding edges of brass trim together, tighten both set screws on the adjusting plate with slot-ted screwdriver.
7. Repeat steps 1 through 6 for other corner.

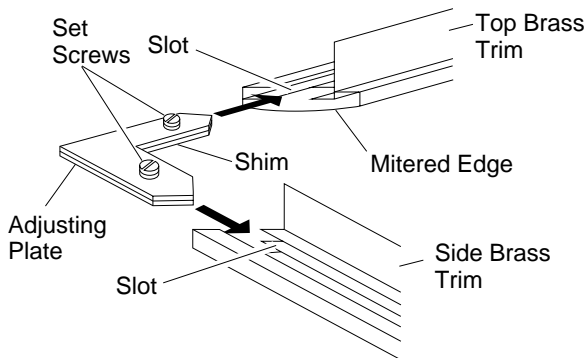


Figure 1 - Assembling Brass Trim

Installing Brass Trim

1. Fireplace should be fully assembled. See *Assembling Fireplace* in fireplace owner's manual.
2. Firmly snap brass trim assembly on shoulder screws. Shoulder screws are located on fireplace cabinet (see Figure 2).

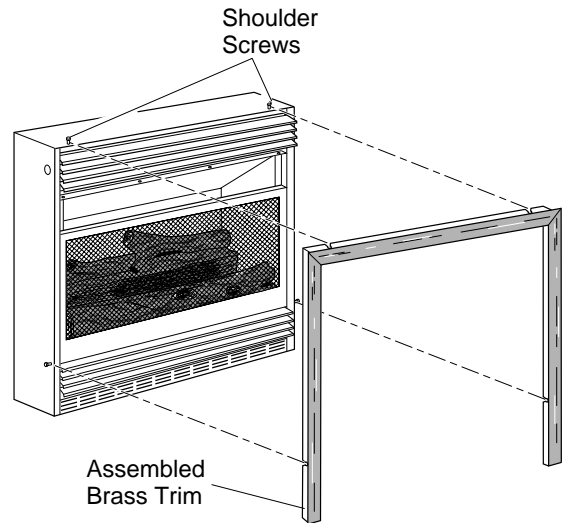


Figure 2 - Attaching Brass Trim to Fireplace

DESA
INTERNATIONAL

2701 Industrial Drive
P.O. Box 90004
Bowling Green, KY 42102-9004
www.desatech.com



105668 01

NOT A UPC

105668-01
REV. A
03/99