

Log Placement Instructions

Model: AVFL60DLS

WARNING: Turn off fireplace and allow to cool completely before beginning installation. **DO NOT** use this option kit with any other internal hearth option such as stones.

Kit Contents:

- Three (3) driftwood logs
- Four (4) log support pin brackets
- Four (4) #8 bracket mounting screws

NOTE: Do not handle logs with your bare hands. **Always wear gloves to prevent skin irritation from log material.** After handling the logs, wash your hands with soap and water to remove any traces of fibers.

NOTE: Prior to installing the log set, you must first install the pin brackets on the burner. The air deflection glass and fireglass should only be installed after the pin brackets are in place. The air deflection glass should be installed prior to placing fireglass on the burner. For proper air deflection and fireglass placement, please refer to the Owner's and

Installation Manuals. The logs must then be placed in the unit after the fireglass and air deflection glass. If the optional logs are added to the AVFL60 after installation of deflective glass and fireglass, move the fireglass away from the pin location holes on the engine base as per Figure 1.

1. Mount the four log support pin brackets using mounting holes and screws provided in locations indicated in Figure 1 for the two rear logs. Only 1 hole of the pin bracket will be used to secure the pin to the rear of the engine base. The front hole remains unused and rests on the mesh area. Then arrange fireglass evenly across the burner again. **NOTE** that the front log can be positioned anywhere within the area designated on the front hearth as indicated in Figure 1.


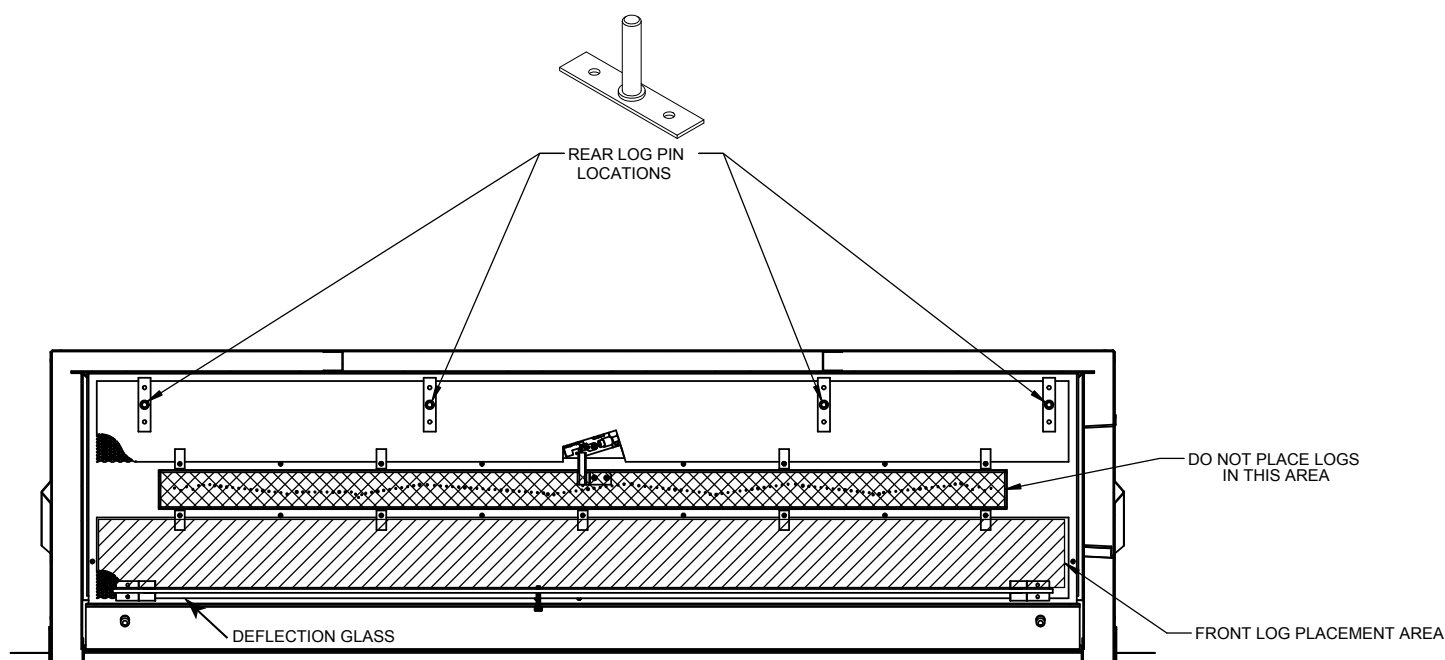


Figure 1 – Log Placement

2. Place the left rear log (#1) by aligning the holes in the bottom of the log with the two pins at the back left of the burner. See Figure 2.
3. Place the right rear log (#2) by aligning the holes in the bottom of the log with the two pins at the right rear of the burner.
4. Place the front log (#3) within the area shown in Figure 2. NOTE that the front log should be placed against the back of the deflection glass and should not be close to the burner area or come into contact with any flame.

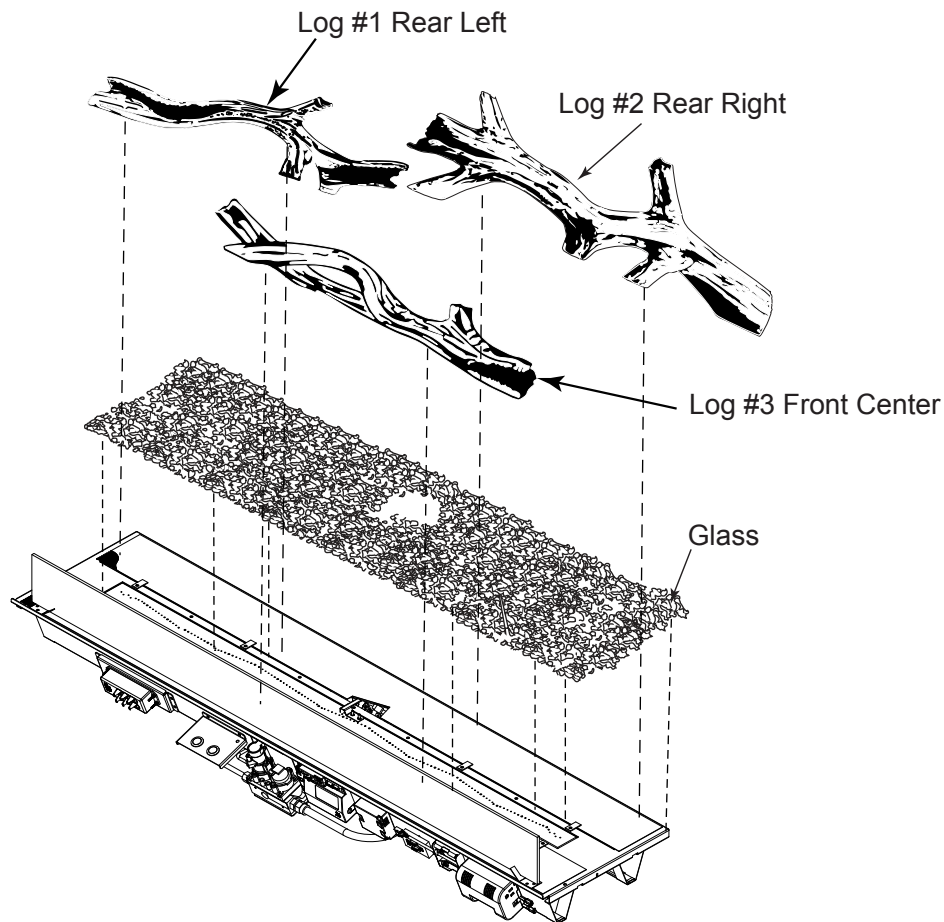

WARNING: Rear logs must be placed on rear pins. Front log can be placed in any location across the front, but cannot be located on the burner surface.

Figure 2 – Log Placement

Monessen, a brand of Hearth & Home Technologies
7571 215th Street West, Lakeville, MN 55044
www.monessenhearth.com