



# Trim Kit Installation Instructions

Model: AVFL60TKI

---

This trim kit is designed for use on the AVFL60 model fireplace and should be used with Install Option #2 of the AVFL60 Installation Manual on page 28.

Read these instructions thoroughly before beginning installation.

## KIT CONTENTS:


- Trim kit frame

## TOOLS REQUIRED:

- Phillips screwdriver

## INSTALLATION INSTRUCTIONS:

1. Remove screen from unit.
2. Remove the four shoulder bolts (2 on each side).
3. Place the trim frame over the face of the unit.
4. Align the two slots with the two holes on each side.
5. Secure in place with the shoulder bolts previously removed [two (2) on each side.]
6. Place the screen back into place by aligning the screen frame hooks with the shoulder bolts.

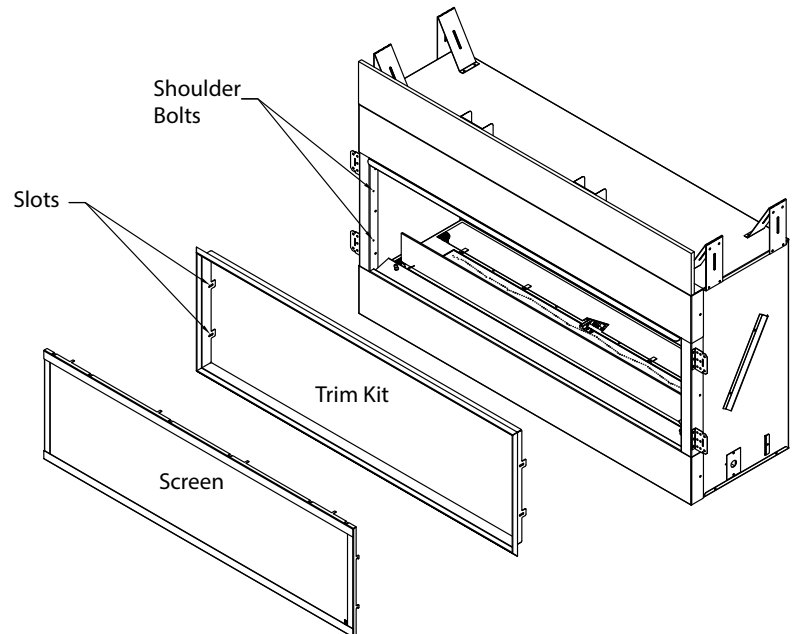

Monessen, a brand of Hearth & Home Technologies  
7571 215<sup>th</sup> Street West, Lakeville, MN 55044  
[www.monessenhearth.com](http://www.monessenhearth.com)