
11" EDMUND PENDANT

Installation Guide

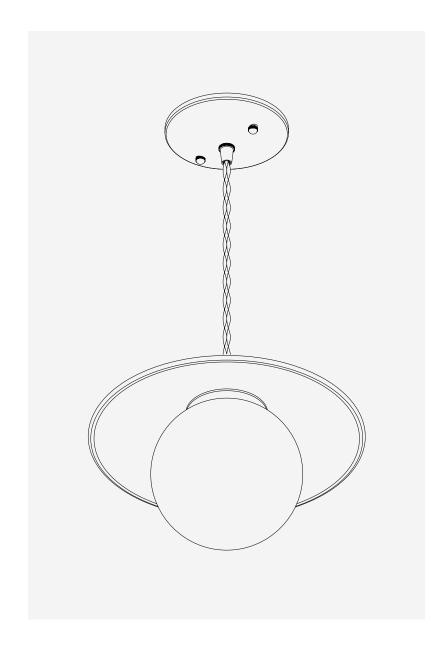



CAUTION

This product should be installed only by a licensed electrician. Turn off all electrical power at the main fuse box before installation. Turning off the power from a light switch may not be sufficient enough to prevent from electrical shock.

For your safety and for proper operation of the luminaire, read and understand all instructions completely before installation.


UNDERSTANDING THE FIXTURE

Please care for the brass pieces with a soft cloth, and avoid using any abrasive cleaners or products. The patination process will speed up if any brass product or component is excessively handled. Gloves are recommended for installation.

BEFORE INSTALLATION

Carefully unpack the luminaire and inspect for damage. Please check that you received all of the components pictured in this guide. If anything is missing, please contact, shopkeeper@lostine.com, and one of our customer service representatives will be able to assist you.

COMPONENTS INCLUDED

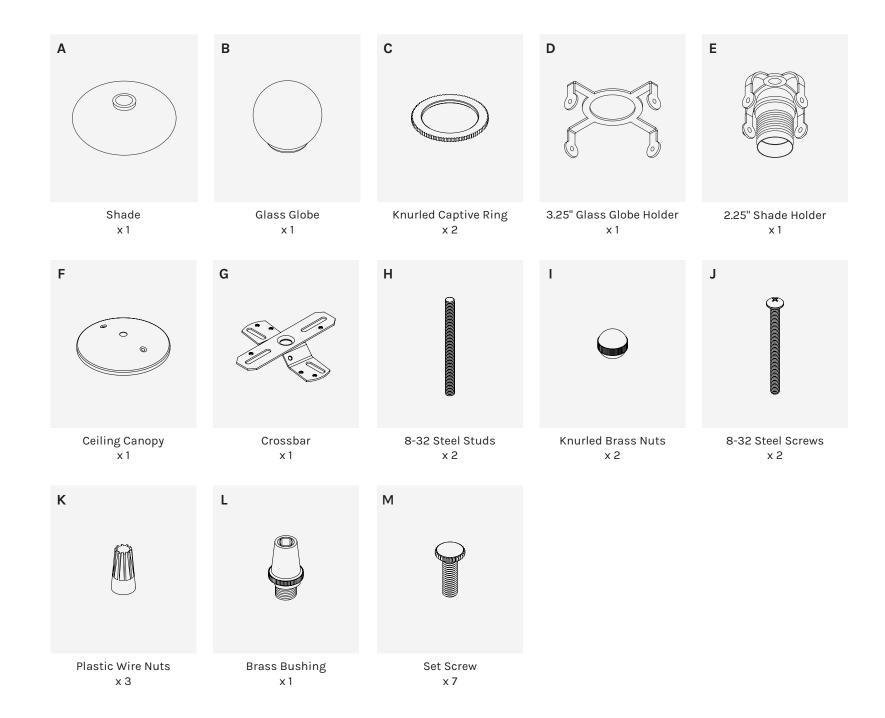

COMPONENTS NOT INCLUDED







Phillips Head Screwdriver x 1



Junction Box x 1

WIRING

1. WARNING


Shut off the power to the electrical box. Turning off the power from a light switch may not be sufficient to prevent electrical shock.

- 2. Remove the Crossbar (G) from the Canopy (F), leaving the 8-32 Steel Studs (H) attached to the crossbar.
- 3. Secure the Crossbar (G) to the electrical box using the provided 2" x 8-32 Steel Screws (J).
- 4. Set the desired hanging height by removing the Brass Bushing (L) from the Canopy (F) and pulling the cord through, then secure the Brass Bushing (L) back onto the Canopy (F). If the excess cord needs to be trimmed make sure to leave at least 6" of wire from the canopy for ease of wiring.
- Following the electrical configuration listed below, connect the wires from the luminaire to the electrical box using the provided Plastic Wire Nuts (K).

From Electrical Box	From Luminaire
Connect Black or Red (HOT) wire from supply to:	Black Wire
Connect White (NEUTRAL) wire from supply to:	White Wire

Secure Green or Bare Copper (GROUND) wire from supply to the green screw on the Crossbar (G).


6. Slide the Canopy (F) over the Steel Studs (H) and fasten with the provided Brass Nuts (I).

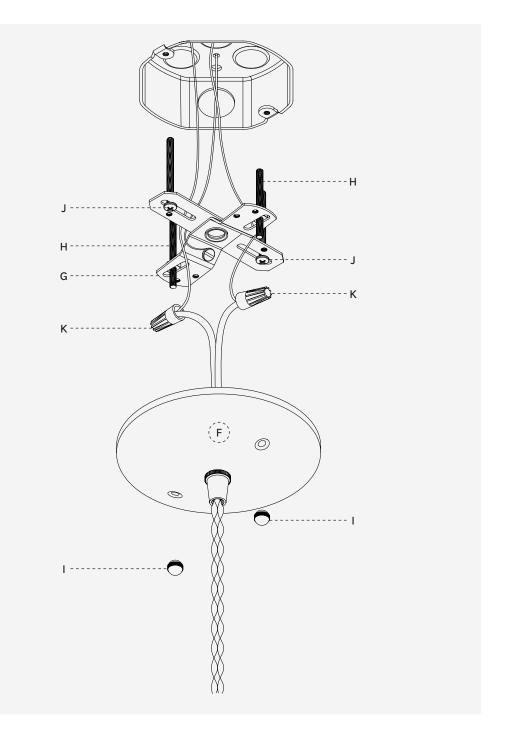

LOSTINE 215 - 825 - 7270 lostine.com

SHADE ASSEMBLY

- Remove both Captive Rings (C) and brass 3.25 " Glass Globe Holder (D) from the socket.
- 2. Secure the Shade (A) to the brass 2.25" Shade Holder (E) until all four Set Screws (M) are in contact with the shade. The screws should sit directly under the lip of the Shade (A).
- 3. Assemble both Captive Rings (C) and brass 3.25" (D) Glass Globe Holder back onto the socket.
- 4. Insert desired light bulb (M), (not included).
- Secure the Glass Globe (B) to the brass 3.25" Glass Globe Holder (D) until all four Set Screws (M) are in contact with the globe. The screws should sit directly under the lip of the globe's opening.
- 6. Turn the power back on to the electrical box and enjoy your luminaire!

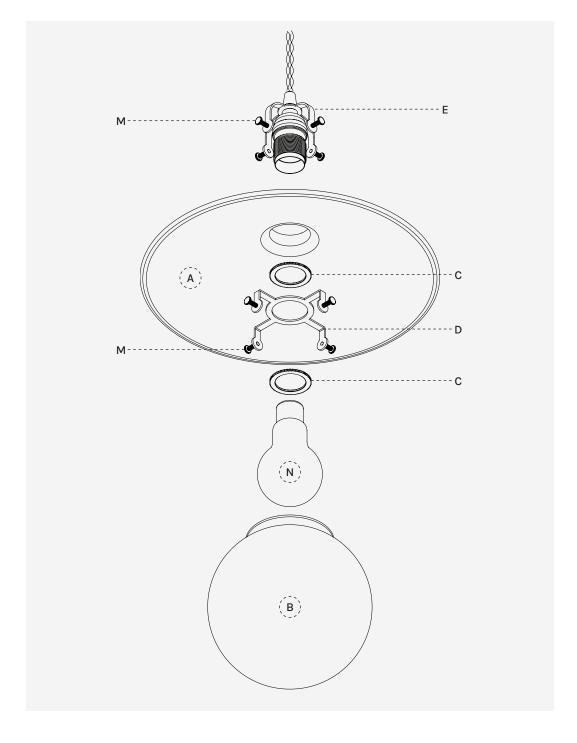

LOSTINE 215 - 825 - 7270 lostine.com