


HEARTLAND USA[®]

2 INCH TANK LIFT Fits Dyna Models 1999-Present (Instruction)

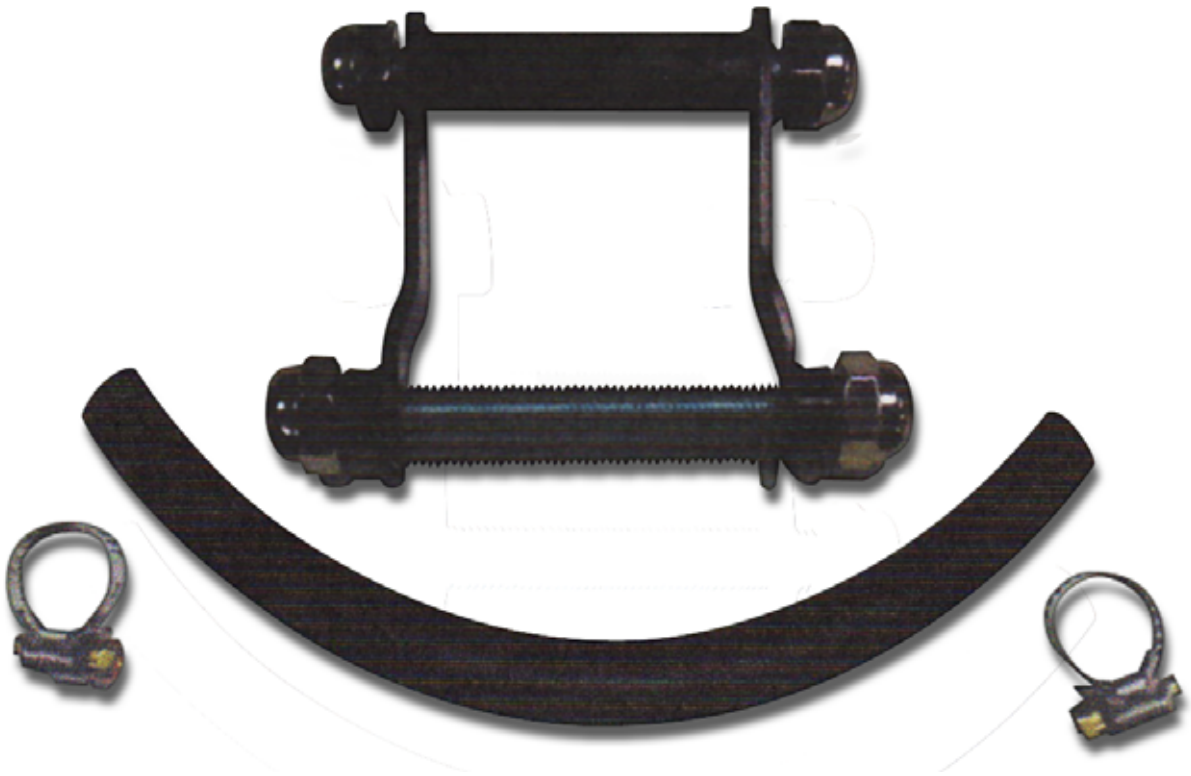

PARTS LIST

Parts List:

Tank Lift Brackets	x 1
½ O.D. x ¼ I.D. Fuel Hose	x 1
½ Hose Clamps	x 2

Hardware List:

3/8 – 16 x 3 ⁵ / ₈ ” Zinc. All Thread	x 1
3/8 – 16 x 4 ³ / ₈ ” Zinc. All Thread	x 1
3/8 – 16 Acorn Nuts	x 2

Note: Make sure gas tank has enough clearance from hitting your bars.
Turning bars side to side to full stop is recommended before test riding.

2466 E. Fender Ave., Fullerton CA, 92831



Ph: 310-822-2697 Fax: 310-634-1271

www.heartlandbiker.com

We recommend reading through the entire install process before beginning.


1

1. Disconnecting fuel line and Vacuum line will make it easier when lifting gas tank. Will not re-use factory fuel line. (Disconnecting charcoal canister line is needed in certain years.)

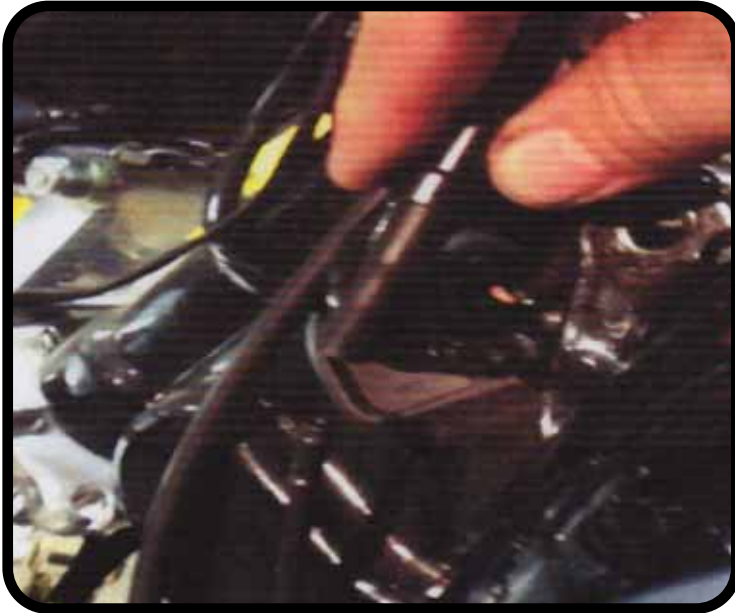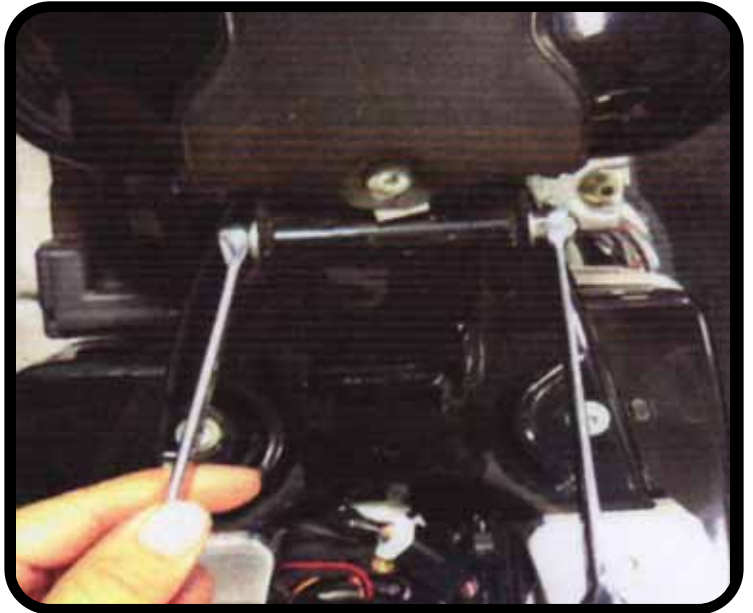


3

3. Install the 3/8 – 16 x 3 5/8" all thread through the gas tank front brackets and also through the top mount of the bracket. (Blue Loctite is recommended). Thread in Acorn nut on other side.

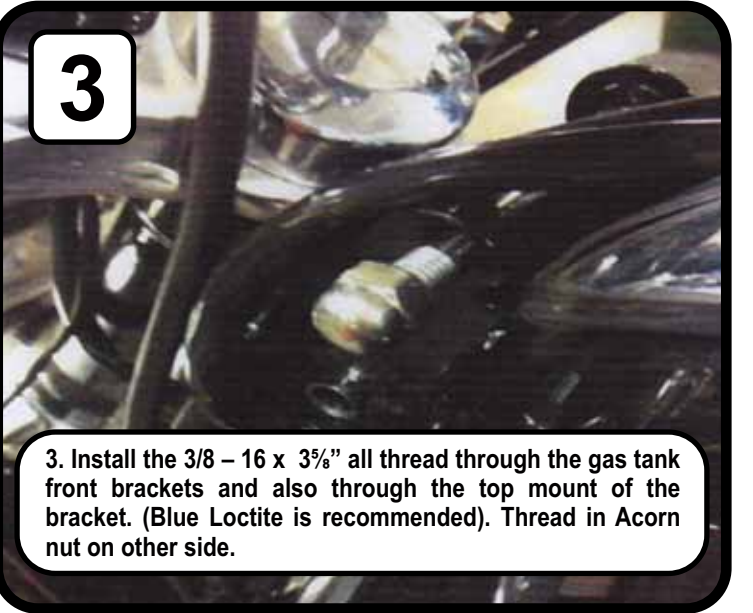

2

2. Remove factory bolt from the front of your tank and loosen bolt on the rear. (Do not remove). Removing gas tank not required.

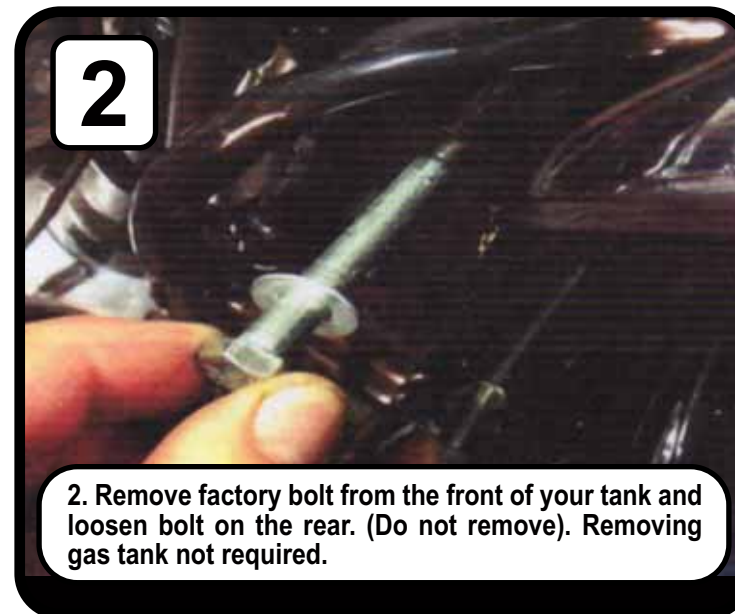

4

4 . Running 3/8 – 16 x 4 3/8" Zinc. all thread through the bottom mount and through the frame will finalize the installation of the 2" tank lift. (Blue Loctite is recommended.) Torque top and bottom to factory specs.



5

5. You may need to switch out one of the breather lines coming from the charcoal canister. The breather line coming from the the gas tank does not reach after the 2" Tank Lift has been installed. (Switching Charcoal Canister line is needed in certain years.)



6

6. Make sure gas tank has enough clearance from hitting your bars. Turning bars side to side to full stop is recommended to ensure proper clearance before test riding.

