




M-1500 Lawn Chair Assembly Instructions

NOTE: Please check contents and read directions carefully before assembly. If any items are missing or damaged, *please contact the retailer who you purchased the product from and they will correct the problem as promptly and as efficiently as possible.* Also, checking or cracking of the logs is a *natural* part of the drying aspect of cedar. *This does not affect the structural integrity of the wood.* This natural occurrence enhances the rustic beauty of the product. This item is in kit form which may require some light sanding.

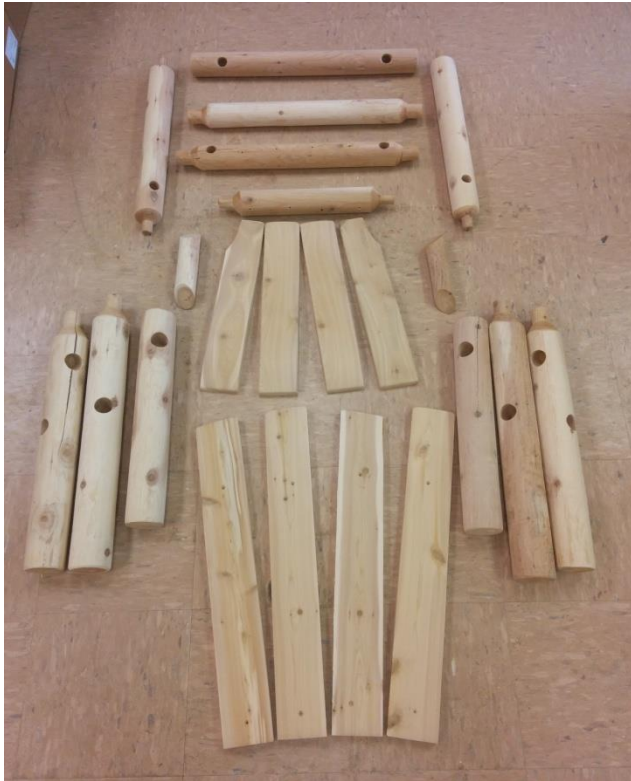

Step1: Insert wood glue into hole. Connect the one-hole leg into the two-hole leg. Repeat for other side.



Step 2: Apply wood glue into hole and insert dowel with holes into leg.



Step 3: Use wood glue and insert dowel without holes into leg.




Step 4: In remaining holes put wood glue and attach remaining legs onto unit.



Step 5: Use wood glue and attach arms onto unit.

Step 6: Apply wood glue and insert small dowel into side dowels. Attach chair back top bar.

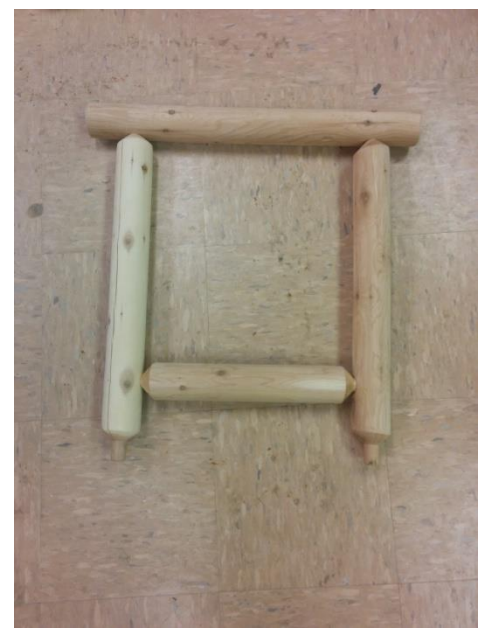



Step 7: Insert assembled pieces from step 6 into remaining holes of chair bottom after applying wood glue.



Step 8: Find personal comfort angle for chair back. From 3 1/4" from back of arm, attach with washer and lag bolts.

Step 9: Insert 2" screws at an angle into each dowel, like shown in the photo series.





Step10: Lay out seat slats like in photo series below. Make sure seat slats with cut-outs are on the outside. Apply wood glue and fasten with 2-1/2" screws.



Step 11: On floor or work surface, lay out back slats in order shown in this photo before attaching to unit.

Step 12: Attach back slats like shown in photo series below. Use wood glue and 2" screws.



Step 13: Use 2-1/2" screws to attach angle braces to each side of chair.

