

Wall Installation of Your Wisdom In Wood® Carving




1. Place the 4 enclosed silicone bumpers on the back of the carving: Two 1" in from each of the bottom corners and one each just below the side keyhole slots.
2. Insert the two enclosed wall marking points in the outer keyhole slots. Slide them to the top of the keyhole (a). Using masking or blue painter's low-tack type tape, press a small piece of tape over the marker point so the point protrudes and the tape holds the marker in place at the top of the slot (b).
3. Again using blue painter's type tape, secure a small ("torpedo") level to the top of the carving (or use the small yellow bubble level provided). (Note: The torpedo level is recommended since it is larger and should provide greater accuracy.)
4. Hold the carving near the location on the wall where you want to install it. Use the level to determine the correct positioning.
5. When it is where you want it, gently press the carving back to the wall so the keyhole marking points mark the wall to indicate the correct screw locations.
6. Remove the marking points and tape.
7. Carefully screw the double-headed screws into the wall. **THIS SHOULD BE DONE BY HAND TO AVOID OVERTIGHTENING THE SCREWS.** In drywall, the screws can be installed directly in the wall with no pilot holes or wall anchors necessary. However, pre-drilling a small pilot hole is suggested to improve accuracy and ease installation of the screw. (Note: If the wall is not drywall or if wood framing is encountered, drilling a 1/16" pilot hole may be required.)
8. Hang your carving and enjoy!

Our Custom Installation Kit




- 1- Bubble Level Vial
- 4 - Silicone Bumpers
- 2- Double-Headed Screws
- 2 - Wall Marking Points

a. Wall Marking Pin

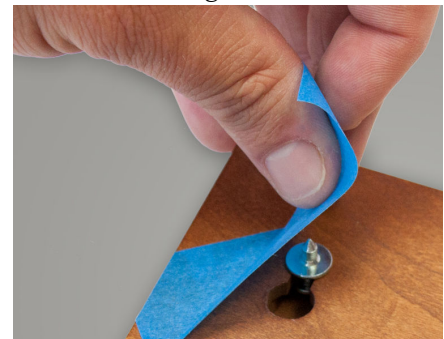

Inserted and slid to top of Keyhole Slot

b. Painter's Tape Applied

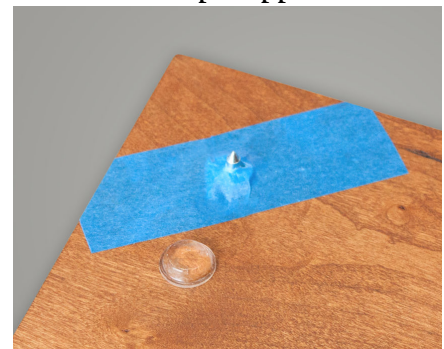

Tape applied over Marker Point with point protruding - ready to mark wall location for installation of Double-Headed Screws.