

# GOODSON

**Tools and Supplies for Engine Builders**

156 Galewski Drive • P.O. Box 847 • Winona, MN 55987-0847



Toll-Free 1-800-533-8010 • Local 507-452-1830 • [www.goodson.com](http://www.goodson.com)

# HSR-1625D

**Instructions for Use**

## Exhaust Port Scribing D-Ring

1. Take the D-Ring and align the flat up with the floor side of the exhaust port. (This is the side that is closest to the head gasket surface.) Tip: It is easier to line the flat side of the D-Ring up with the bottom of the guide. This is on the same plane as the seat. Figure B.
2. Once D-Ring is lined up in place, scribe entire ID of D-Ring to the Cylinder Head.  
Remove and port to scribe mark.

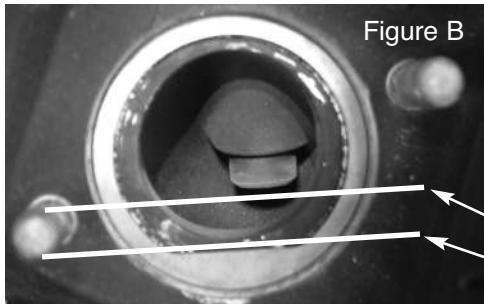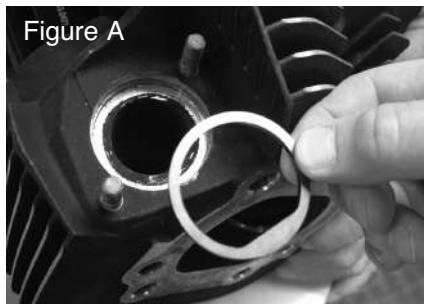

July 2013

# GOODSON

**Herramientas y suministros para reconstructores de motores**

156 Galewski Drive • P.O. Box 847 • Winona, MN 55987-0847



Toll-Free 1-800-533-8010 • Local 507-452-1830 • [www.goodson.com](http://www.goodson.com)

# HSR-1625D

**Instrucciones Para Uso**

## Anillo-D de Escape de Puerto de Trazado

1. Tome el anillo-D y alinea el plano con el lado del piso del escape de Puerto. (Este es el lado más cerca a la superficie de la cabeza de zapatilla.) Consejo: Es más fácil para alinear el lado plano del anillo-D con el fondo del guía. Esta en el mismo nivel del asiento. Figura B.
2. Cuando el anillo-D es alineada en lugar, escriba toda el ID del anillo-D a la cabeza del cilindro. Remueva y porta hasta la marca escrita.

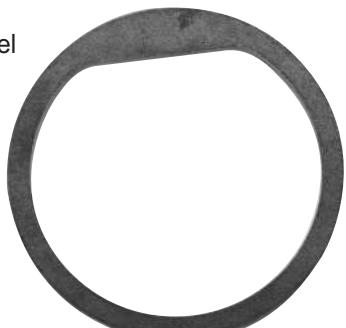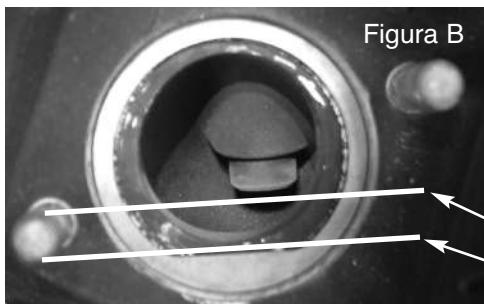

Julio 2013