

Thank you for purchasing your Fiberbuilt Performance Mat in a 4 foot by 9 foot configuration. Below are the set up instructions.

Step 01


Check your shipment for accuracy. You should have received the following items in your shipment and all are required to assemble your mat.

- | | |
|--------------------------------------------------|----------------------------|
| 1) 8 Pieces of Fiberbuilt EPS Pods | 5) 4 Pieces of – S-SFCR-E1 |
| 2) 1 Piece of Fiberbuilt Grass nominally 4' x 1' | 6) 2 Pieces of – S-SFCR-E2 |
| 3) 2 Pieces of Performance Turf | 7) Black Cable Ties |
| 4) 4 pieces of – S-SFCR-C1 | |

The part numbers of the rubber frames are embossed in the rubber on the top side. Please check for all of your pieces before you start the assembly process.

Step 02

Lay out your rubber frames per the below diagram

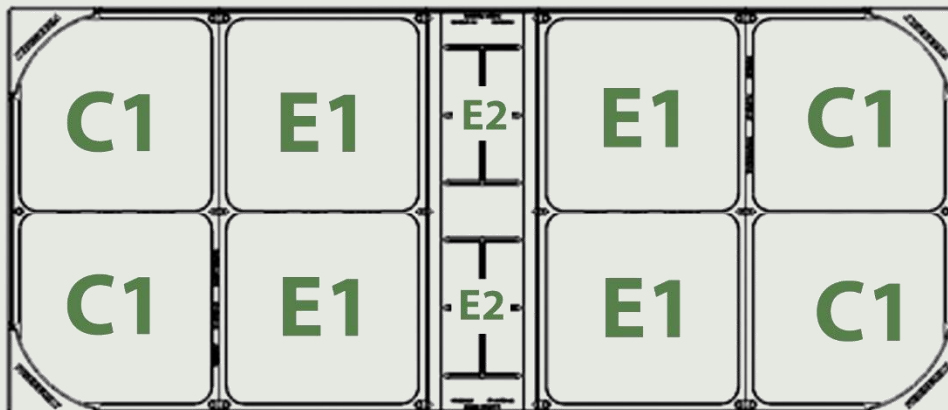

Step

03

Tie your rubber frames together using the black cable ties that were provided. There are three distinct connections please join your frames per the photos below

1) Edge Connections



2) Center Connections



3) Connections Between Stance and Hitting Areas



Once you have tightened the cable ties and the nubs of the ties are pressed into the cavity flush with the top of the cavity, you can trim away the excess plastic.




Step


04

Insert your EPS Pods into the rubber frames.

To insert EPS Pods into the rubber frames, use the technique illustrated below:

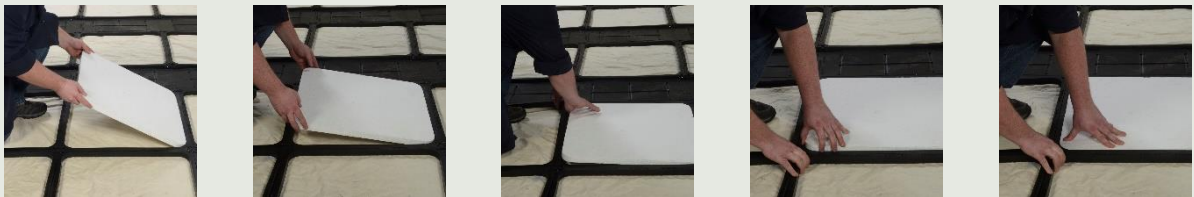



Once your EPS Pods are completely inserted your foundation should look like this:

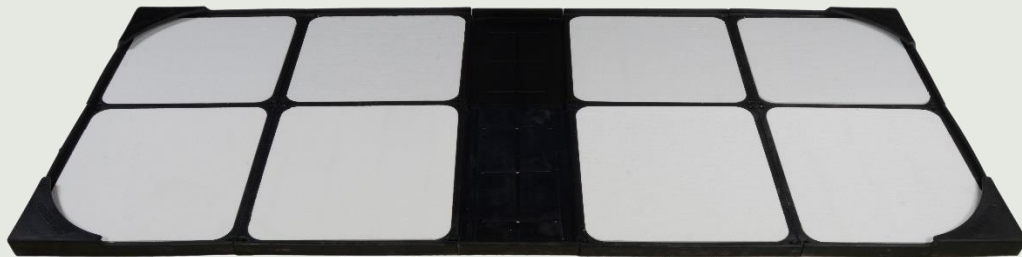

Step

05


Lay in your Fiberbuilt Grass (if you have a tee please insert it into the panel in the desired location (from underneath) prior to laying down your Fiberbuilt Grass panel.

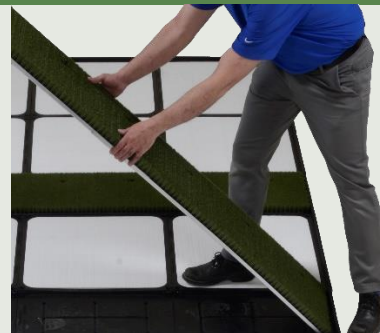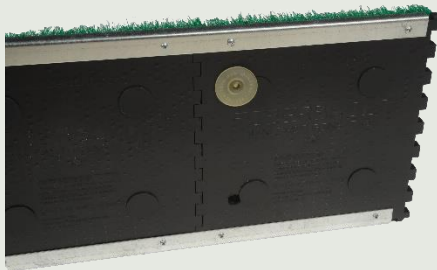

Step

06

Insert your Fiberbuilt Performance Turf into the two stance areas.

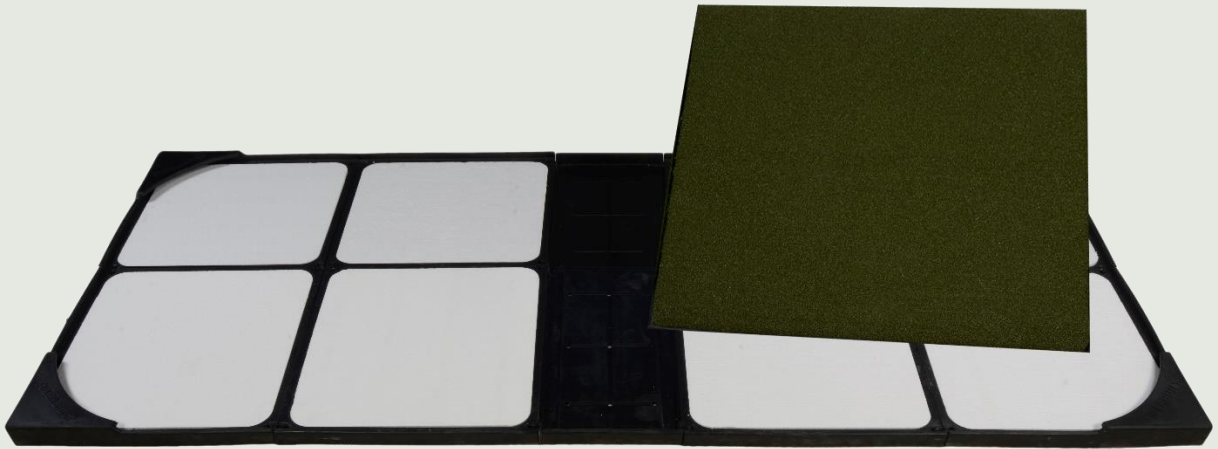

Completion

Once your mat is assembled it should look like this.

