

Kapitan Bathroom Accessories

Mounting Instructions

a. Mounting with 3M VHB self adhesive

Mounting with 3M VHB is not recommended for shower cabins



b. Mounting with screws




Clean the surface with glass cleaner and dry cloth




Use the screws to make a hole in the 3M adhesive tape pads.


Use a hairdryer to warm up the surface for 2 minutes and then the 3M adhesive for 15 sec.

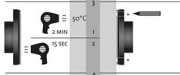

Put the base to the desired place on the wall and mark the place for drilling with a pencil through the holes

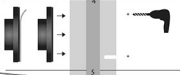

Drill the holes

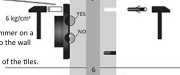

Insert the wall plugs

Although there is instant strength, it is recommended to wait for 20 min before proceed




Screw the base to the wall

Insert the stainless steel part into the central hole of the base and adjust it to the desired position



Insert the stainless steel part into the central hole of the base and adjust it to the desired position

Use the provided Allen key to fix the accessory to the base. Make sure to tighten both fixings

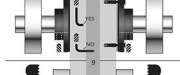

Use the provided Allen key to fix the accessory to the base. Make sure to tighten both fixings

Push the metal cap to cover the base. DONE!



Push the metal cap to cover the base. DONE!