



FLAT 6 MOTORSPORTS



# INSTALLATION GUIDE

*PORSCHE 996 / 997.1 INTAKE TUBE KIT*

## FITMENT

- 1999 - 2004 Porsche 911 Carrera / S (996)
- 2005 - 2008 Porsche 911 Carrera / S (997.1)

## TECHNICAL HELP

If you need technical assistance or help with the installation procedure, please email [info@flat6motorsports.com](mailto:info@flat6motorsports.com) for immediate help.

## IN THE BOX

- 2X Black Hose Clamps
- 1X Aluminum Block Off Cap (w/ O-Ring)
- 1X Silicone Intake Tube (Black or Red)



## TOOLS NEEDED

- Flat-head Screwdriver




## INSTALLATION STEPS

- 1) Open the engine lid of your 911 and locate the factory intake tube.



**2)** Using the flathead screwdriver, loosen all 3 hose clamps on the factory tube. After all the clamps are loose, firmly pull the factory intake tube off the throttle body and airbox.

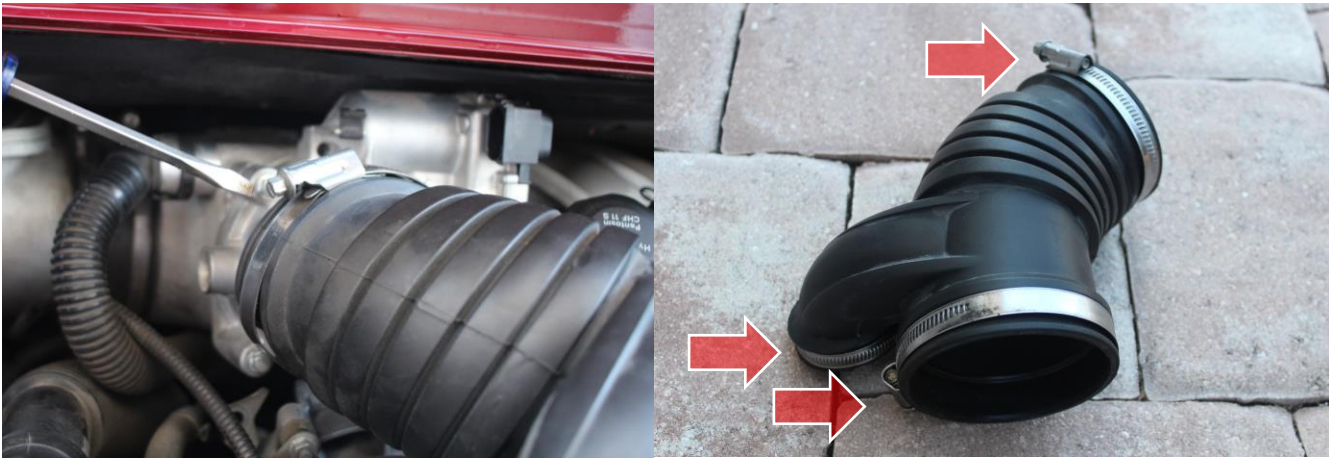

**3)** Locate the provided hose clamps, noting which one clamp is larger. Place them on the silicone tube accordingly.



**4)** Install the provided silicone tube onto the intake box, then slide over the throttle body, ensuring the tube isn't folded onto itself. Tighten clamps to a snug setting.



**5)** Next, place the rubber O-Ring onto the Machined Aluminum cap securing to the groove/cutout, and insert it into the airbox. Push down firmly on the airbox to ensure a snug fit.



***Installation of the Cold Air Intake Elbow Kit is now complete. Enjoy the clean look, enhanced sound and performance! Please contact us with any questions. Pair this modification with an aftermarket high flow air filter such as BMC for even more power gains!***



Enjoy the product? Please share your experience, pictures and videos on the Rennlist, 6SpeedOnline and social media! Tag us with @flat6motorsports or #flat6motorsports for a chance to win a gift card or a free product giveaway.