



INSTALLATION GUIDE

LED SIDE MARKERS

PORSCHE 718 / 981 / 991

FITMENT

- 2012 - 2019 Porsche 911 (Carrera / Carrera S / Carrera GTS / Turbo / GT3)
- 2013 - 2022 Porsche Boxster / Boxster S / Boxster GTS / Boxster Spyder
- 2014 - 2022 Porsche Cayman / Cayman S / Cayman GTS / Cayman GT4

TECHNICAL HELP

If you need technical assistance or help with the installation procedure, please email info@flat6motorsports.com for immediate help.

IN THE BOX

- 1X Driver's Side LED Marker Light w/ Resistor
- 1X Passenger's Side LED Marker Light w/ Resistor



TOOLS NEEDED


- Flat-Head Screwdriver
- T-25 Torx Bit / Driver
- Socket Wrench (if applicable)



- 1) Begin on either the driver's or passenger's side of the vehicle. It is helpful to turn the steering wheel inward to allow for more access to the side marker. Locate the T-25 torx screws and remove to gain access to the side marker release.



- 2) Pull back the fender liner opening and use a flat-head screwdriver and push in the silver release tab to release the side marker. It's helpful to use one hand to pry and one hand to help pull the side marker loose. The side marker will release out with a simple press of the release.

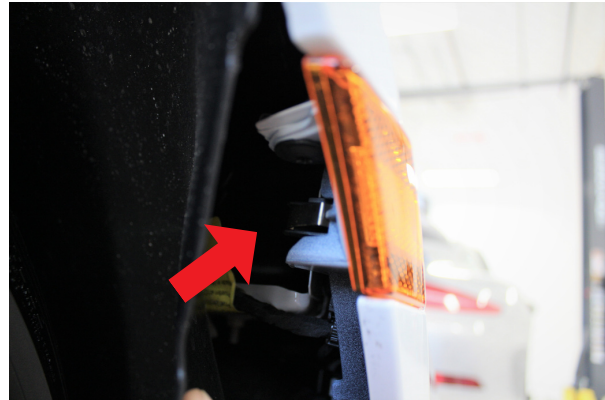

- 3) Remove the harness socket from the OEM side marker. Plug the Flat 6 Motorsports harness into the same socket, tuck the resistor into the opening and place the side marker back into the fender opening/mounting point. Make sure to press firmly to ensure a complete fit.
- 4) Follow the same procedure on the other side.

Installation of the LED Side Markers is now complete. Make sure to test the lights by putting the lighting on before driving the vehicle.

ENJOY THE PRODUCT?

Please share your experience, pictures and videos to Rennlist, Planet-9, and social media! Tag us with @flat6motorsports or #flat6motorsports for a chance to win a gift card or a free product giveaway.