



# INSTALLATION GUIDE

## LOWERING LINKS V2

PORSCHE MACAN / S / GTS / TURBO

### FITMENT

- 2015 - 2023 Porsche Macan S
- 2017 - 2023 Porsche Macan Base
- 2017 - 2023 Porsche Macan GTS
- 2015 - 2023 Porsche Macan Turbo

### TECHNICAL HELP

If you need technical assistance or help with the installation procedure, please email [info@flat6motorsports.com](mailto:info@flat6motorsports.com) for immediate help.

### IN THE BOX

- 4X Lowering Links
- 1X Lowering Guide Tool (*included with Adjustable Links*)



### TOOLS NEEDED

- Small Flat Head Screwdriver (*optional*)
- Measuring Calipers (*optional but recommended for Adjustable Links*)



- 1) To prepare for the installation of the Lowering Links, if working from a 4 post lift or on the ground, it may be helpful to put the Macan in the Off-Road Suspension Mode to gain additional height/clearance working on the vehicle.

If using a 2-post or in-ground lift, first deactivate the level control by pressing the height adjustment button and holding for 10 seconds, a message will appear on the cluster when it is switched off.

OFF ROAD MODE BUTTON (4 Post or Ground)




LEVEL CONTROL BUTTON (2 Post Lift)






- 2) Remove the key from the proximity of the vehicle and keep it away from the vehicle during install.
- 3) Locate the factory suspension links and gently pry off. If you ordered Fixed Links, simply replace with the Flat 6 Motorsports Lowering Link. If you ordered Adjustable Links, measure the length of the factory link and set the adjustable link to a desired length. A 5mm reduction in length on the adjustable link will drop the vehicle roughly 20mm or close to 1". Use the provided tool/template for additional assistance. To adjust to a -5mm or -10mm length setting, make sure the head of the Adjustable Link is flush with the bottom of the hole/slot and you can see light thru the guide.

FRONT

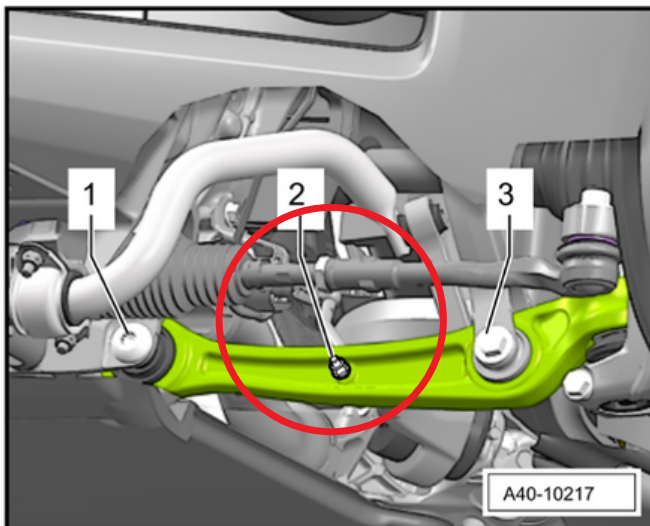

REAR

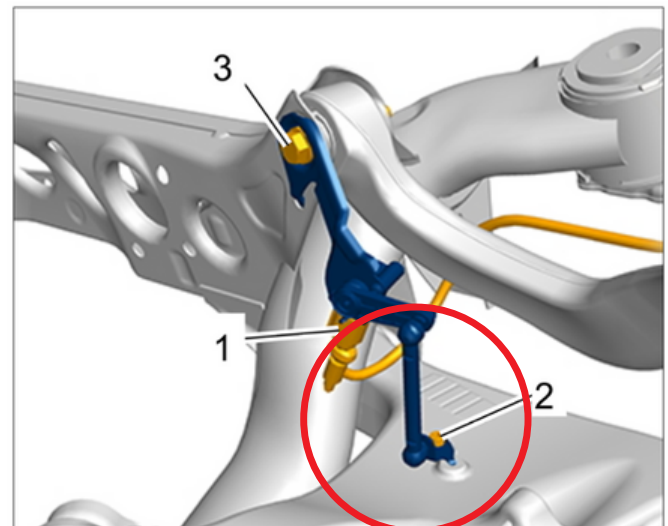

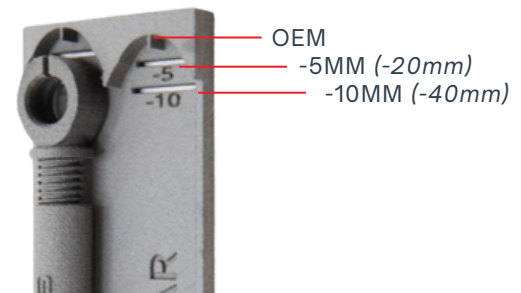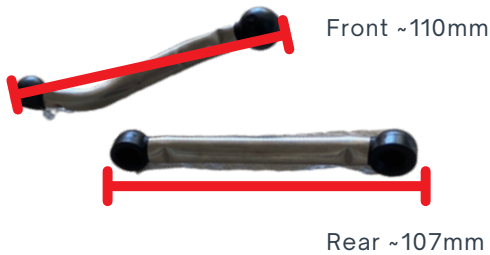**MEASUREMENTS**


- 4 )** Replace all 4 corners before opening the vehicle's door. Do not open any doors or trunk/tailgate during installation as it may interrupt the suspension mode. After completion of install, enter back into the vehicle and turn the vehicle on. You can exit the off road mode and enter whichever driving height mode you prefer. If you deactivated the level control, hold the level control button for 10 seconds, then press again to select the Low Level.

The vehicle should adapt and set with the engine running and moving over 4 mph. You may need to drive the vehicle for a moment, park and shut off the vehicle and open the door and lock it for the suspension to fully adjust.

- 5 )** To fine tune any adjustment, simply remove one end of the Adjustable Lowering Link from and shorten or lengthen the height of the adjustable link. It is important to do on both axles as needed to keep proper balance. Save your original links in case you need to revert back to stock at any time. The adjustable links do provide adjustment to raise the vehicle to stock height but it is best practice to keep the OEM links.

**ENJOY THE PRODUCT?**

Enjoy the product? Please share your experience, pictures and videos on the MacanForum and social media! Tag us with @flat6motorsports or #flat6motorsports for a chance to win a gift card or a free product giveaway.

