




>>> INSTALLATION <<<

This is an example for Porsche Macan GTS 2.9 L. The installation may vary for your car.

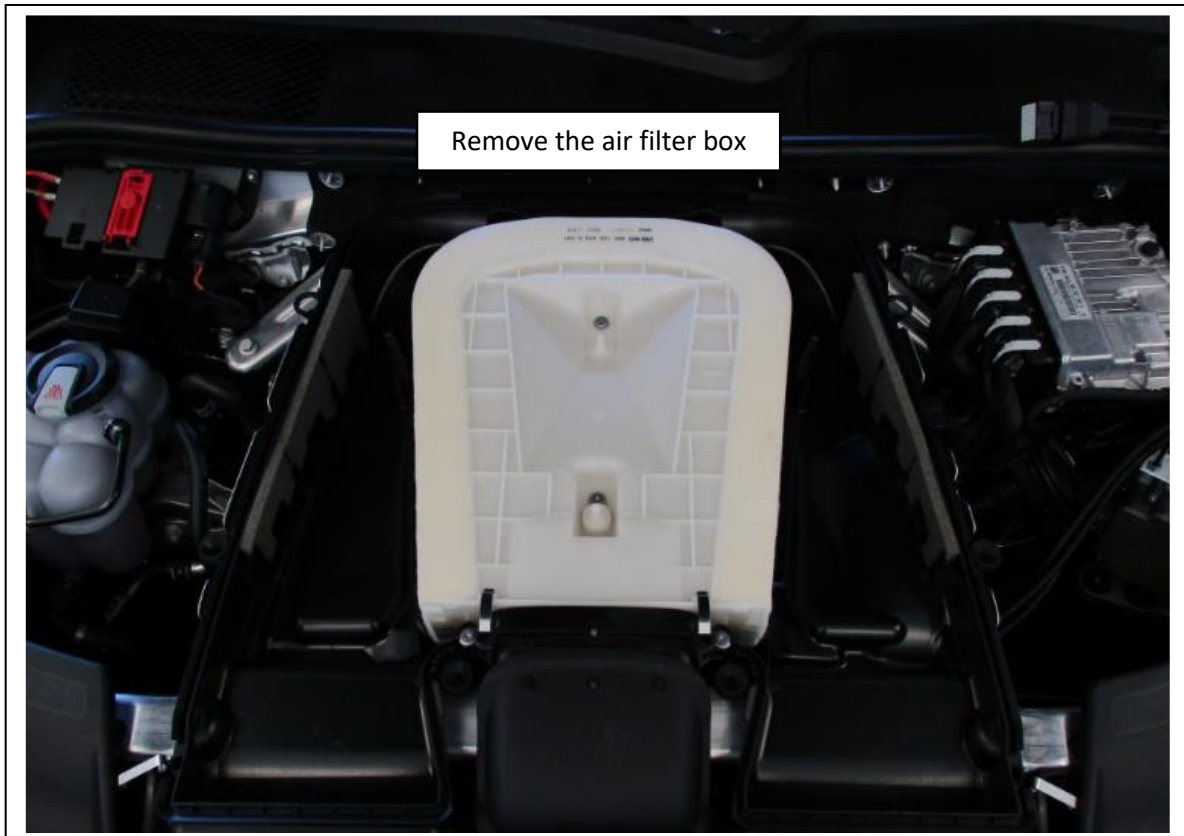

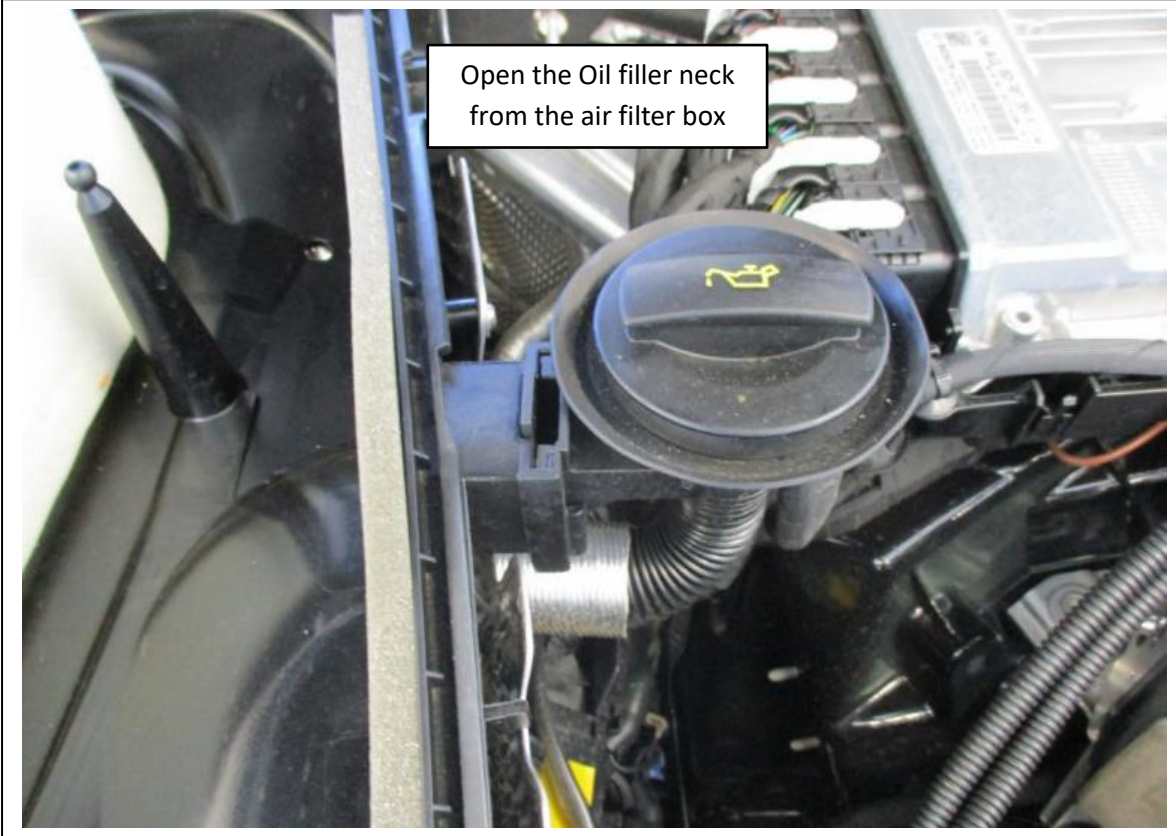

Open the Oil filler neck from the air filter box

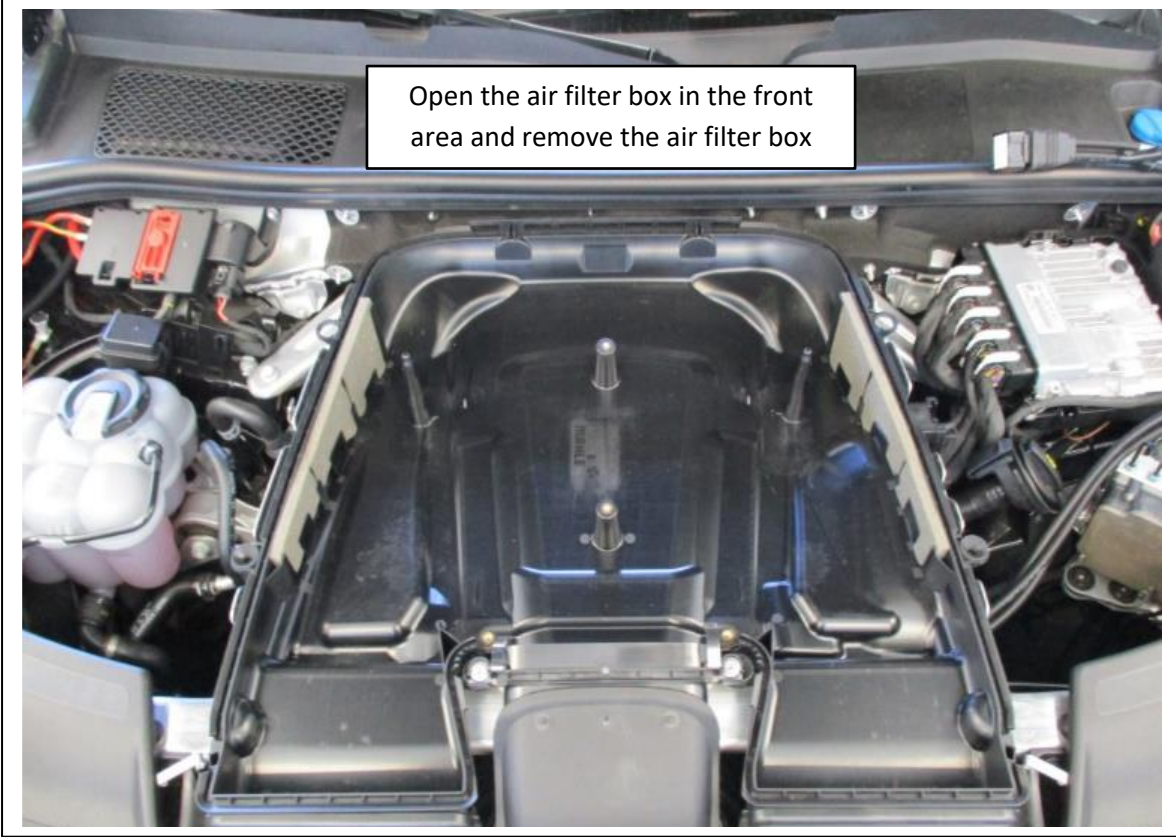

Open the air filter box in the front area and remove the air filter box

