

## APPLICATION INSTRUCTIONS

### PREMIUM PUZZLE PIECE ADHESIVE

Congratulations on the purchase of your new custom Premium Standing Solution! Included are custom Adhesive Strips to apply to the back of your mat, should you desire a seamless and secure bond.

## STEPS FOR APPLICATION:




1

Flip your mat over so the top side is laying face-down on a clean, flat surface.



2

Using warm water and a soft cloth, wipe down the backside of the mat to clear any dirt or dust. It is important that the adhesive strips are applied to a clean & dry surface.

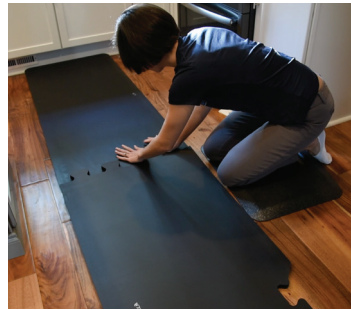

3

Firmly press the puzzle sections together so the seams are tight.



4

Lay the adhesive strip along the seam to ensure proper alignment. The tape should be 1" away from the edges of your mat. Using a pencil or marker, you may also mark where the tape should lay to serve as a guide.



5

Starting at one end of the tape, gently peel the backing off, exposing about 1/4 of the adhesive. Place the sticky side down on the mat.




6

Slowly peeling the backing off as you go, continue to gently press the adhesive down along the seam, following your guides.



7

Once completely in place, press the tape down completely so it is even and smooth.

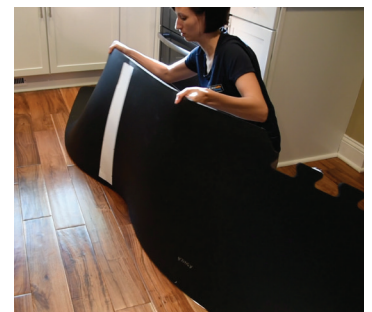

8

Your mat can now be flipped back over – the puzzle seam should be flush and secure.

## IMPORTANT NOTES:

- Premium PuzzlePiece Adhesive is not intended to be removed unless done so with extreme care.
- Only WellnessMats/Smart Step Premium PuzzlePiece Adhesive should be used on our products - do not use other adhesives or tapes as they may cause damage that will not be covered under warranty.
- Your order should contain the correct number of adhesive strips needed for your custom mat. If you would like to order more strips, please contact our Customer Service Team at 800.981.4979.
- Products with adhesive applied will not be available for exchange but will remain eligible for warranty coverage.