


## Instructions – Midi Gro House

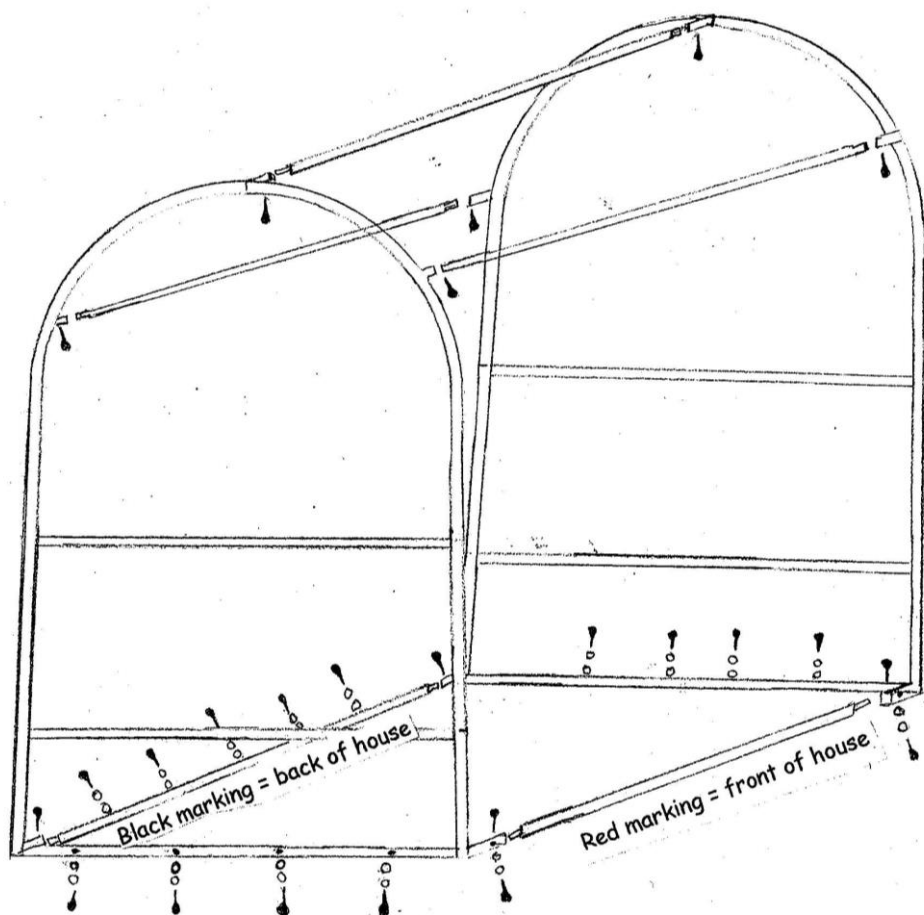

1. Position hoops on a level site and connect the two hoops together, matching the painted coloured parts together. Insert the roof bar into each socket at the top of hoops and the base bars at the bottom. Insert 10 single screws into pre drilled holes where indicated in diagram. Tighten using a drill.
2. Lower the bench/es onto the brackets and push down for a firm fit
3. Once the frame is erected wipe the frame down with a rag soaked in methylated spirits or similar to clean the surface.
4. Adhere frame tape provided to the top sections of the frame and midway down the sides. (Frame tape is for the plastic cover only -this tape will help to protect the plastic cover against excessive heat exposure)
5. Turn cover inside out so label is facing the to the outside. Slide the cover over the frame. Pull down firmly around hoops towards the front and carefully close zips, do not strain zips. Pull down firmly to ground level, then screw cover on using a screw together with the steel washer, then rubber washer. Screw through reinforcing webbing into pre-drilled holes around the base of the house. See diagram for positioning.
6. Slide blind slat into the hem of the roll up door.
7. Use earth pegs provided to secure the house down. If installed on ground, at each peg location dig a hole 30cm more than the depth of the peg, 200mm in diameter. Insert peg & back fill with 'quick set' cement. If on concrete use masonry fixings (not supplied).

Note: Wind damage may occur if the house is not securely fixed to the ground with fixings provided.

Enquire about Shade/Rain Caps for added plant protection.