

Point Boot Kit Instruction Manual



Parts Included

1 x Point Boot Kit Includes:

1 x Tyne Frame

1 x Backshoot

1 x U-Bolt

2 x M12 x 45 Bolt

4 x M12 Nyloc Nut

1 x Adaptor

1 x Lynch Pin


1 x Slot Mate Point

2 x 1/2 x 2 3/4 Bolt

2 x 1/2 Nyloc Nut


Step 1:

Attach the adaptor to the tyne using the main bolts

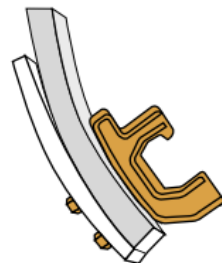


Step 2:

Attach the tyne frame to the tyne using the main 2 bolts. Tighten the nuts and then fasten the U-bolt to the top for additional support. **Do not tighten the U-bolt before the main bolts.**

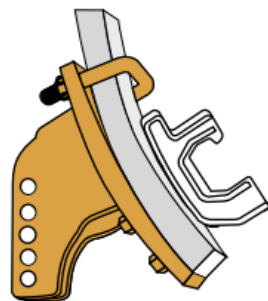


Step 3:

After determining your desired closer plate height and angle (see options 1&2) fix the backshoot to the tyne frame and fasten using the nuts and bolts provided.

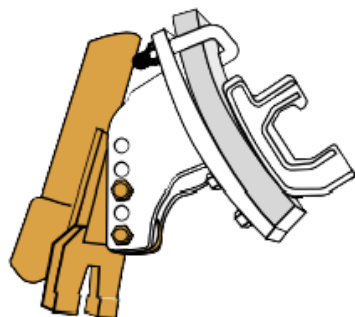


Option 1:

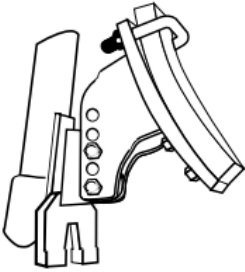

Standard Angle

- Recommended for dry, sandy or lighter soils.

Option 2:

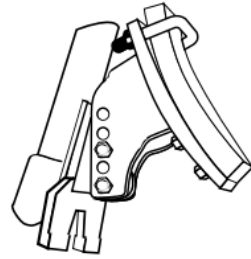


Tilt Back Angle

- Recommended for heavy or wet soils.


Step 4:

Insert the seed hose into the backshoot and tyne frame. If you are using hose adaptors fix the adaptors into the backshoot first and then insert the seed hose.

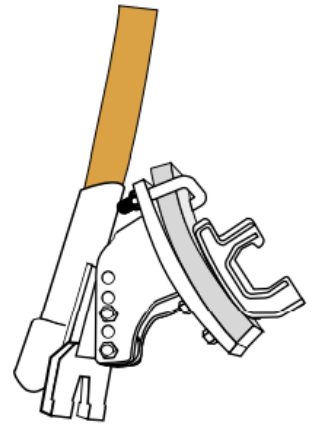

Step 5:

Insert your point into the adaptor and use the lynch pin provided to keep the point in place.

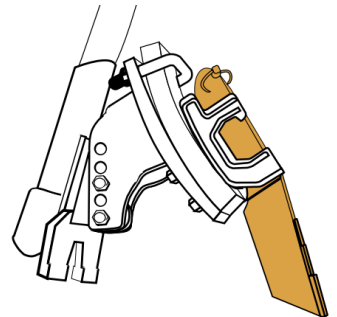

If you have any questions about installing your Point Boot Kit please do not hesitate to give us a call on **08 9354 1111**

Reorder Part No.

U-Bolt	FA-0703
M12 x 45 Bolt	FA-0223
M12 Nyloc Nut	FA-0403
Lynch Pin	FA-0802
1/2 x 2 3/4 Bolt	FA-0323
1/2 Nyloc Nut	FA-0410

We love seeing our products ready for action!

Text a photo to **0499 225 219**
along with your name and
postage address and we will
send you a FREE Maxipoint hot
sauce!

