



Point  
Boot Kit  
**Instruction  
Manual**

Here are some guidelines to help you correctly install your Point Boot Kit for optimized performance.

# Parts Included

## 1x Point Boot Kit Includes:

1x Tyne Frame

1x Backshoot

1x U-Bolt

2x M12 x 45 Bolt

4x M12 Nyloc Nut

1x Adaptor

1x Lynch Pin


1x Slot Mate Point

2x ½ x 2¾ Bolt

2x ½ Nyloc Nut


## Step 1:

Attach the Adaptor to the tyne using the main bolts.

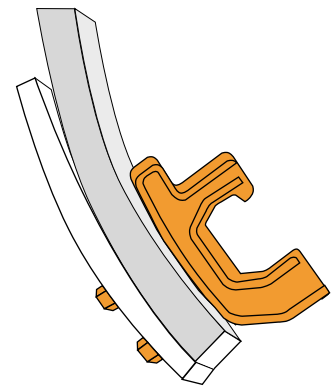


## Step 2:

Attach the Tyne frame to the tyne using the main 2 bolts. Tighten the nuts and then fasten the U- Bolt to the top for additional support. **Do not tighten the U-Bolt before the main Bolts.**

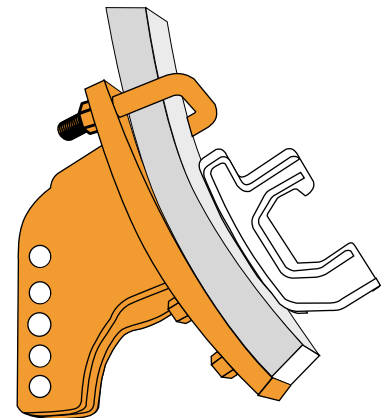


## Step 3:

After determining your desired closer plate height and angle (see option 1 & 2) fix the backshoot to the tyne frame and fasten using the nuts and bolts provided.

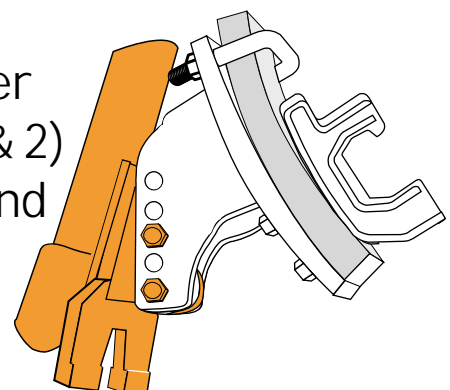


## Option 1:

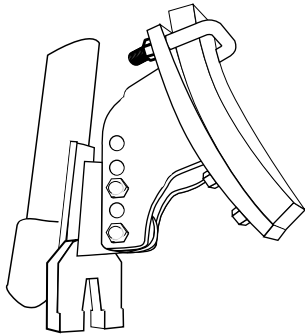

### Standard Angle

- Recommended for dry, sandy or lighter soils

## Option 2:

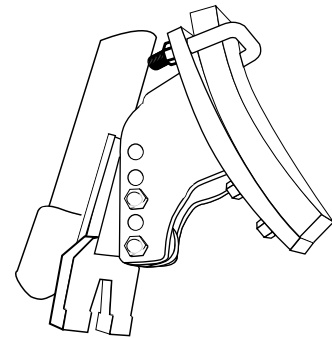


### Tilt Back Angle

- Recommended for heavy or wet soils.


## Step 3:

Insert the seed hose into the backshoot and tyne frame. If you are using hose adaptors fix the adaptors into the back shoot first and then insert the seed hose.

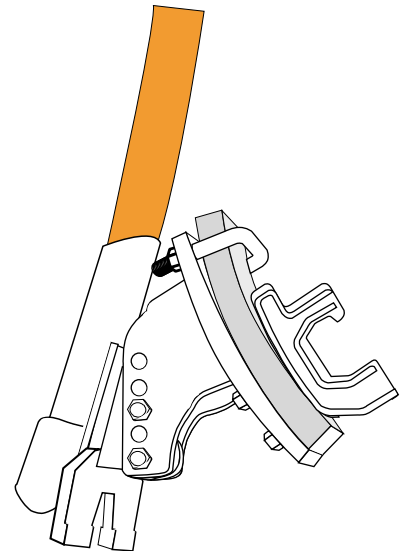

## Step 4:

Insert your point into the adaptor and use the lynch pin provided to keep the point in place.

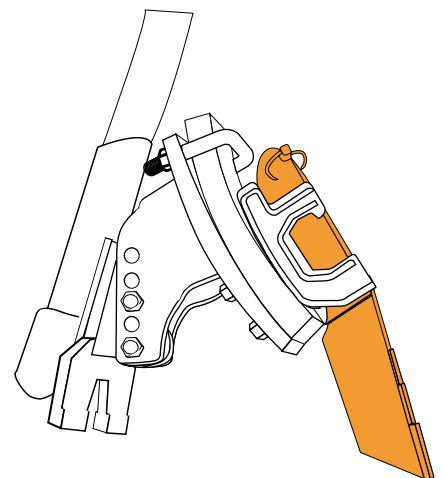

If you have any questions about installing your Point Boot Kit, please do not hesitate to give us a call on 08 9354 1111

## Reorder Part No.

Part	Part No.
U-Bolt	FA-0703
M12 x 45 Bolt	FA-0223
M12 Nyloc Nut	FA-0403
Lynch Pin	FA-0802
½ x 2¾ Bolt	FA-0323
½ Nyloc Nut	FA-0410

\*For all other parts please see our website or price guide

[www.maxipoint.com.au](http://www.maxipoint.com.au)



Tel: 08 9354 1111

[sales@maixpoint.com.au](mailto:sales@maixpoint.com.au)

HEAD OFFICE: 69-71 Catalano Circuit, Canning Vale 6155, WA