

Seed Boot Kit Instruction Manual

Here are some guidelines to help you correctly install your Seed Boot Kit for optimized performance.

Parts Included

1x Seed Boot Includes:

1x Tyne Frame

1x Backshoot


1x U-Bolt

2x M12 x 45 Bolt

Option 1:

Standard Angle


- Recommended for dry, sandy or lighter soils

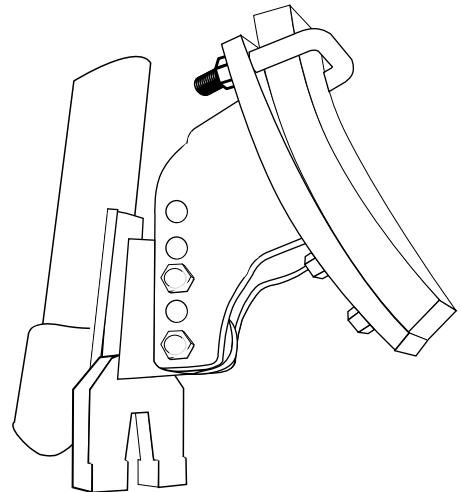

Option 2:


Tilt Back Angle

- Recommended for heavy or wet soils.

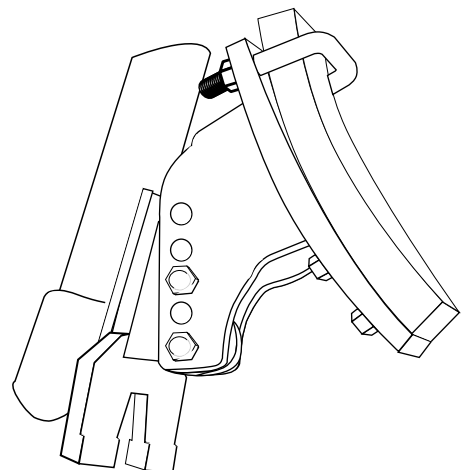


Step 1:

Attach the Tyne frame to the tyne using the main 2 bolts. Tighten the nuts and then fasten the U-Bolt to the top for additional support. **Do not tighten the U-Bolt before the main Bolts.**

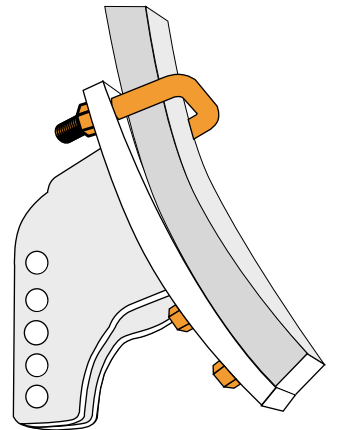


Step 2:

After determining your desired closer plate height and angle (see option 1 & 2) fix the backshoot to the tyne frame and fasten using the nuts and bolts provided.

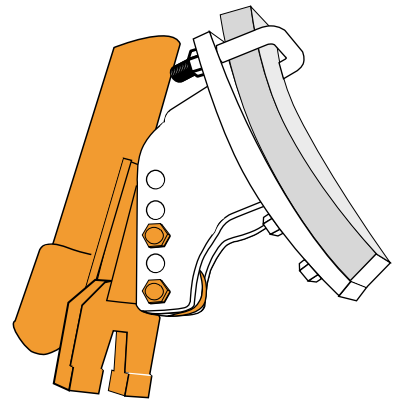

Step 3:

Insert the seed hose into the back shoot and tyne frame. If you are using hose adaptors fix the adaptors into the back shoot first and then insert the seed hose.

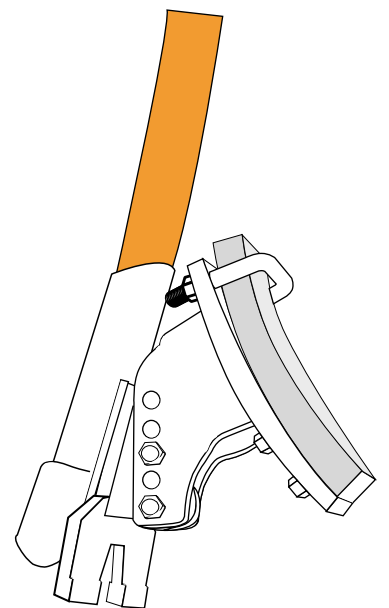

If you have any questions about installing your Boot Kit please do not hesitate to give us a call on 08 9354 1111

Reorder Part No.

Part	Part No.
U-Bolt	FA-0703
M12 x 45 Bolt	FA-0223
M12 Nyloc Nut	FA-0403

*For all other parts please see our website or price guide

www.maxipoint.com.au



Tel: 08 9354 1111

sales@maxipoint.com.au

HEAD OFFICE: 69-71 Catalano Circuit, Canning Vale 6155, WA