
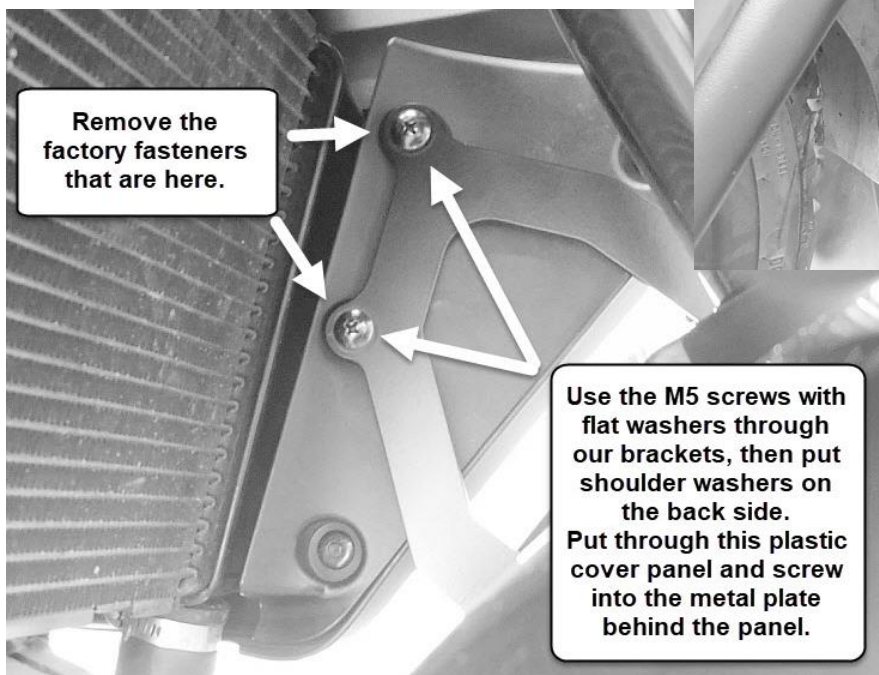
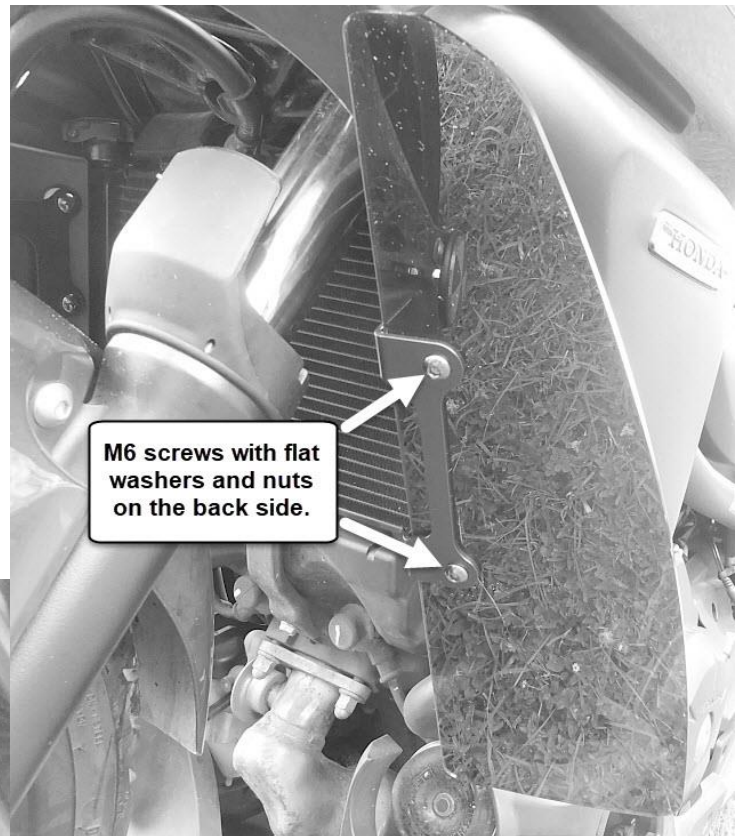


MADSTAD

ENGINEERING

Honda CTX700D – Lowers Kit

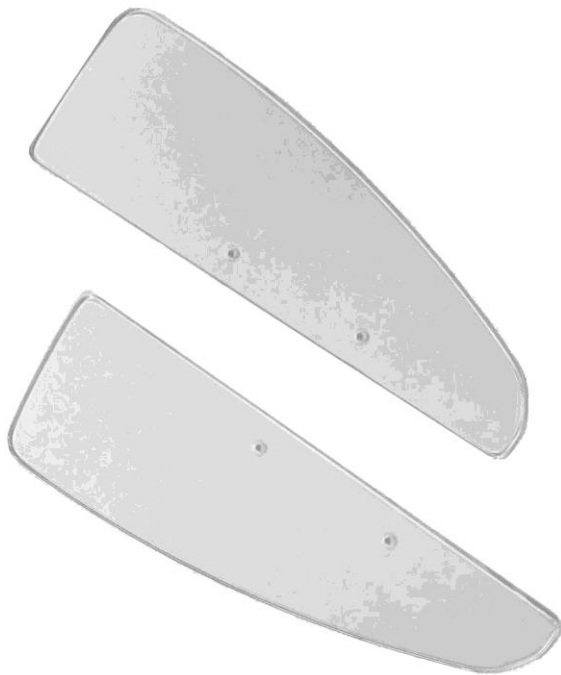

Use the M5 screws with flat washers through our brackets, then put shoulder washers on the back side. Put through this plastic cover panel and screw into the metal plate behind the panel.