



## Adjustable Windshield Mount

KTM 1290 SA 2015-2016

*Please read this entire manual before proceeding with installation.*

### What is in the box:

- (1) KTM 1290 brackets set
- (4) M5 x 12 screws
- (4) M5 lock washers
- (4) M5 flat washers
- (4) M5 x 30 truss screws
- (4) plastic flat washers



### **Tools Needed:**

- T-30 Torx (star) driver
- #2 Phillips screwdriver


These MadStad adjustable windshield brackets are designed to bolt to the factory windshield mounting points and the factory shield (or any other aftermarket shield made for the 1290 SA) attaches to the front of our brackets.

## INSTALLATION OVERVIEW

The MadStad brackets attach to the stock windshield mounting holes. Before you begin installation, lower the stock shield all the way down, lock the factory height adjusters in place and remove the stock shield using a T-30 Torx driver or bit. (You will not need these screws for the MadStad brackets.)

**BRACKETS:** – Attach the MadStad brackets to the factory windshield mounting points. Use the M5 Phillips screws, lock washers and flat washers that came with the kit. First slide an M5 lock washer then a flat washer onto each M5 screw, and run that through our bracket mounting holes and into the threaded factory holes. The adjustment knobs and windshield mounting tabs should face inward toward the center of the bike (see image at right).


**NOTE:** Turn the factory height adjustment knobs to lower the factory brackets to their lowest position. You will be able to use the MadStad adjustment knobs to control both height and angle.

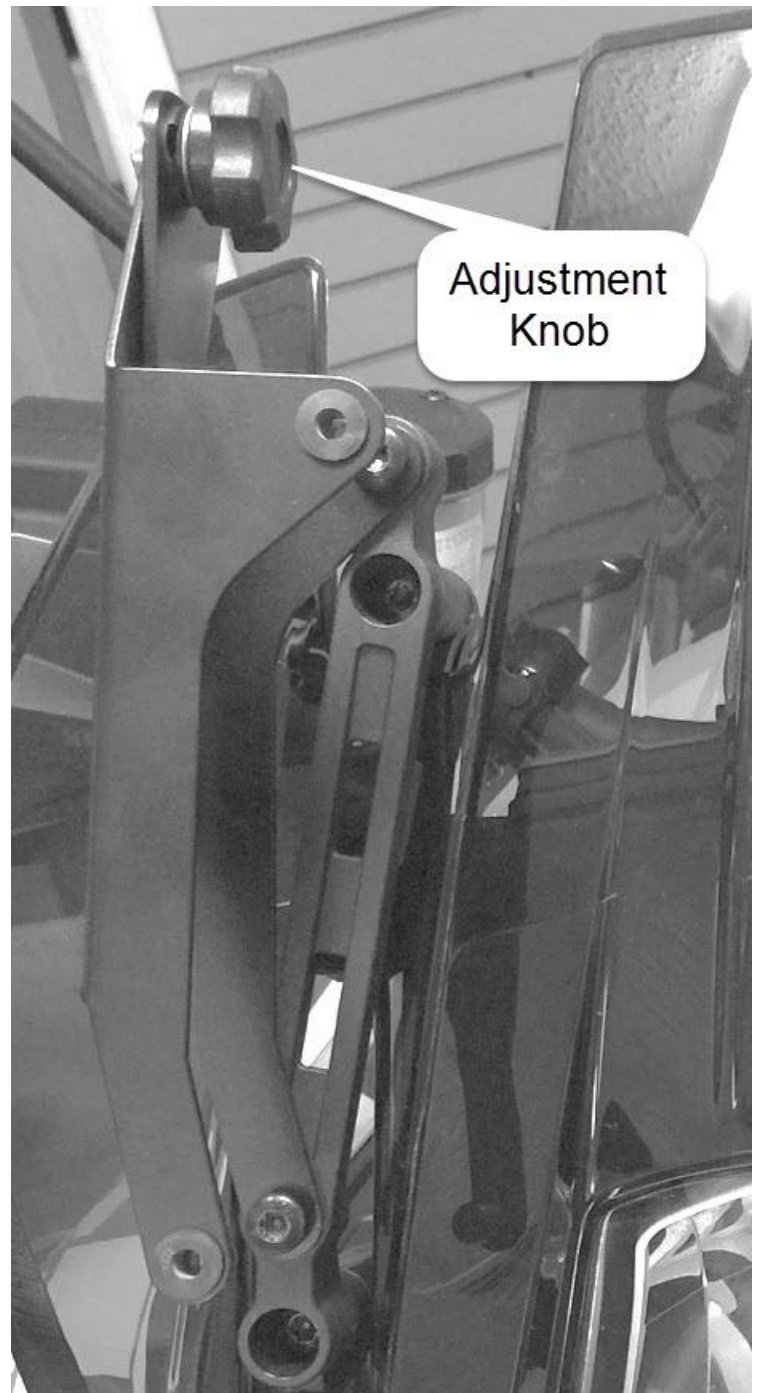

# Windshield Installation

1. Pre-install the Truss screws & washers into the windshield holes as shown in the image below.
2. Once all four of the screws are in place, gently guide the screws into the Well Nuts in the brackets until all four are set.
3. Hand tighten the Truss screws until they swell up behind the bracket and are firmly holding the windshield.

## Windshield Layout:

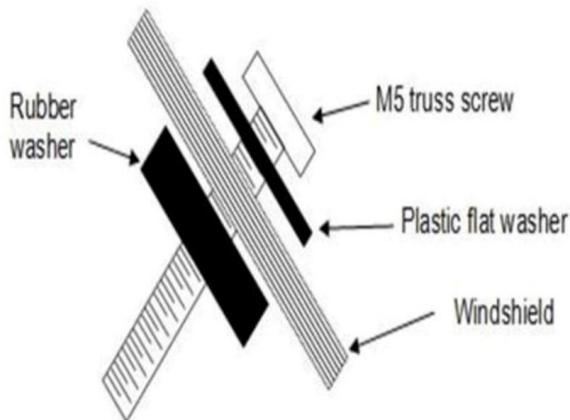

## Well Nut Tips:



Not Tightened



Over Tightened



Correct

**\*\*HAND TIGHTEN\*\***

## Adjusting the MadStad Brackets

The knob screws release the brackets allowing the windshield to slide and tilt. These knob screws must always be tightened securely before riding. **DO NOT** attempt to adjust the brackets while riding! You must come to a complete stop before making adjustments. Also make sure that you do not set the windshield in such a way that causes your handlebars or hand guards (if installed) to hit the windshield when turning, or before reaching full lock.

To make adjustments, loosen the knobs 1-2 turns and set the windshield so the top edge is at about your chin level as you look straight ahead while seated on the bike. Set the angle at approximately 60 degrees. (Use the angle guide on the back page of this manual as a guide.) Tighten the knobs and go for a ride to see if you now have smooth airflow over and around your helmet. Do this on a calm day if at all possible; windy days make it hard to judge the airflow. Don't ever try to adjust the mount while in motion!

To try a different windshield position, bring the motorcycle to a complete stop and out of traffic. Loosen the two knob screws and tilt the windshield forward or back 2-3 degrees or so, and/or adjust it up or down if necessary. Re-tighten the knobs and go for another ride.

Continue experimenting with different positions at different speeds until you find a combination of height and rake angle that eliminates buffeting and gives a smoother ride. You may have more than one favorite position, for example shield tilted forward on cooler days, and shield tilted back for hot days to let more air to your body.

### Notes on Windshield Angle

Most windshields work best when set at a 55-60 degree angle. We have provided an angle guide **on the back page of this manual** so that you can check and see if your shield is set somewhere in this range.

To check your shield angle, your bike should be in an upright position either on a center stand or held up by a helper. Set the spine (folded edge) of the manual against the front of the shield. If the large arrow marked 60° is pointing straight up, then your shield is at a 60 degree angle. (See diagram on Page 5.) A little farther back and your angle would be somewhere between 55 and 60 degrees. Anywhere in this range is fine for your initial test ride. On some bikes a more vertical angle works better, so don't be afraid to experiment later if tilting the shield back doesn't seem to be ideal.

## **PIVOT SCREWS**

The MadStad mount has a pivot screw on each set of brackets, located near the center of the bottom bracket. A nylon lock nut keeps the screw snugly in place, yet allows the brackets to slide back and forth. It is adjusted at the factory to have a minimum of play yet still allow the brackets to move.

If for some reason you wish to adjust the tightness of this pivot screw or move it to an alternate pivot position, use a 4mm Allen wrench along with a 10mm socket or crescent wrench to make the adjustment. If you tighten the lock nut completely you will not be able to slide the brackets.

## **Disclaimer**

Neither MadStad Engineering nor its owners shall be liable for any damages, consequential or inconsequential, resulting from the use of our products. Installation of any of our products constitutes acceptance of these terms.

It is the responsibility of the user to make sure all fasteners are tightened securely, the windshield is mounted properly and the adjustment knobs are tightened snugly before putting the motorcycle in motion. MadStad systems ARE NOT intended to be adjusted while the vehicle is in motion; you must pull over out of the way of traffic and come to a complete stop before making any changes. The user must never place the windshield in such a position as to interfere with the safe and complete movement of the handlebars and controls.

## **Returns and Warranty**

If you are not satisfied with your new windshield system you have 30 days to return it. Full details are available on our web site at [www.madstad.com](http://www.madstad.com). If purchased from a dealer then please contact the dealer for their return policy.

MadStad adjustable brackets carry a lifetime warranty against manufacturing defects. This does not include cosmetic issues nor any parts that inherently wear out or degrade over time such as rubber and plastic parts. Windshields, deflectors and other similar plastic parts are warranted for 1 year against manufacturing defects, not against cosmetic issues or issues related to normal wear and tear.


# MadStad Engineering, Inc.

1451 E. Jefferson Street  
Brooksville, FL 34601 U.S.A.  
Phone: 352-848-3646

Web Site: <http://www.madstad.com>

Email: [support@madstad.com](mailto:support@madstad.com)

*Thank you for your support, and ride safely!*

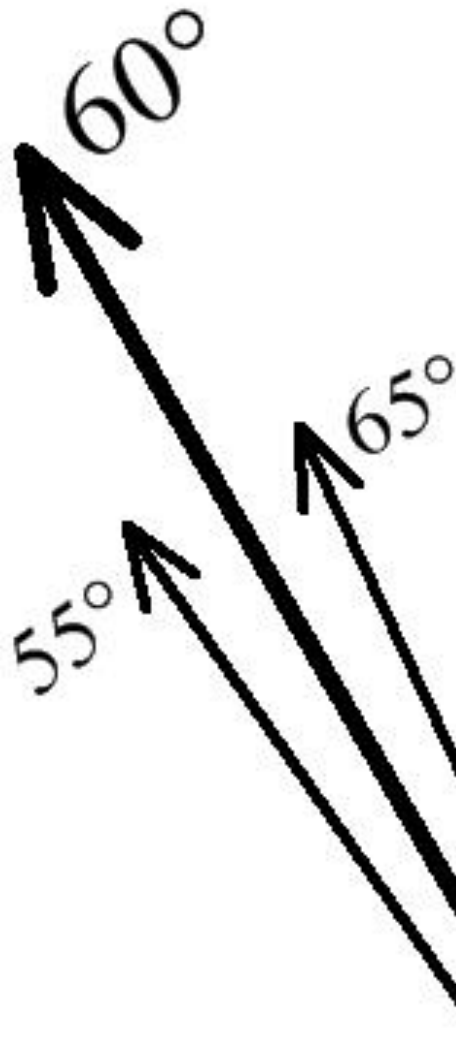

This edge against shield.

April 12, 2018