



MadStad Robo Knob Brackets Adjustable Windshield Mount

Triumph Scrambler / Bonneville

Please read this entire manual before proceeding with installation.

What is in the box:

- (1) Scrambler / Bonneville Brackets
- (1) Windshield
- (4) Aluminum spacers
- (4) M5 x 25 Philips screws
- (4) M8 x 50 screws
- (4) M5 black plastic washers
- (8) M8 flat washers
- (4) 4 rubber washers



This MadStad system attaches above your handlebar clamps using aluminum spacers and longer bolts. Your handlebars do not need to come loose as you can install these brackets one side at a time.


Bracket Installation:

STEP 1 - Pry off all four plastic bolt caps that are on your handlebar bolts. You will not need these, but save them.

STEP 2 – Using an 6mm Allen wrench, remove the two handlebar clamp bolts **ON ONE SIDE ONLY** and **DO NOT** remove the top clamps, only the bolts. (If you remove all four handlebar clamp bolts of your bars will come loose!)



STEP 3 – Set two of the M8 bolts with flat washers through one of the two MadStad brackets. On the other side put another flat washer and then a spacer on each bolt. This setup will go in through the handlebar clamp and bolt down. The complete picture of how the bolts, washers, spacers and clamp go together is shown below:

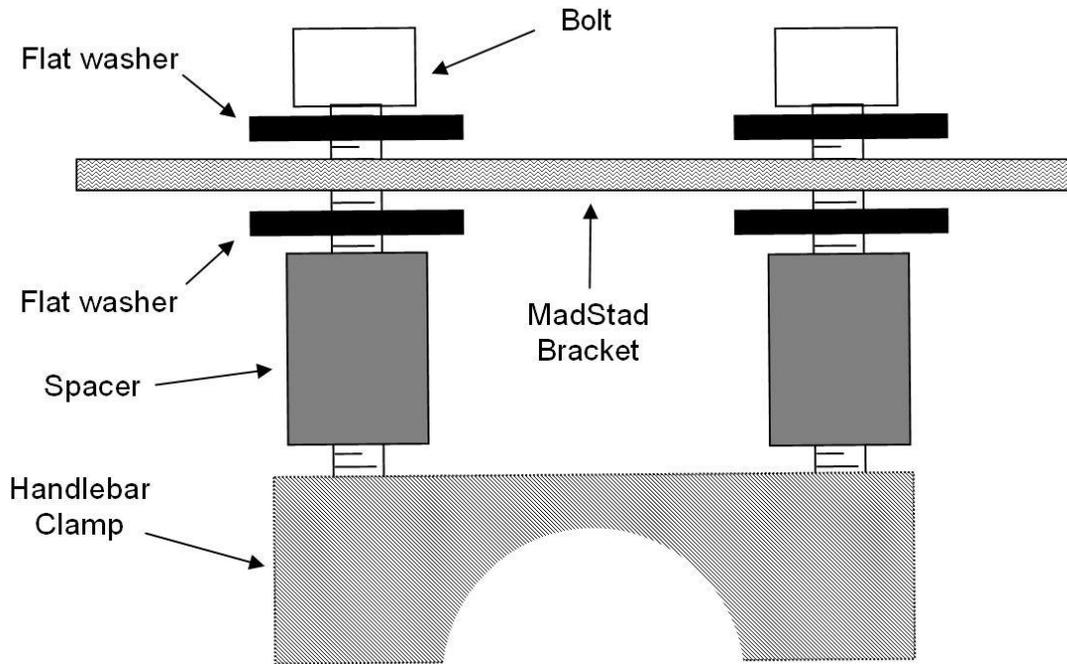


STEP 4 – Take this the bracket-and-hardware assembly and bolt it down.

NOTE: *Tighten the front bolt completely first, then tighten the back bolt to factory specifications. Do not move on to the second handlebar clamp until the first one is bolted down, otherwise the bar will come loose and will rotate out of place.*

STEP 5 – Repeat steps 2, 3 and 4 for the other half of the brackets. Use the same hardware configuration for this as you did on the other side of the crossbar. Once the crossbar is installed, then finish tightening down the bar clamp bolts same as you did in Step 4.

STEP 6 - Windshield Installation

Once bracket attachment is complete, the windshield attaches to the brackets with Phillips truss screws, plastic flat washers and rubber washers. Insert all four screws and washers into the four windshield holes (as shown the diagram at right) before attaching the windshield onto the MadStad brackets. The rubber well nuts are flexible and the shield holes are oversized so you can nudge the shield and screws around to get them into the well nuts. Once that's done go ahead and screw the four screws down until they are snug, which means the screw tip has gone past the back of the well nut, the well nuts have swelled up a bit and the shield is resting snugly against the brackets. **DO NOT OVERTIGHTEN!** Over-tightening can damage the rubber well nuts.

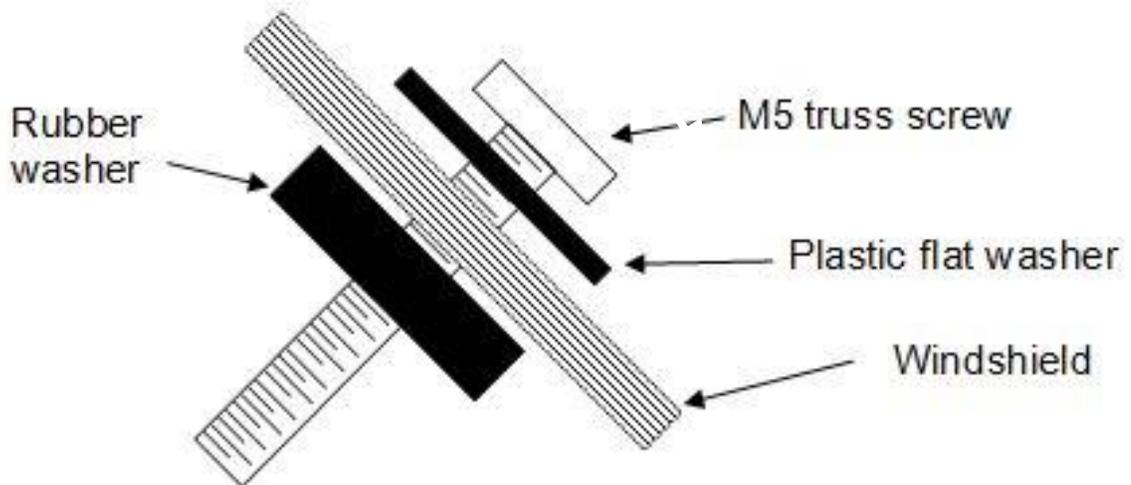

Adjusting the MadStad Knob Brackets

The knob screws release the brackets allowing the windshield to slide and tilt. These knob screws must always be tightened securely before riding. **DO NOT** attempt to adjust the brackets while riding! You must come to a complete stop before making adjustments. Also make sure that you do not set the windshield in such a way that causes your handlebars or hand guards (if installed) to hit the windshield when turning, or before reaching full lock.

To make adjustments, loosen the knobs 1-2 turns and set the windshield so the top edge is at about your chin level as you look straight ahead while seated on the bike. Set the angle at approximately 60 degrees (roughly the same angle as your forks). You can also use the angle diagram on the back page of this manual as a guide. Tighten the knobs and go for a ride to see if you now have smooth airflow over and around your helmet. Do this on a calm day if at all possible; windy days make it hard to judge the airflow. Don't ever try to adjust the brackets while in motion!

To try a different windshield position, bring the motorcycle to a complete stop and out of traffic. Loosen the two knob screws and tilt the windshield forward or back 2-3 degrees or so, and/or adjust it up or down if necessary. Re-tighten the knobs and go for another ride.

Continue experimenting with different positions at different speeds until you find a combination of height and rake angle that eliminates buffeting and gives a smoother ride. You may have more than one favorite position, for example shield tilted forward on cooler days, and shield tilted back for hot days to let more air to your body.

PIVOT SCREWS

The MadStad mount has a pivot screw on each set of brackets, located near the center of the bottom bracket. A nylon lock nut keeps the screw snugly in place, yet allows the brackets to slide back and forth. It is adjusted at the factory to have a minimum of play yet still allow the brackets to move.

If for some reason you wish to adjust the tightness of this pivot screw, use a 4mm Allen wrench along with a 10mm socket or crescent wrench to make the adjustment. If you tighten the lock nut completely you will not be able to slide the brackets.

Notes on Windshield Angle

Most windshields work best when set at a 55-60 degree angle. We have provided an angle guide **on the back page of this manual** so that you can check and see if your shield is set somewhere in this range.

To check your shield angle, your bike should be in an upright position either on a center stand or held up by a helper. Set the spine (folded edge) of the manual against the front of the shield. If the large arrow marked 60° is pointing straight up, then your shield is at a 60 degree angle. (See diagram on Page 5.) A little farther back and your angle would somewhere between 55 and 60 degrees. Anywhere in this range is fine for your initial test ride. On some bikes a more vertical angle works better, so don't be afraid to experiment later if tilting the shield back doesn't seem to be ideal.

Disclaimer

Neither MadStad Engineering nor its owners shall be liable for any damages, consequential or inconsequential, resulting from the use of our products. Installation of any of our products constitutes acceptance of these terms.

It is the responsibility of the user to make sure all fasteners are tightened securely, the windshield is mounted properly and the adjustment knobs are tightened snugly before putting the motorcycle in motion. MadStad systems ARE NOT intended to be adjusted while the vehicle is in motion; you must pull over out of the way of traffic and come to a complete stop before making any changes. The user must never place the windshield in such a position as to interfere with the safe and complete movement of the handlebars and controls.

Returns and Warranty

If you are not satisfied with your new windshield system you have 30 days to return it. Full details are available on our web site at www.madstad.com. If purchased from a dealer then please contact the dealer for their return policy.

MadStad adjustable brackets carry a lifetime warranty against manufacturing defects. This does not include cosmetic issues nor any parts that inherently wear out or degrade over time such as rubber and plastic parts. Windshields, deflectors and other similar plastic parts are warranted for 1 year against manufacturing defects, not against cosmetic issues or issues related to normal wear and tear.

MadStad Engineering, Inc.

1451 E. Jefferson Street
Brooksville, FL 34601
Phone: 352-848-3646

Web Site: <http://www.madstad.com>

Email: support@madstad.com

Thank you for your support, and ride safely!

