


MadStad Storm Installation

Fork-Mount Brackets:


Install these first. Everything else attaches to these brackets.



Remove the factory top bolt on the bottom fork clamp. Install bracket as shown below but do not fully tighten.

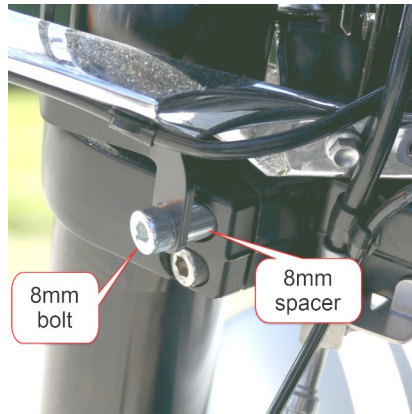

Remove the factory bolt on the top fork clamp. Install bracket as shown then fully tighten both top and bottom.

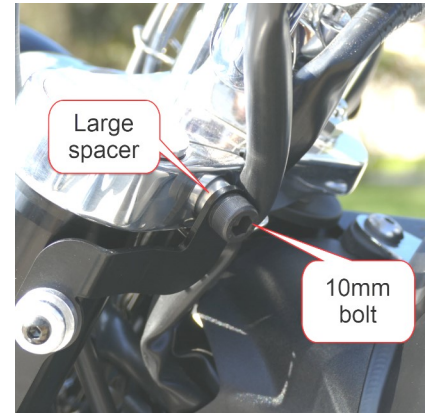

Attaching the Windshield or Fly Screen:

We recommend that you snap the windshield brackets onto the bike BEFORE attaching the windshield. Once the shield brackets are locked in place, then screw the shield to the brackets. After that you can remove and install them as a unit.

1. Rotate locking tabs against brackets as shown below.




2. Set brackets onto aluminum mounting spools.




3. Fully seat brackets into the slots on the spools.



4. Pull up on the locking tab and rotate onto the spools.

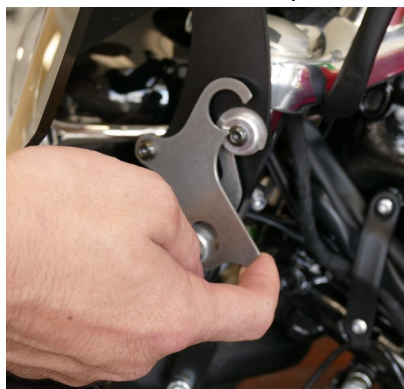

5. Make sure the locking tab is fully pushed down over the two spools.

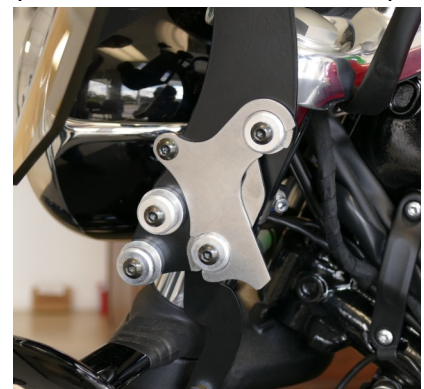

Attaching the Lower Deflectors:

Set brackets onto aluminum mounting spools. Rotate locking tab up as shown.



Fully seat brackets into the slots on the spools.



Pull up on the locking tab and rotate between the spools. You may need to push on the spring from the inside.



Make sure the locking tab is fully pushed down between the two spools.

