


Deck Armor System Steps

- 1) Primer
- 2) Roll Out 40 mils Deck Armor 300
- 3) Broadcast Beads
- 4) Clear Coat

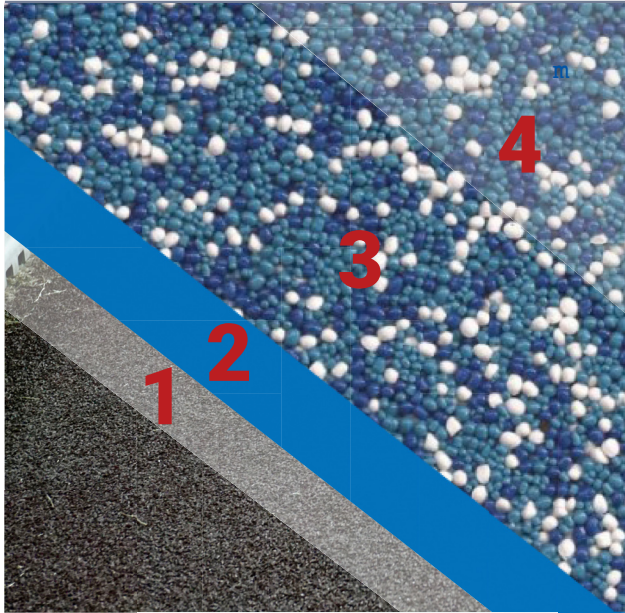

Splash Area

Before



After



Polysoft Primary Colors



Unlimited Mixed Color Combinations

