

TruSpeed MT I Loop Wire addition

The MT I model does not have the convenient pad hole marked at 'T' on the board.

The loop wire can still be fitted though, but has to pass through to the other side of the board and be soldered on the back. The hole to pass it through is already there, so no drilling needed.

The pictures show how this should be done.

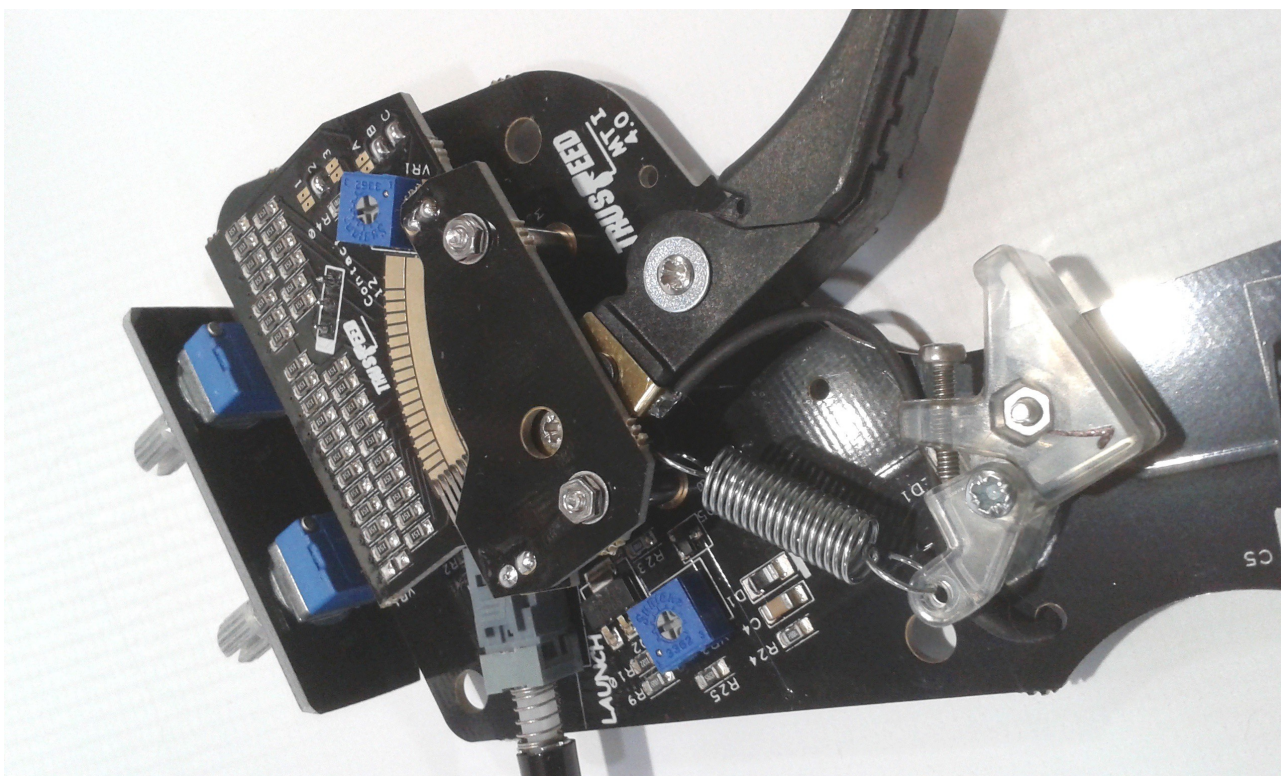


Illustration 1: Loop Wire viewed from the top


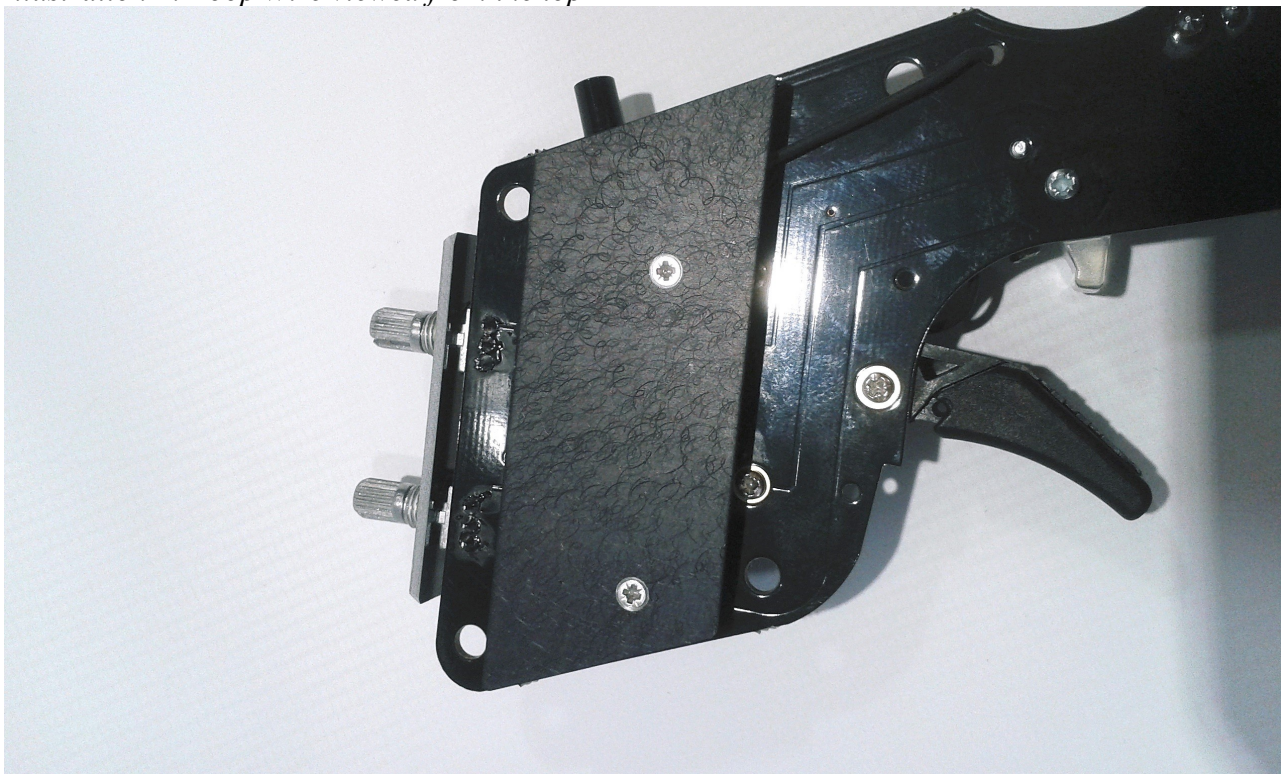


Illustration 2: Loop wire passing through to the rear side

If the pad shown for the wire is not available on your model, please solder the end to this terminal.

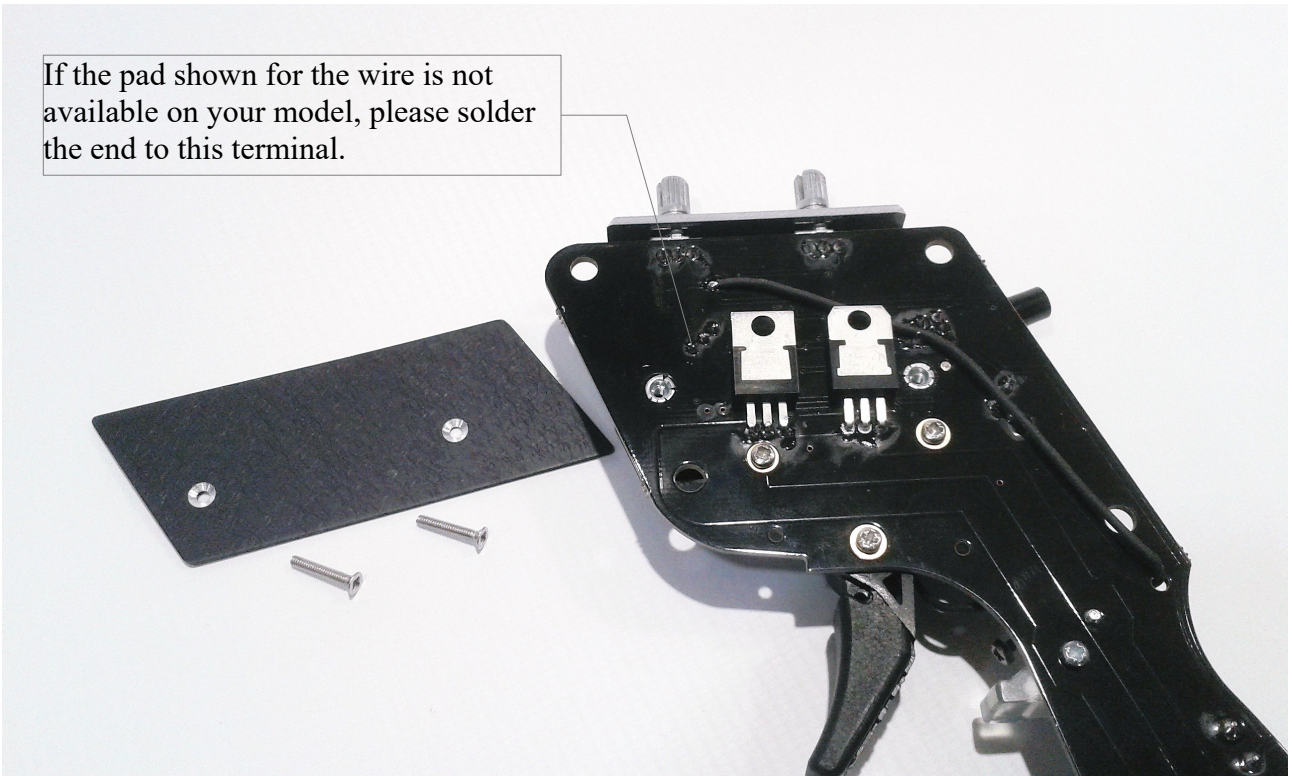

When you re-assemble make sure that the loop wire is not trapped between the PCB and the handle mounting boss. Just move the wire over to make sure it's free from the studs before you screw it together.