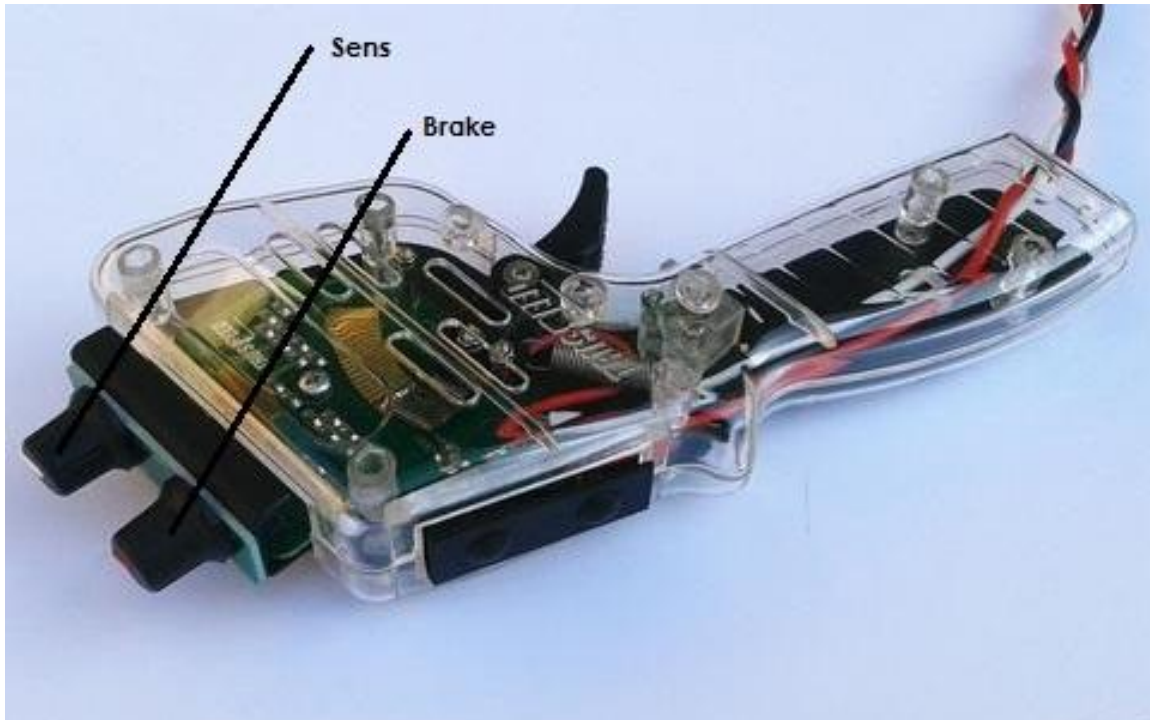

TruSpeed BP II 4.0 Transistor Controller – Quick Start Guide



Quick Start

Start by setting the 'Sens' (White) to Mid position (12 O'Clock). and the Brakes (Red) to around the 3 O'Clock Position.

Then Start Driving the car but focus on getting the car dialled into cornering smoothly, by slowly backing off the brakes so that you get a good smooth roll round corners.

When you have set the Braking into the corners, you will adjust the Sensitivity 'Sens' (White) by slowly turning it either up or down, until you are happy with the trigger response.

Typically you will find a setting between the 11 O'Clock position for softer motors to 1 O'Clock for higher rpm motors around 25-30k rpm.

It is very easy to adjust while you race so fine tuning for each lane is quick and effective from the first lap of the race.