



## TECHNICAL SERVICE BULLETIN



### BCS Power Units

#### Handlebar Upgrade

1. Remove the OPC lever, throttle, and stop switch from the old handlebars. Keep the fixings as they will be required to refit the items to the new handlebars.
2. Refit the OPC lever onto the first hole on the new handlebar using the previously removed fixings.
3. Fit the black stop switch to the underside of the bracket that was supplied with the new handlebar.
4. Bolt the bracket into the third hole using the throttle lever on the inside of the handlebar.
5. Refit the remaining parts as shown below.

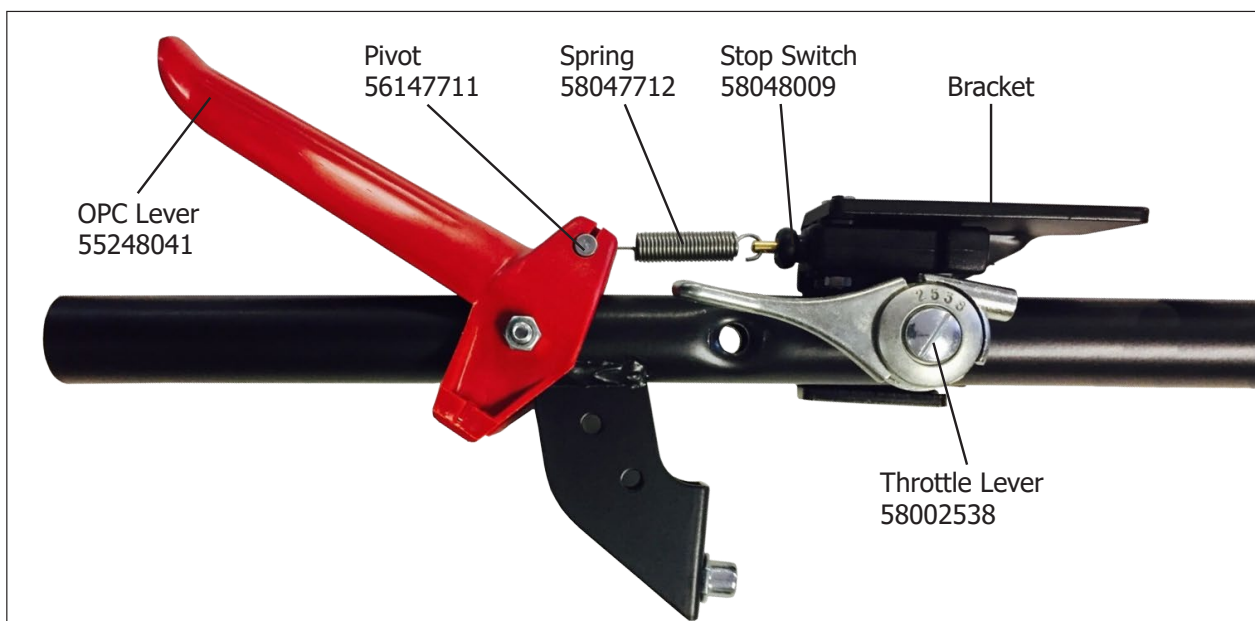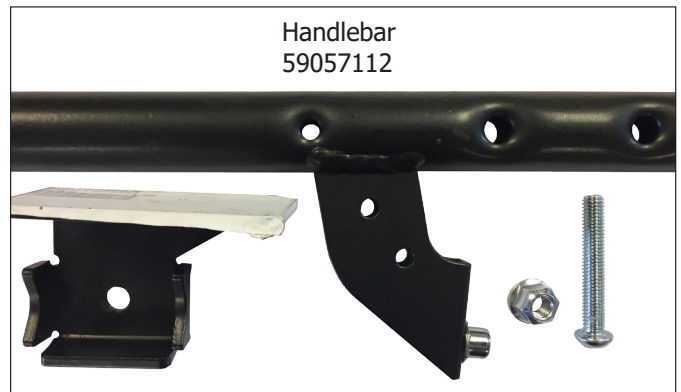

If you require further assistance please contact our Technical Department via email [technical@tracmaster.co.uk](mailto:technical@tracmaster.co.uk) or phone 01444 247689.