


Shockloc Strap Assembly

Step 1 – Cord Cutting

- Cut cord to required length using a **sharp** blade or scissors (N.B. the knot will use approximately 30mm of the cord length)
- **Heat** the cut end with a lighter until slightly soft & pliable, then **seal** the end by rolling/pushing against a flat surface to prevent fraying.
CAUTION the cord ends will be warm at this stage.

Step 2 – Knot tying

- A simple single not is used (see diagram a.)
- Ensure **5mm minimum – 10mm maximum** (5-8mm optimum) of cord protruding from knot (see diagram b.)
- The end of the cord is to be **tightened using pliers** ensuring that the knot is tight from both ends

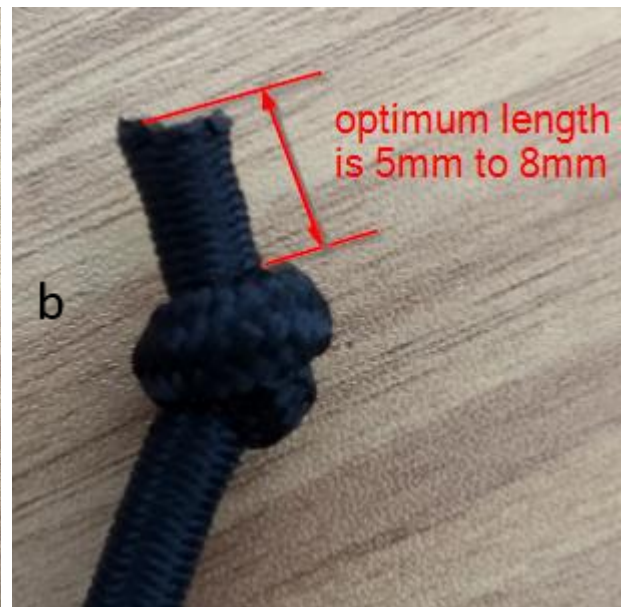

THE ORIGINAL SHOCKLOC



Step 3 - Strap Assembly

- Slide the un-knotted end of the cord through the **bottom** of the Shockloc & then out through the small back hole (see diagram c.)
- Align the knot (see diagram d.) & pull into the Shockloc ensuring that the knot is fitted snugly into the hole with no movement (see diagram e.)

