



S535 Voltmeter

Installation Instructions for the Idiot Light Dash

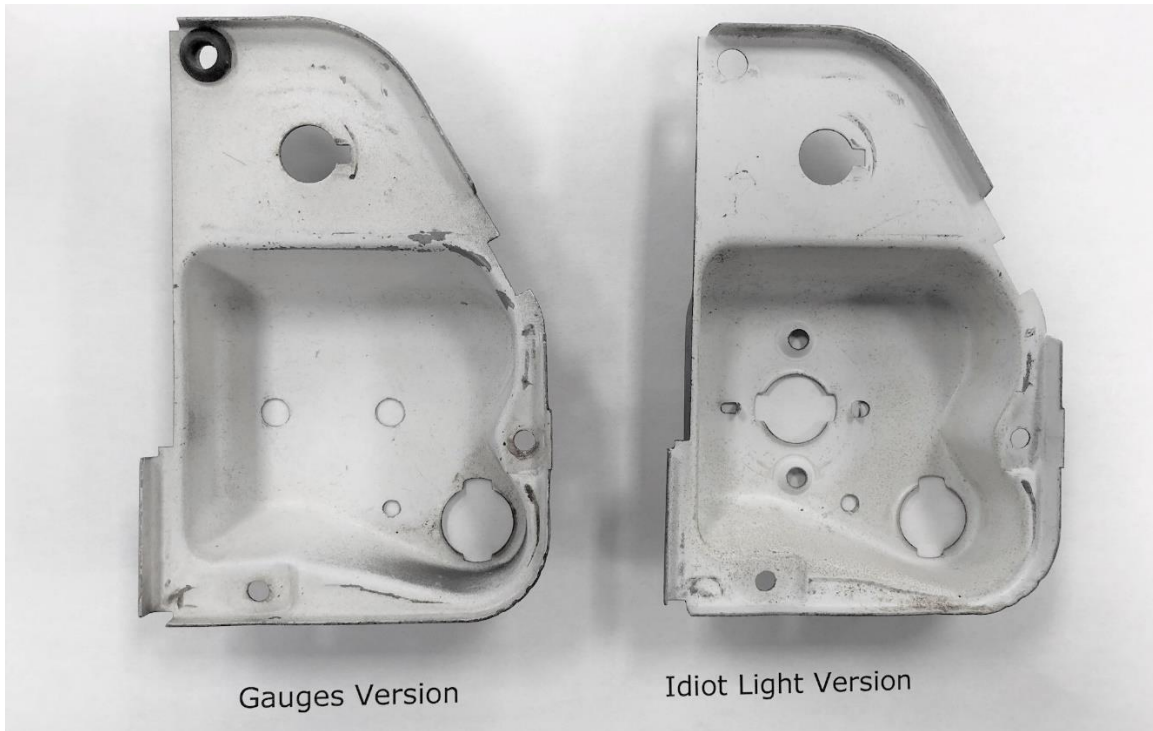

GM used the same metal pod for the Ammeter as they did for the Idiot Light. However, the back of the housing was punched differently. You can simply modify the back as described below.

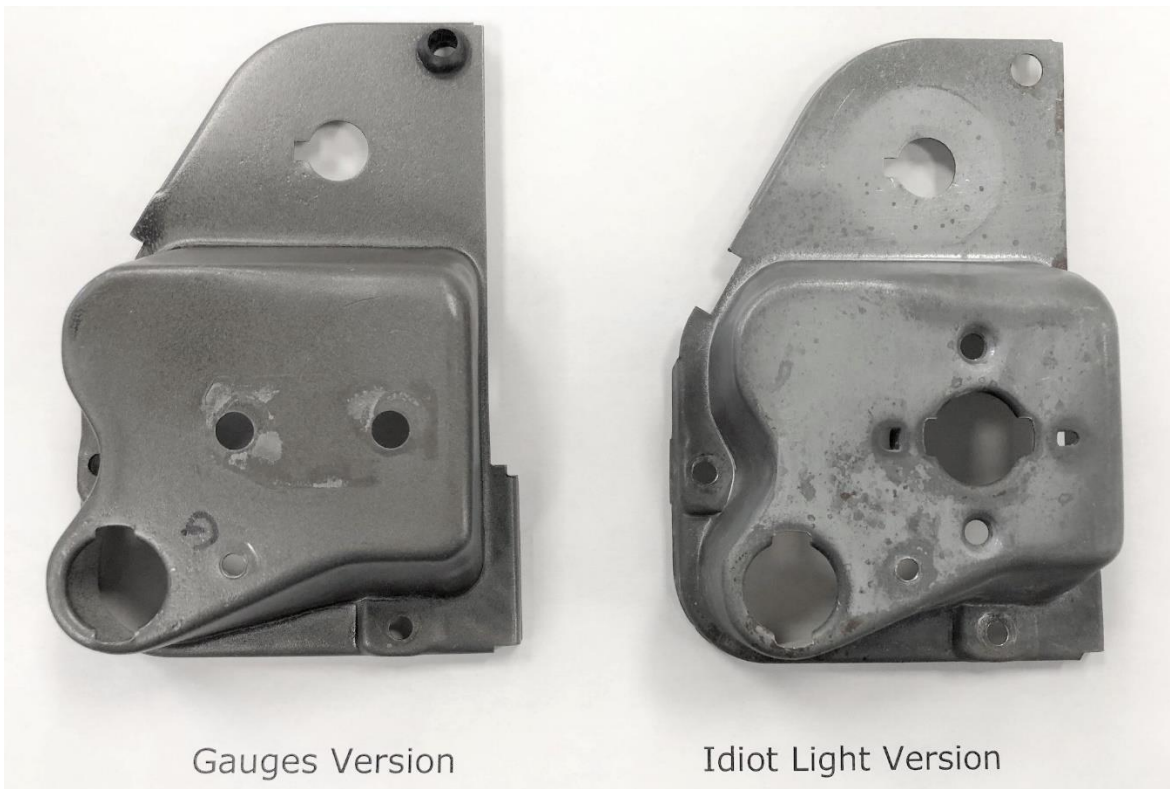

Modify the Existing housing to accept the Gauge

- 1) Flatten the back of the Idiot Light Version. The center has an opening for the light bulb, two vertical mounting screw holes and a couple locating tabs.
- 2) Do not Flatten the lightbulb hole in the bottom right hand corner.
- 3) You will need to create two new holes on the Horizontal as are used in the Gauges Version. The Holes are One Inch apart center to center.
- 4) Once the housing has been modified, follow the instructions provided.
- 5) This is a good time to consider swapping out the illumination bulbs in your dash for modern LED bulbs. The LED bulb will provide a cleaner white light and improve visibility substantially. Shiftworks sells these bulbs.



See the difference.