



Access Liner Installation Guide




Step 1.Loop the straps over each of your vehicles rear headrests, buckle and tighten to fit.

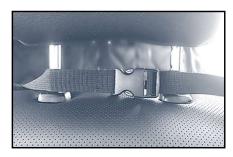

Step 2.
Smooth the top section against the back of your rear seats so it sits flush all the way to the base. This will ensure the non-slip mesh lining makes optimum contact with the back of your seats and cargo floor.

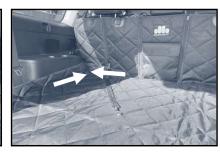

Step 3.
Tuck the corners in and straighten to centre the liner. The liner will extend up the sides of your cargo area to help contain fur, dirt and any other messes.

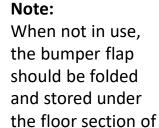

the liner.





To fit Latch Restraint Belt (sold separately)

Position the head-to-head zippers over the rear seat anchor point (look for the top tether logo with an anchor symbol), open the zips and slide the latch hook onto the anchor point (you will hear a distinct click when it locks into place).



