




Pawmanity Cargo Liner

Installation Guide


Step 1.

Loop the straps over each of your vehicles rear headrests, buckle and tighten to fit.

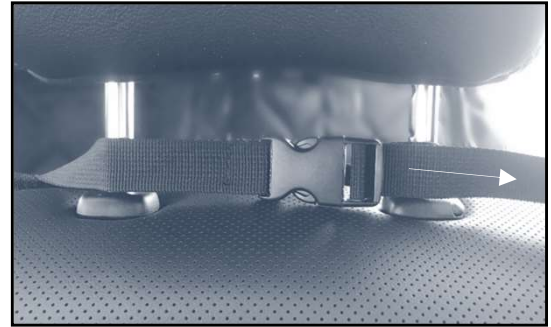

Step 2.

Smooth the top section against the back of your rear seats so it sits flush all the way to the base. This will ensure the non-slip mesh lining makes optimum contact with the floor of your cargo area.

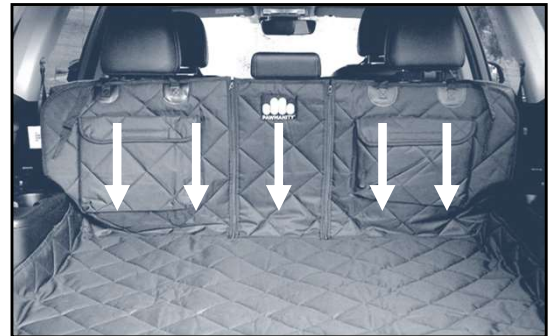

Step 3.

Tuck the corners in and straighten to centre the liner. The liner will extend up the sides of your cargo area to help contain fur, dirt and any other messes.



Note:

When not in use, the bumper flap should be folded and stored under the floor section of the Cargo liner.

