
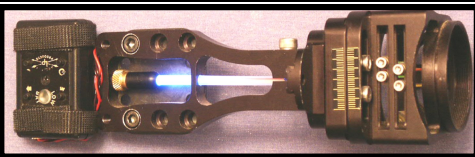


**LP Archery Products**  
**PRO-LIGHT DX2**  
 Digital Light Kit for Hunting Sights

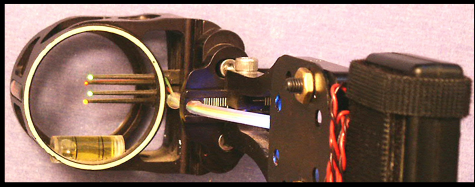

**This Kit Fits Most Multi-Pin Sights Made By:**  
**CBE, Fuze/Hoyt (Rear Light), G5, Sword**  
**Option Archery, Sure-LOC, Vital X**  
**+ Extreme, Viper & Others (w/Fiber Tubes)**

**Ultimate Sight Pin Illuminator**

PLDX Kits Also Available For Competition Scopes  
 Contact LPA or your local Dealer



African Wart Hog taken with Pro-Light DX. "What an awesome product," Bill Epeards, ESPN Staff Hunter.



"Took this 193 3/8 buck on last day of season from a ground blind with a Pro-Light DX." Thanks. Vic Zeni

**Package Contents**

Digital Power Pack w/ 2032 Batteries  
 Velcro/Hardware Mounting Kit  
 Operating & Mounting Instructions

- Sight Pin Light, 1/4-28, Blue Output
- Sight Pin Light, 1/4-28, UV-Purple Output
- Threaded Tip, For .13" Outer Dia. Tubing
- Threaded Tip, For .16" Outer Dia. Tubing
- Power Pack Mounting Bracket Plate

Visit [www.LPArcheryProducts.com](http://www.LPArcheryProducts.com) & View  
 "Cross Reference Chart" for more sight info.

All PLK Accessories Available Separately

**LIMITED 1 YEAR WARRANTY**  
**W/ VALID PROOF OF PURCHASE**

**INSTALLATION INSTRUCTIONS**


**Not Following Instructions May Cause  
 Product Failure &/or Void Warranty**

**PLEASE NOTE: Power/Control Pack is NOT 100% Water Proof.**  
**Under heavy rain conditions, cover Power/Control Pack w/included**  
**EWC (Extreme Weather Cover) or equivalent protection.**


(Abbreviations: S.P.L. = Sight Pin Light, P/C Pack = Power/Control Pack)

- 1a. Un-screw Thumb-Screw until top separates from bottom of power control pack.
- 1b. Insert 1 2032 battery centered under each battery holder w/ positive side facing upward.
- 1c. Replace and align top onto base and re-tighten Thumb-Screw to base.
2. Determine which thread pitch your sight has. Install 3/8-32 SPL (& if purchased/needed 3/8-24, 1/4-28 or 7/16-20 adaptor) into hunting sight tapped hole. Tighten firmly; Do-Not over-tighten.
3. **Bend wires to one side of Sight Pin Light (DO NOT Make a Loop with Wires), press on black or gray rubber cap for maximum protection, or secure wires to S.P.L. with zip tie at un-knurled area. See pictures below, and/or on insert back. Allow wires to hang.**
- 4a. Mount Power Pack Mounting Bracket between sight and riser in preferred orientation, (or) find area on sight bar & alcohol wipe each side. Adhere & trim Velcro pads to area.
- 4b. Align Velcro pad on P/C pack to Velcro pad on mtg. bracket plate or sight bar & press.
- 4c. Wrap Velcro straps around P/C Pack and mounting bracket plate, or sight bar. See below.
5. When using PLDX/DX2 for hunting, plug S.P.L. wire plug into power control pack bottom port. (Bottom Port of P/C Pack has Low-Voltage-Mode Option, allowing for dimmer pin brightness settings. See Operating Instructions on how to set Bottom Port to Low-Voltage-Mode.)
6. Run S.P.L. wire along sight mounting bar and secure with Zip ties were needed. Do-Not leave wires hanging loose. See pictures below.



**EXTREMELY IMPORTANT: SEE STEP 3 ABOVE**  
**\*\*NOT DOING STEP 3 WILL CAUSE UN-WARRANTIED LED FAILURE\*\***

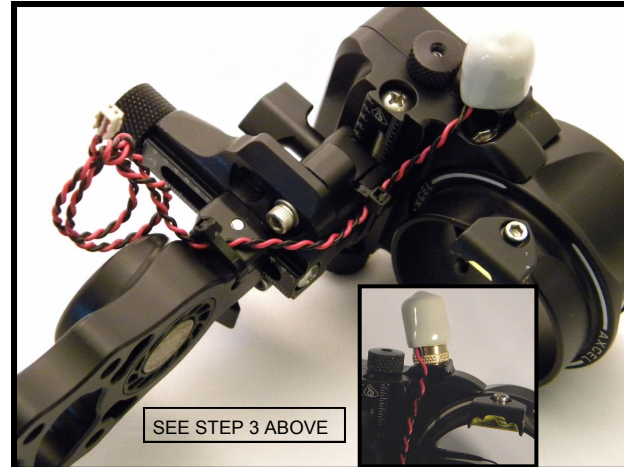

SEE STEP 3 ABOVE

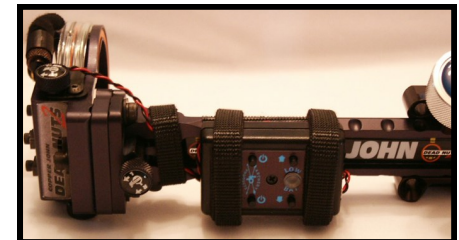


## SPOT-HOGG (w/wrap/2x1/4-28)

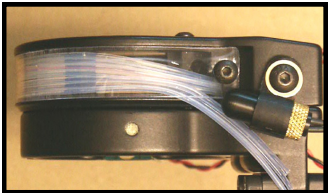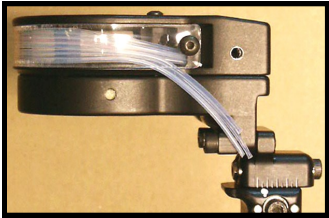



## COPPER JOHN (w/2x1/4-28)






**Copper John: Dead Nuts Sight**  
Use 3/8-32 or 1/4-28 LED Assembly w/ large washers & nut, Install as shown.

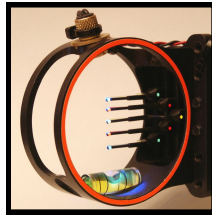

## HHA: Adjustable (w/ 10-32)

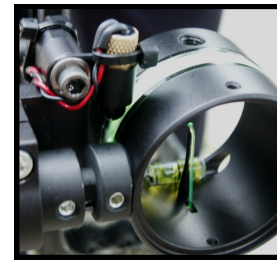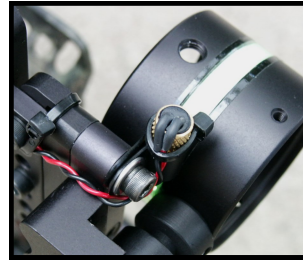

## TROPHY RIDGE (w/8-32, 10-32 or 10-32L)

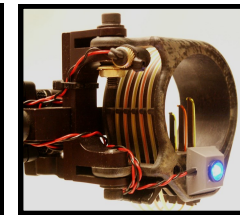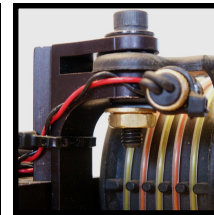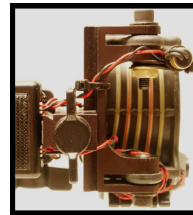


1. Remove 1" long 10-32 bolt, washer & nut from Hardware Kit.
2. Remove current top or bottom bolt from Trophy Ridge Sight and place the washer onto the 1" long bolt.
3. Screw the 1" bolt into the sight and tighten it down.
4. Install the LED cable clamp, washer & nut onto the bolt. **DO NOT TIGHTEN NUT COMPLETELY.**
5. Slip LED Assembly with black end cap through cable clamp, aligning LED with 1-3 of the fibers, and tighten down nut.
6. Check alignment by plugging into the power/control pack.
7. Adjust position if needed & secure LED wires to sight with Zip ties.


## TOXONICS (w/ 1/4-28)







## VIPER (w/ USO SPL)

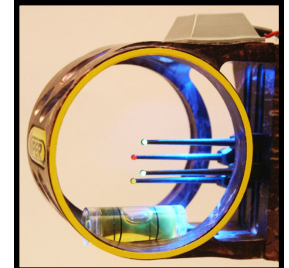

## Stealth Light



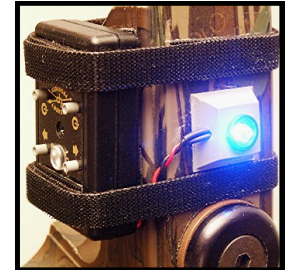


## P/C Pack Mounting Pictures: Hunting Sights

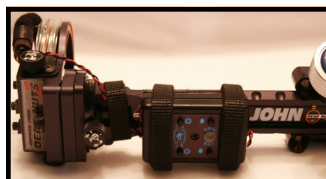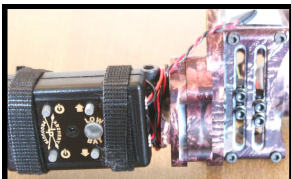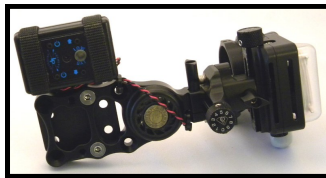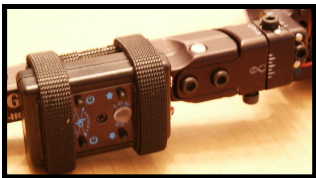

## Axcel Armortech Sight: with 3/8-32 SPL

**EXTREMELY IMPORTANT: SEE STEP 3 ON PAGE 1**

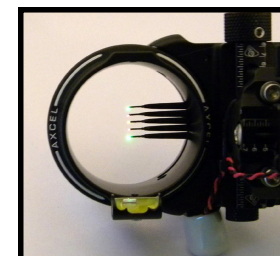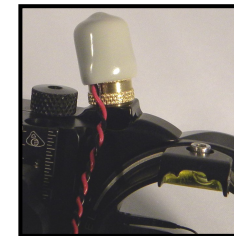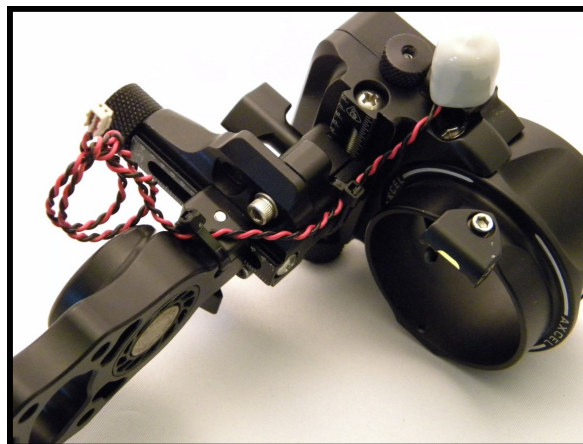

1. Alcohol clean a spot above limb bolt (see sheet front); allow to dry. If necessary the front of a Trophy Ridge sight may be used. See picture above right.
2. Remove paper backing from Stealth Light.
3. Press Stealth Light firmly on alcohol cleaned spot for ~20 seconds.
4. Run wires from Stealth Light to Power/Control Pack and plug in.
5. Secure wires in appropriate locations with Zip ties &/or Velcro strap.