




SUZUKI 2011 GSX1250FA & 2008-2010 GSX650F DIY WINDSCREEN INSTALL

Installation Instructions for 2011 Suzuki GSX1250FA & 2008-2010 GSX650F

Thank you for purchasing a Zero Gravity windscreen, which has been designed and manufactured to give you years of safe & fun riding. These instructions will give you an in-depth look at the installation process. To receive further assistance or parts please e-mail techinfo@zerogravity-racing.com.

PLEASE READ BEFORE MOUNTING YOUR WINDSCREEN

Helpful hints: Use metric tools, clean hands, put the bike on a stand. To avoid damage do not pry on the screen excessively.

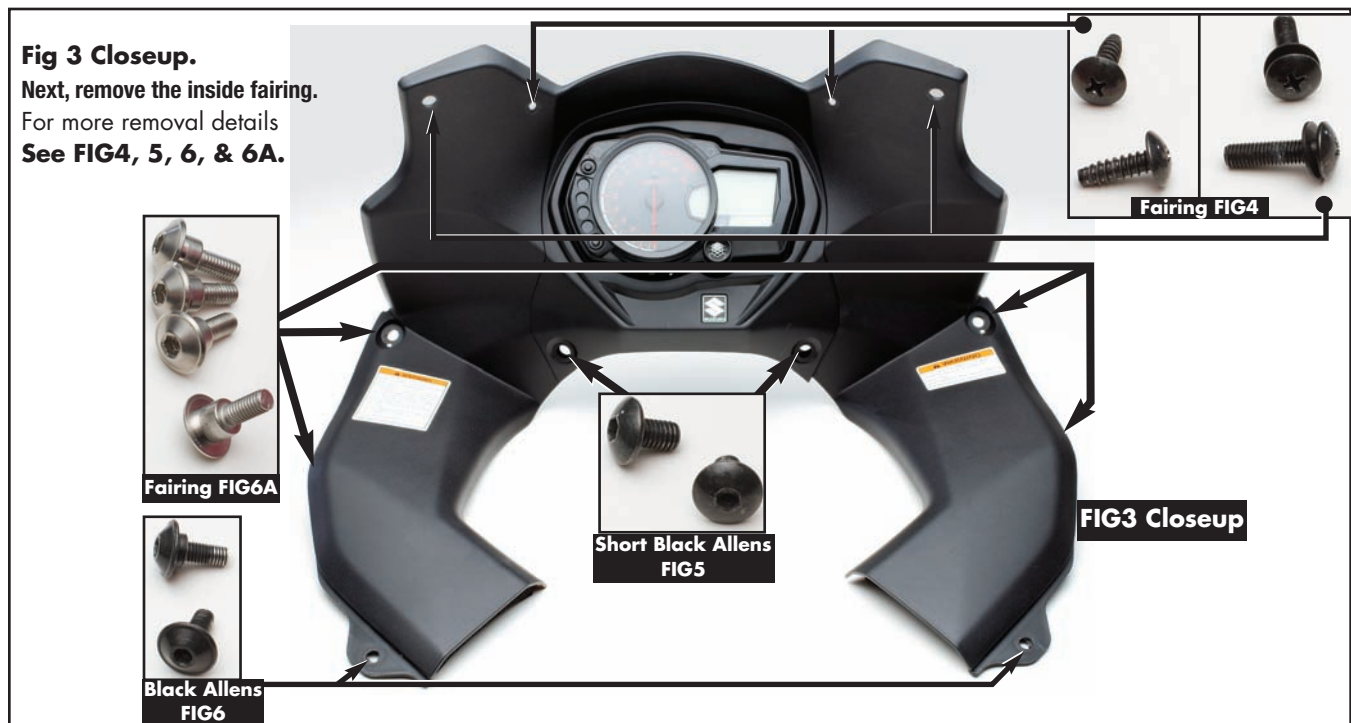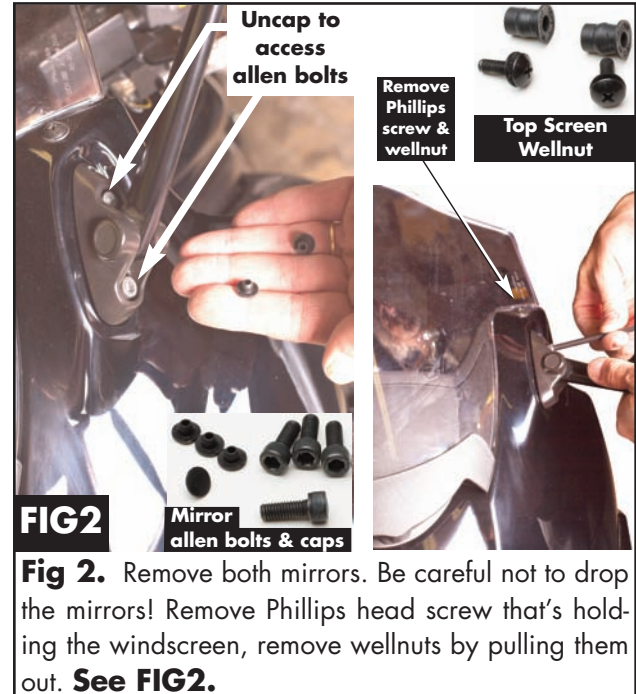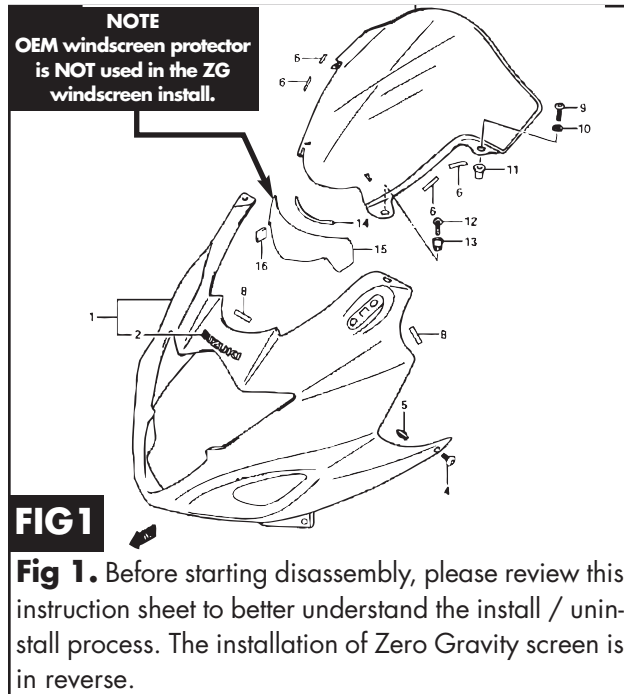

SUZUKI 2011 GSX1250FA & 2008-2010 GSX650F DIY WINDSCREEN INSTALL



FIG4
Note the two different screw thread pitches.


Fig 4.
Looking from the upper inside fairing. Remove total of 4 screws, and take note of the different thread pitches. **(For Both Sides)**



FIG5

Remove 2 short allen fastener

Fig 5. On the same plastic fairing, remove 2 black short allen fastener located on the bottom of the instrument cluster. **(For Both Sides) See FIG5.**
Note: The finish allen screws are in Black.

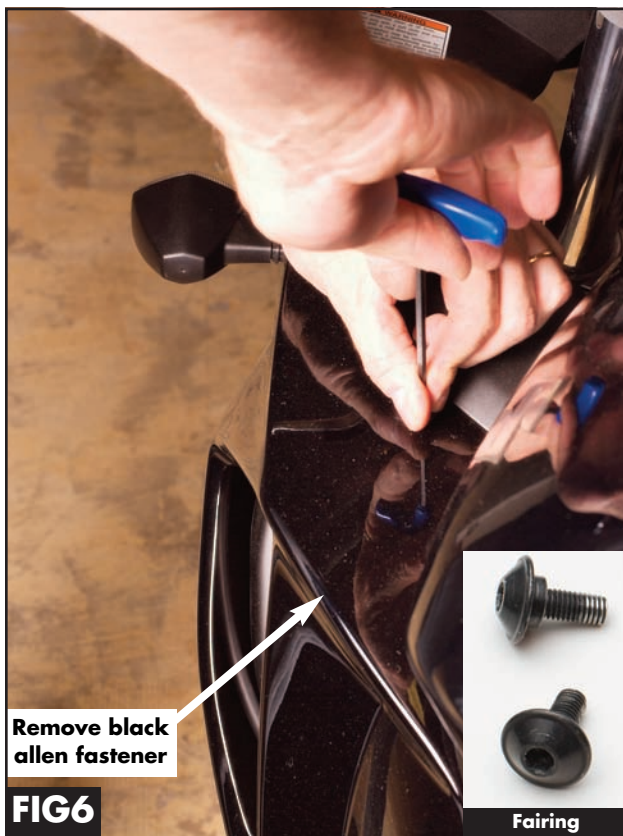

Remove black allen fastener

FIG6

Fig 6. Remove 2 allen fastener closest to the tank. **(For Both Sides) See FIG6.**
Note: The finish allen screws are in black.



Remove allen fastener

FIG6A

Fig 6A. On the same plastic fairing, there are 4 silver allen fastener located on the top and the sides. **(For Both Sides)**
Note: The finish allen screws are in Silver.

SUZUKI 2011 GSX1250FA & 2008-2010 GSX650F DIY WINDSCREEN INSTALL



FIG7


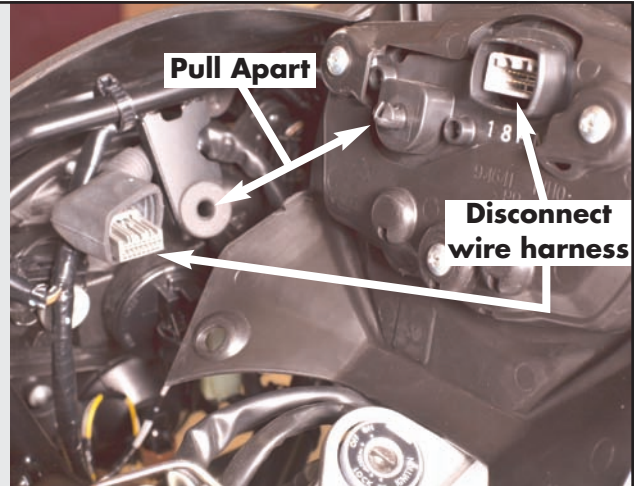


Fig 7. Remove instrument panel by pulling it apart from the fairing frame. The wire harness needs to be disconnected before fully removing. **USE CAUTION TO NOT OVER PULL!!!**

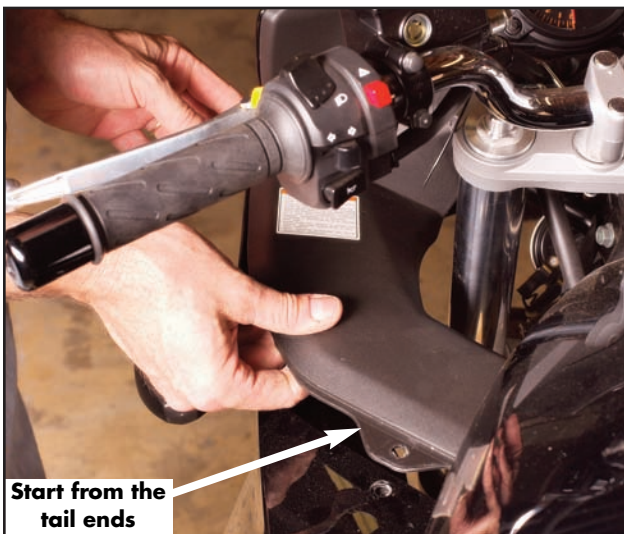

Start from the tail ends



FIG8

Work your way to the center.

Fig 8. Now you are ready to separate the inner fairing from the bike. Start from the two tail ends and start dislodging and working your way to the inside.



Bottom Wellnuts

FIG 9

Remove allen fastener

Fig 9. Remove 2 allen fastener at the bottom windscreen, viewing from the inside fairing. **(For Both Sides) See FIG9.**





Wellnut

FIG 9A

Remove wellnut

Fig 9A. After removing both allen fastener, remove the wellnut for easier screen removal. **(For Both Sides) See FIG9A.**

SUZUKI 2011 GSX1250FA & 2008-2010 GSX650F DIY WINDSCREEN INSTALL

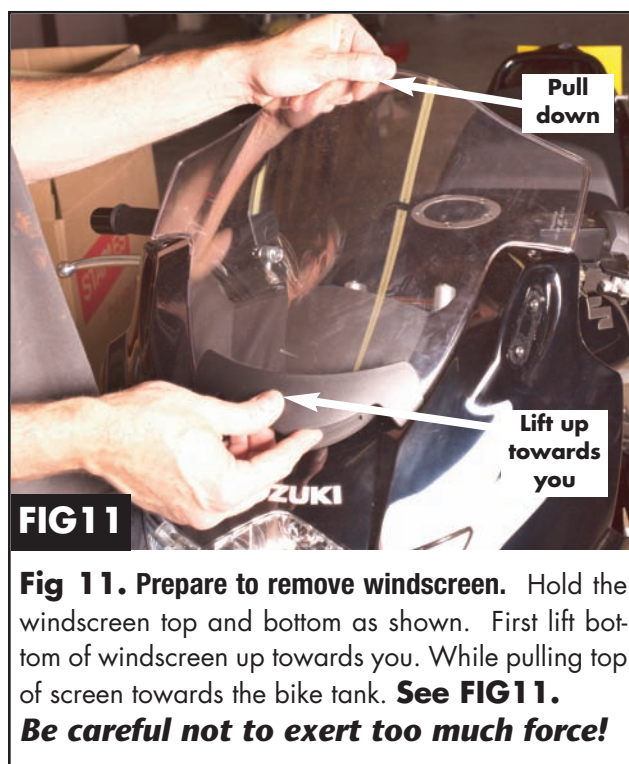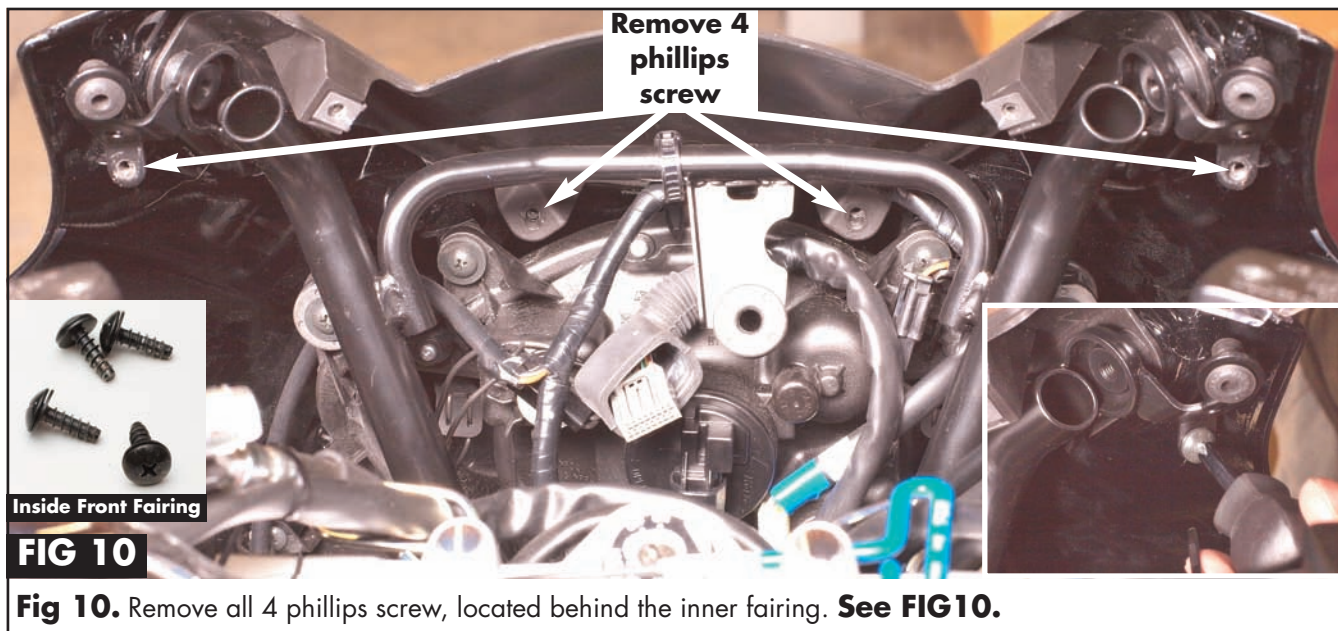

SPORT TOURING



Please see www.zerogravity-racing.com for further information concerning this product.