



Installation Instructions for Double Bubble® Windscreen 2010-2013 Kawasaki Z1000

Thank you for purchasing one of Zero Gravity's windscreens which has been designed and manufactured to give years of safe and fun riding. This instruction manual gives you an in-depth look at the installation process. To receive further assistance or parts please e-mail techinfo@zerogravity-racing.com.

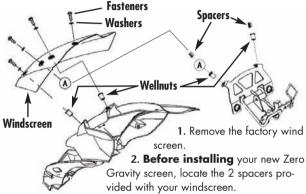

- 3. Place your Zero Gravity windscreen on the bike and align the windscreen holes with the windscreen bracket holes.
- 4. Insert two of the four original windscreen fastener screws and washers into the two bottom holes and screw them into the threaded receptacles a few turns into the wellnut.
- 5. Lift the rear edge of the screen so the screen tilts up slightly.
- 6. Place the spacers between the windscreen and the windscreen bracket so they align with the upper holes of the windscreen and the Well Nut receptacle holes of the bracket.
- 7. Insert the two remaining fasteners and washers into the upper windscreen holes so that they pass through the windscreen and spacers and then into the threaded receptacle.

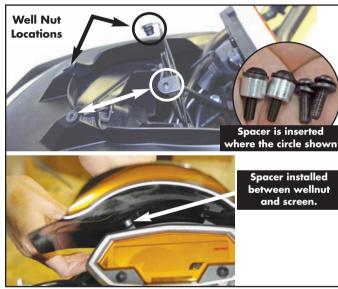

Note: If the two upper fasteners are not grabbing the wellnut threads, you will have to reach behind the two upper wellnuts and push them against the fasteners to start the screwing process.

8. Tighten all 4 windscreen fastener screws so that the windscreen is firmly in place. **DO NOT OVER-TIGHTEN!**

