

# BMW S1000RR DIY WINDSCREEN INSTALL

## Installation Instructions for BMW S1000RR

Thank you for purchasing one of Zero Gravity's windscreens which has been designed and manufactured to give years of safe and fun riding. This instruction manual gives you an in-depth look at the installation process. To receive further assistance or parts please e-mail [techinfo@zerogravity-racing.com](mailto:techinfo@zerogravity-racing.com).

**PLEASE READ BEFORE MOUNTING YOUR WINDSCREEN**


**Helpful hints:** Use metric tools, clean hands, put the bike on a stand. Do not pry on the screen excessively, as it can break without much warning.



**Fig 1.** Remove both mirrors. The fasteners are behind the fairing. Be careful not to drop the mirrors!



**Fig 2.** Remove all 8 fastener screws.

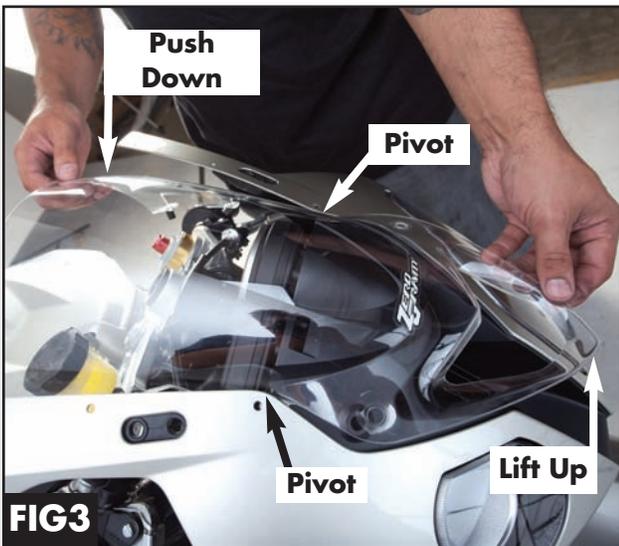

**Fig 3. HERE IS THE TRICKY PART!** You have to carefully recline the windscreen down from the fairing. It will be pivoting in two places one on each side. (See FIG3A).



**Fig 3A.** This photo shows the pivoting points on either side of the screen. **Be careful not to over pivot!**

**BMW S1000RR DIY WINDSCREEN INSTALL**



**FIG4**

**Fig 4.** Now you are ready to remove the screen. Slide the windscreen back to remove.



**FIG5**

**Fig 5.** Before installing Zero Gravity Windscreen. Install Rubber wellnuts (Remove them from your stock screen).



**FIG6**

**Fig 6.** Install screen from the back side. Reclined in position, the front of the windscreen should be on the outer side of the fairing with the wellnut tab tucked inside fairing.



**FIG7**

**Fig 7.** Starting from the top of the windscreen and working down, hand tighten all fasteners then reinstall mirrors.



**FIG8**

**Fig 8.** Windscreen and Mirrors installed.

Please see [www.zerogravity-racing.com](http://www.zerogravity-racing.com) for further information concerning this product.