



7-Way Trailer Cord P/N: RV7WROJ-096


The Trailer End diagram instructs you to wire vehicles for towing. Some manufacturers use different wire setups than the one listed, keep that in mind.

Recommendations:

Use a test light to ascertain charges before wiring a vehicle.
Check with the manufacturer or dealer for vehicle specific information before you start wiring.



Wire Color	Gauge	Molded Trailer/Sealed Car Connector Terminal
White	10 AWG	Common Ground
Blue	12 AWG	Electric Brake
Green	14 AWG	Tail & License
Black	10 AWG	Battery Charge
Red	14 AWG	Left Stop & Turn
Brown	14 AWG	Right Stop & Turn
Yellow	14 AWG	Center Auxiliary

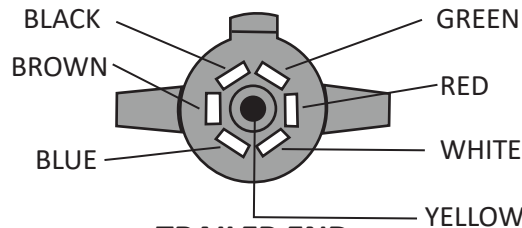

TRAILER END

As viewed from the front face of the 7-way connector with a molded on cable.

Follow the instructions for the AC WORKS® product above. Improper wiring of the towed vehicle may result in electrical malfunction or other damage, which could result in property damage, personal injury, or even death.

Questions/Concerns?

www.ACWORKS.com | info@acconnectors.com
414.323.3240 Text | 414.434.2220 Phone



Cordon de remorque à 7 voies P/N: RV7WROJ-096


Le schéma de l'extrémité de la remorque vous indique de câbler les véhicules pour le remorquage. Certains fabricants utilisent des configurations de câbles différentes de celles répertoriées, gardez cela à l'esprit.

Recommandations :

Utilisez une lampe témoin pour vérifier les charges avant de câbler un véhicule. Consultez le fabricant ou le concessionnaire pour obtenir des informations spécifiques au véhicule avant de commencer le câblage.



Couleur du fil	Gauge	Borne de raccordement de remorque moulée/de wagon scellé
Blanc	10 AWG	Terrain d'entente
Bleu	12 AWG	Frein électrique
Vert	14 AWG	Queue & Licence
Noir	10 AWG	Charge de la batterie
Rouge	14 AWG	Arrêt à gauche et virage
Brun	14 AWG	Arrêt à droite et virage
Jaune	14 AWG	Auxiliaire central

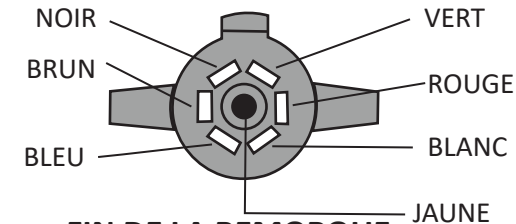

FIN DE LA REMORQUE

Vu de la face avant du connecteur à 7 voies avec un câble moulé sur câble.

Suivez les instructions pour le produit AC WORKS® ci-dessus. Un câblage incorrect du véhicule remorqué peut entraîner un dysfonctionnement électrique ou d'autres dommages pouvant entraîner des dommages matériels, des blessures corporelles ou même la mort.

Des questions ou des préoccupations?

www.ACWORKS.ca | info@acconnectors.com
414.323.3240 Text | 414.434.2220 Phone