

Ford Fiesta Mk VI ST - Zetec 'S' Stainless Steel Sports Grille Mesh Lower

Kit Contents: -

1. off Mesh Grille


Tools Required

- Flat Screwdriver



Grille Fitting Instructions

1. Hook the ends of the new grille into position and carefully feed the other brackets through the existing mesh.
2. Check the grille is central and that the small gap on either side is equal.
3. Push the grille fully back into position.
4. Check that all of the spring brackets have located and held. (If the brackets have not engaged fully lever those down using a small flat screwdriver through the front of the mesh while putting pressure on the front of the grille).
5. The end hooks need to be pushed fully in against the side so that they are fully engaged, as with the lower and upper brackets.
6. The grille is complete.

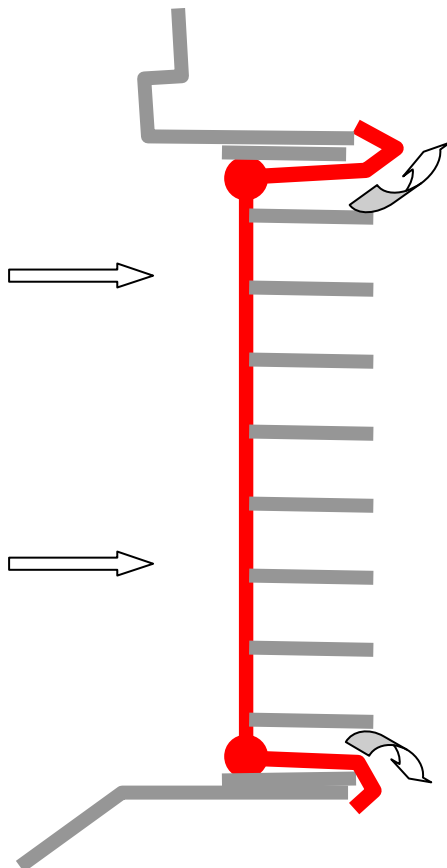

THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.