

Part No. ZFR45413

# <u>Ford Fiesta Zetec S</u> <u>Stainless Steel Sports Grille Mesh Upper</u>

# Kit Contents: -

1. off Upper Mesh Grille 3. off No.6 x <sup>3</sup>/<sub>4</sub>" Screws

# **Tools Required**

P2 Screwdriver Hacksaw (with Option 2 Only)

## YouTube Tutorial


https://www.youtube.com/watch?v=jP9RnijQR6E





# Grille Fitting Instructions (Option 1 Without Cutting Out)

- 1. Fit masking tape around aperture to protect paint.
- 2. Offer the grille to aperture and gently push the grille into position making sure all the brackets clip behind the aperture (fig 1).
- 3. Check that the clips have engaged if not, put pressure on the front of the grille, lever the brackets behind the existing plastic grille with a flat screw driver until they lock into position (Fig 2 & 3).
- 4. Screw the pins through the U brackets into existing plastic (Do not over tighten) (Fig 4).
- 5. Remove the tape and the grilles are now complete.

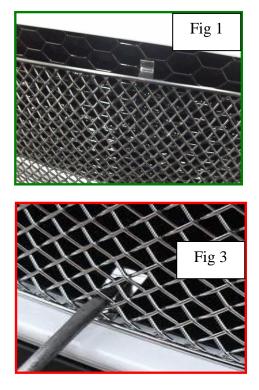






zun <del>s</del>port

#### THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.




SHEET 2 of 1 Issue 1 July 2015

# Grille Fitting Instructions (Option 2 With Cutting Out Solid Plastic)

- 1. Fit masking tape around aperture to protect paint.
- 2. Using a hacksaw or cutters carefully cut out the existing plastic as shown in fig 1, & 2. (You can cut out most of the aperture to allow more air intake but must leave the plastic in place where marked Red as shown in fig 3)
- 3. Offer the grille to aperture and gently push the grille into position making sure all the brackets clip behind the aperture (fig 4).
- 4. Check that the clips have engaged if not, put pressure on the front of the grille, lever the brackets behind the existing plastic grille with a flat screw driver until they lock into position (Fig 5).
- 5. Screw the pins through the U brackets into existing plastic (Do not over tighten) (Fig 6).
- 6. The grille is now complete.

zun/<del>s</del>port

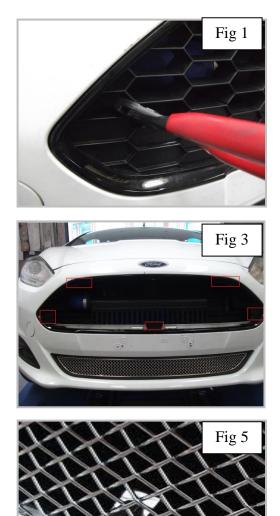





### THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.